


TOY FORGE

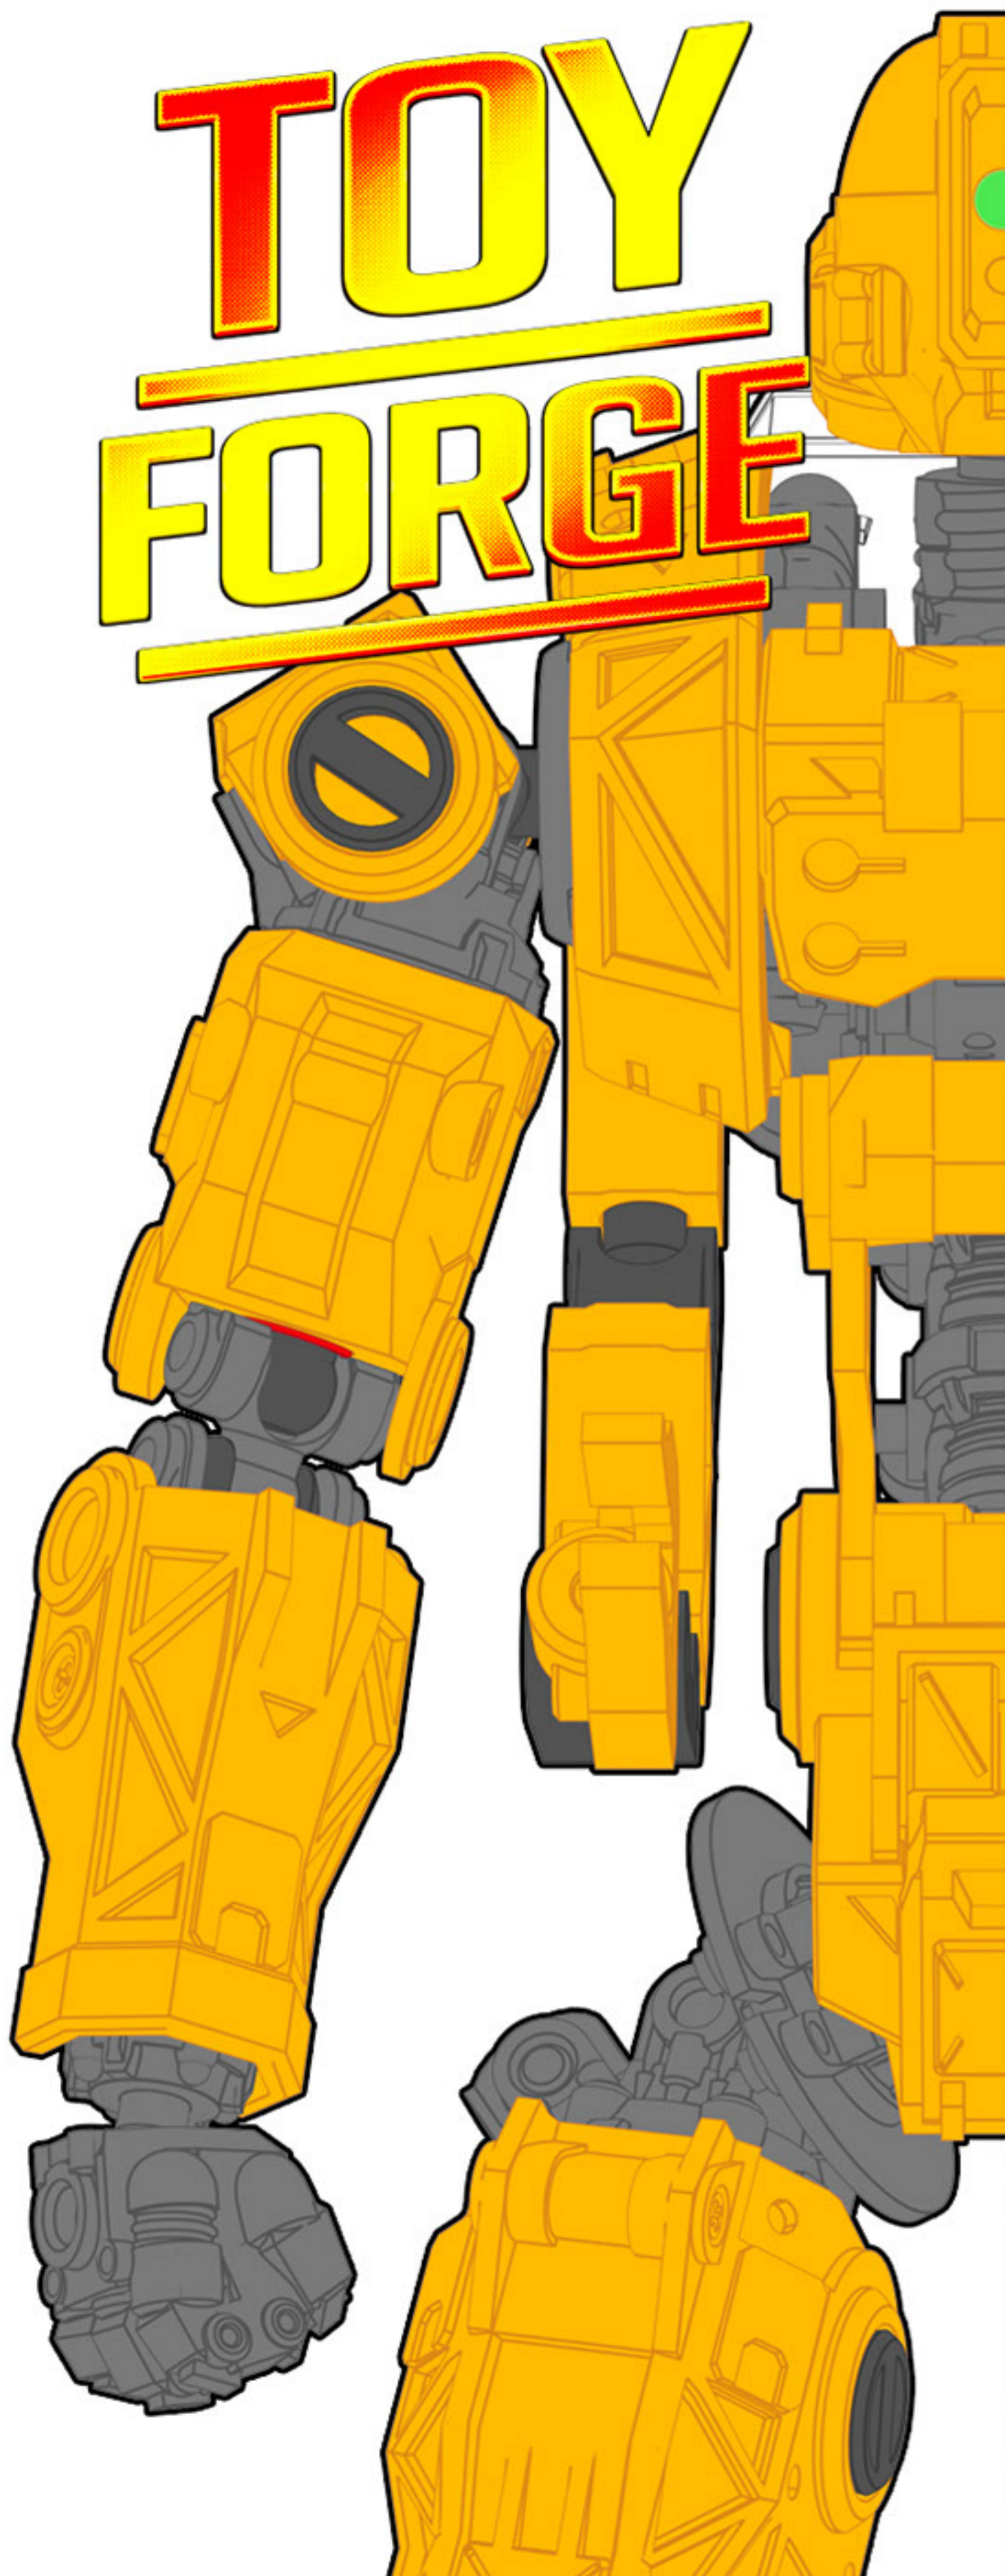


ENDO | CONSTRUCTION DRONE ARMOR SET

3D PRINTED ACTION FIGURE ACCESSORY



BUILD INSTRUCTIONS



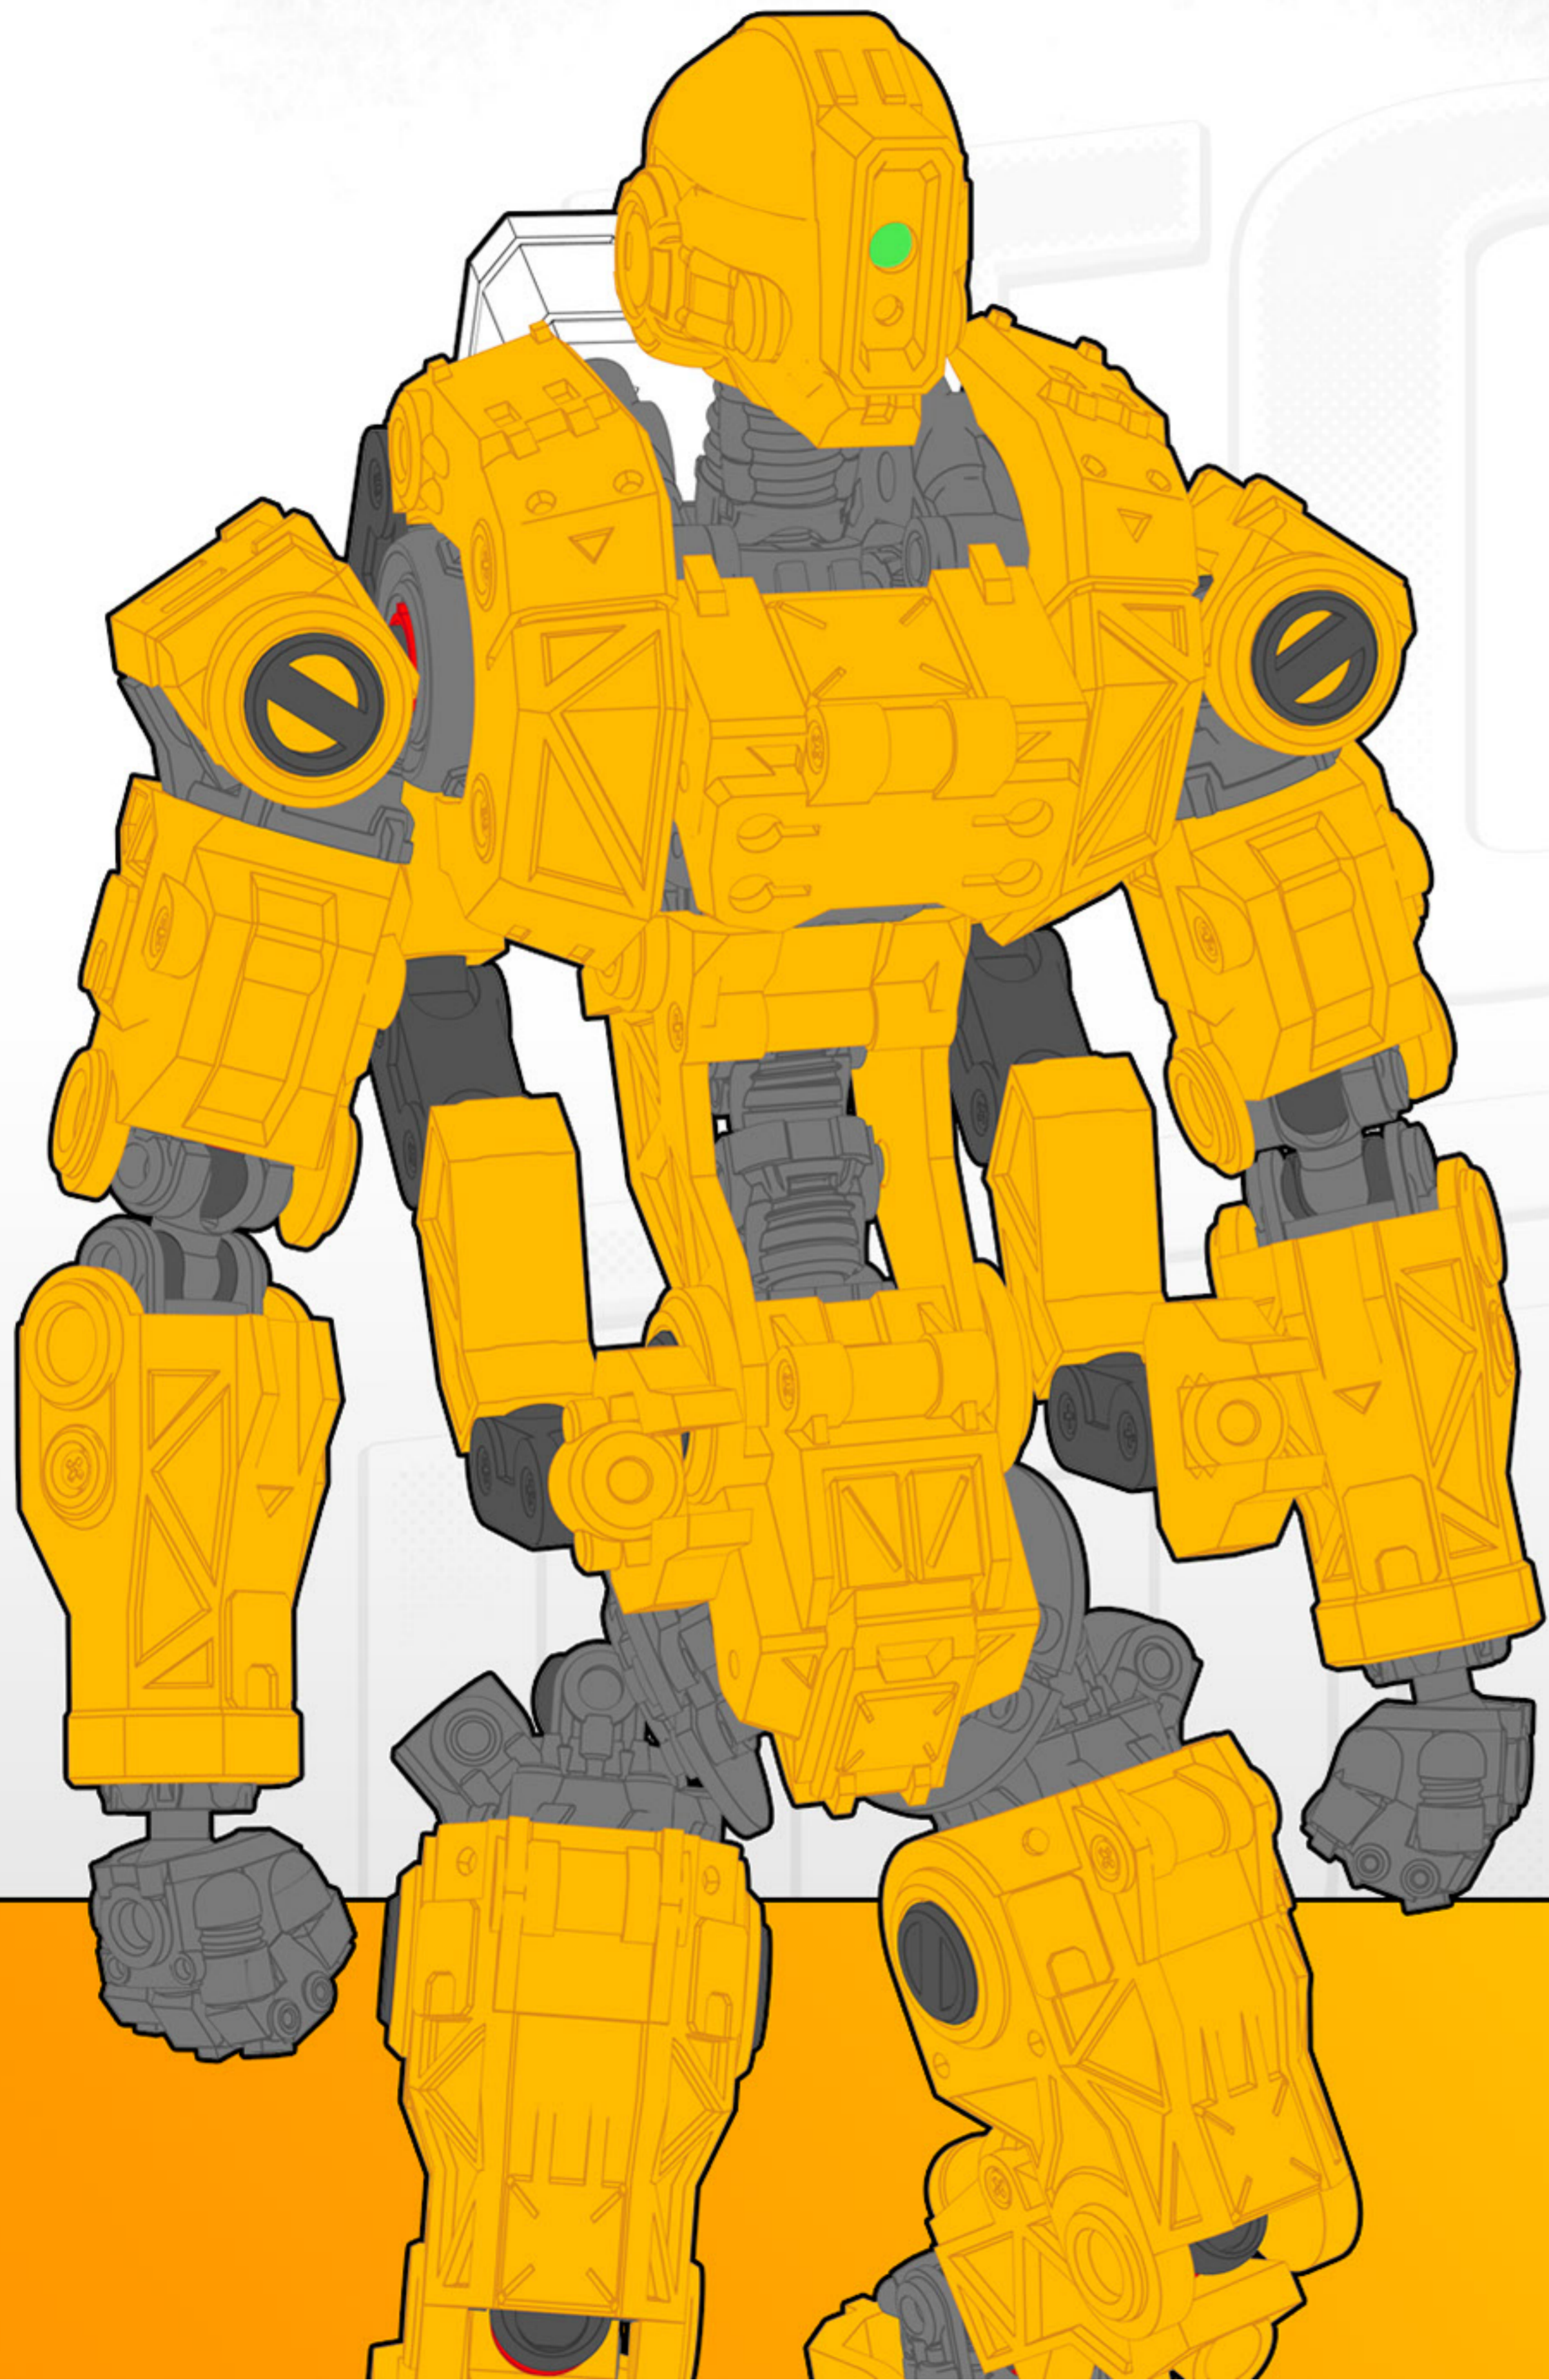


INDEX

JOINTS	_____	Pg 02
HEAD	_____	Pg 03
LEGS	_____	Pg 04
ARMS	_____	Pg 08
TORSO	_____	Pg 11
FINAL ASSEMBLY	_____	Pg 16
EXTRAS	_____	Pg 17


JOINT CHECKLIST

LARGE JOINT MALE X 4
LARGE JOINT FEMALE X 4

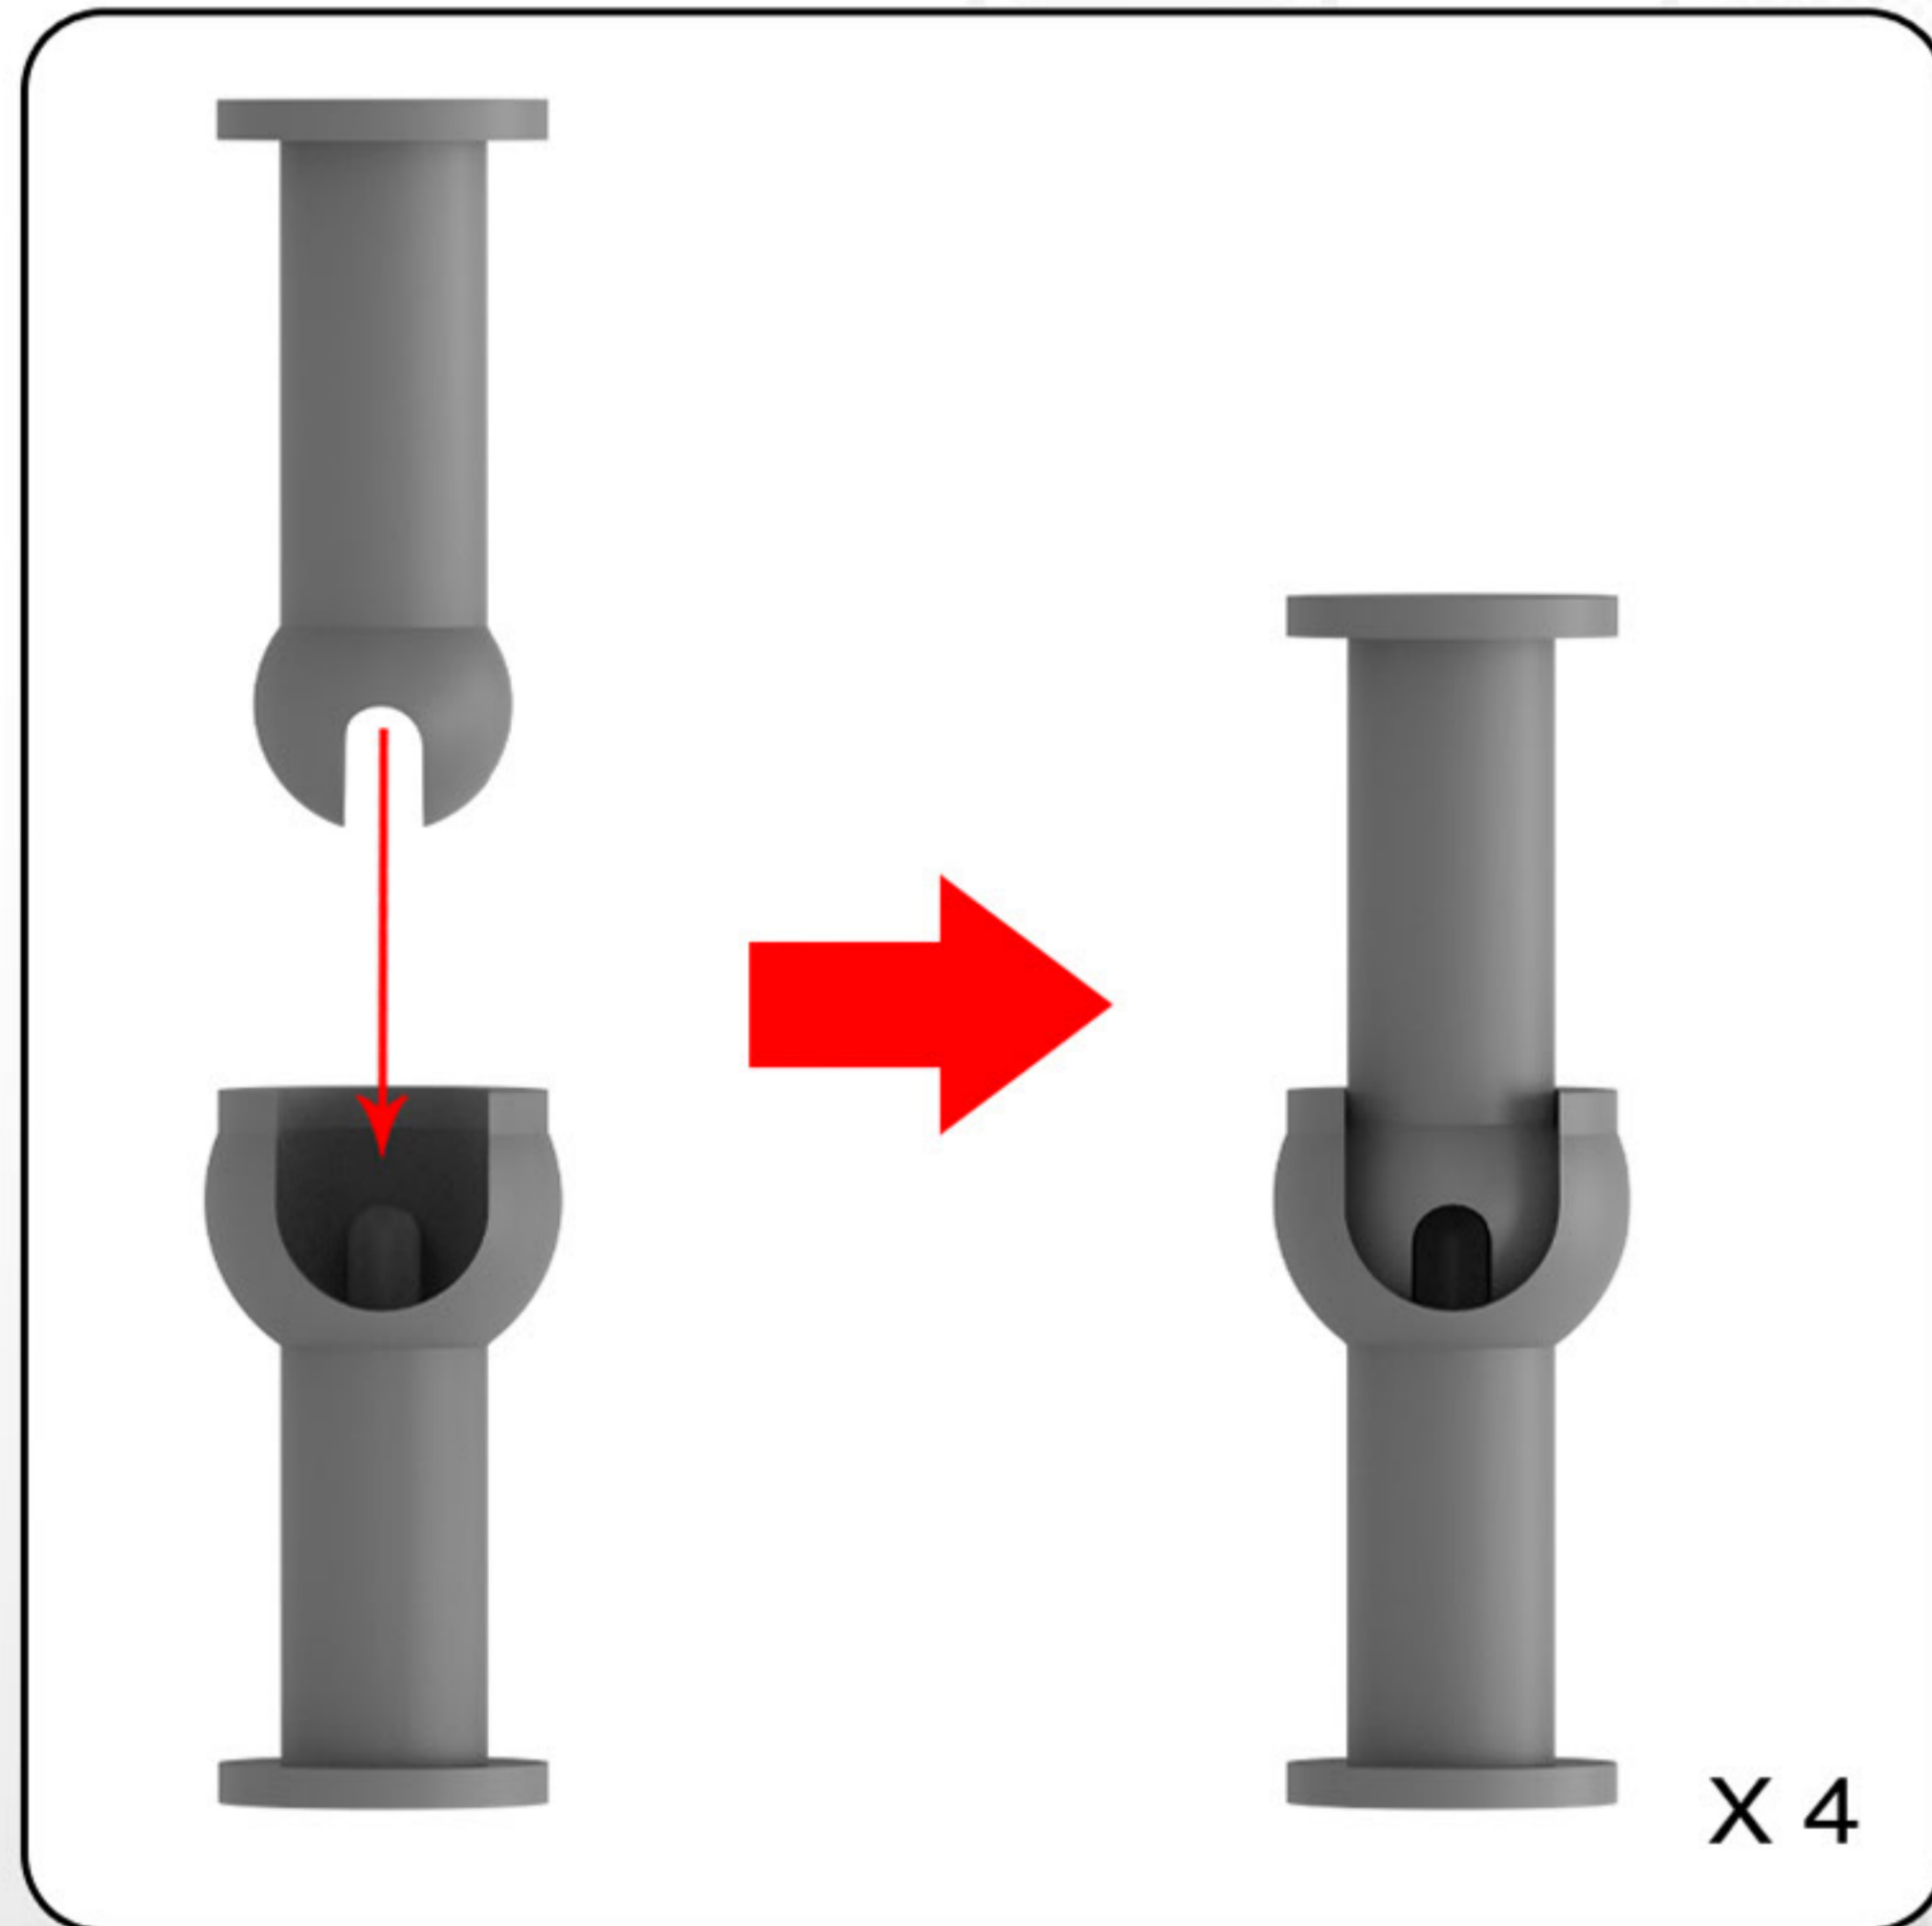

SLICE SETTING GUIDE

USE EQUIVALENT SUPPORT SETTINGS

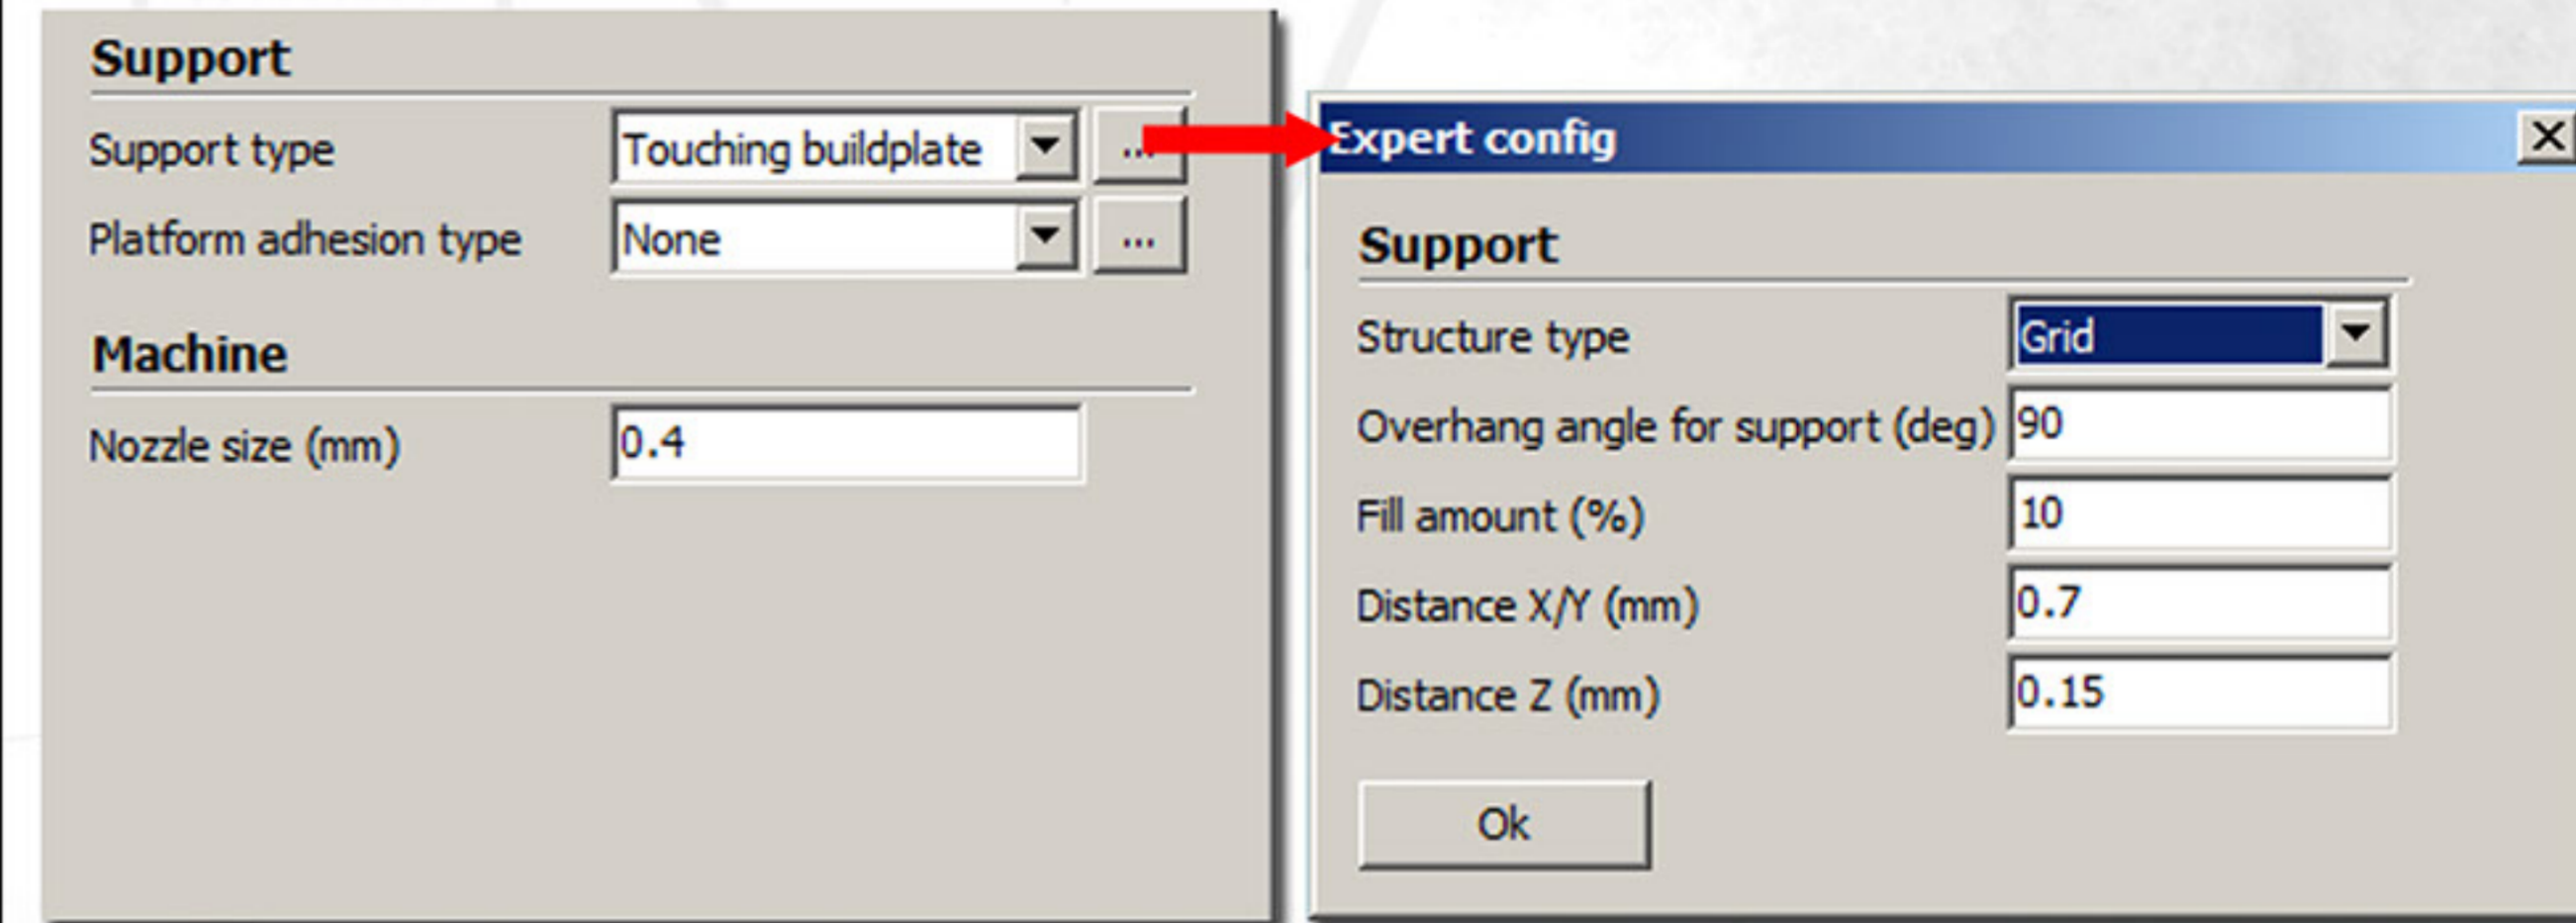

USE SUPPORT FOR FOLLOWING PIECES

RIGHT/LEFT SHIN ARMOR

RIGHT/LEFT THIGH ARMOR


PELVIS ARMOR

RIGHT/LEFT CLAVICLE ARMOR

HEAD PRINTING CHECKLIST


HEAD TOP

HEAD BASE

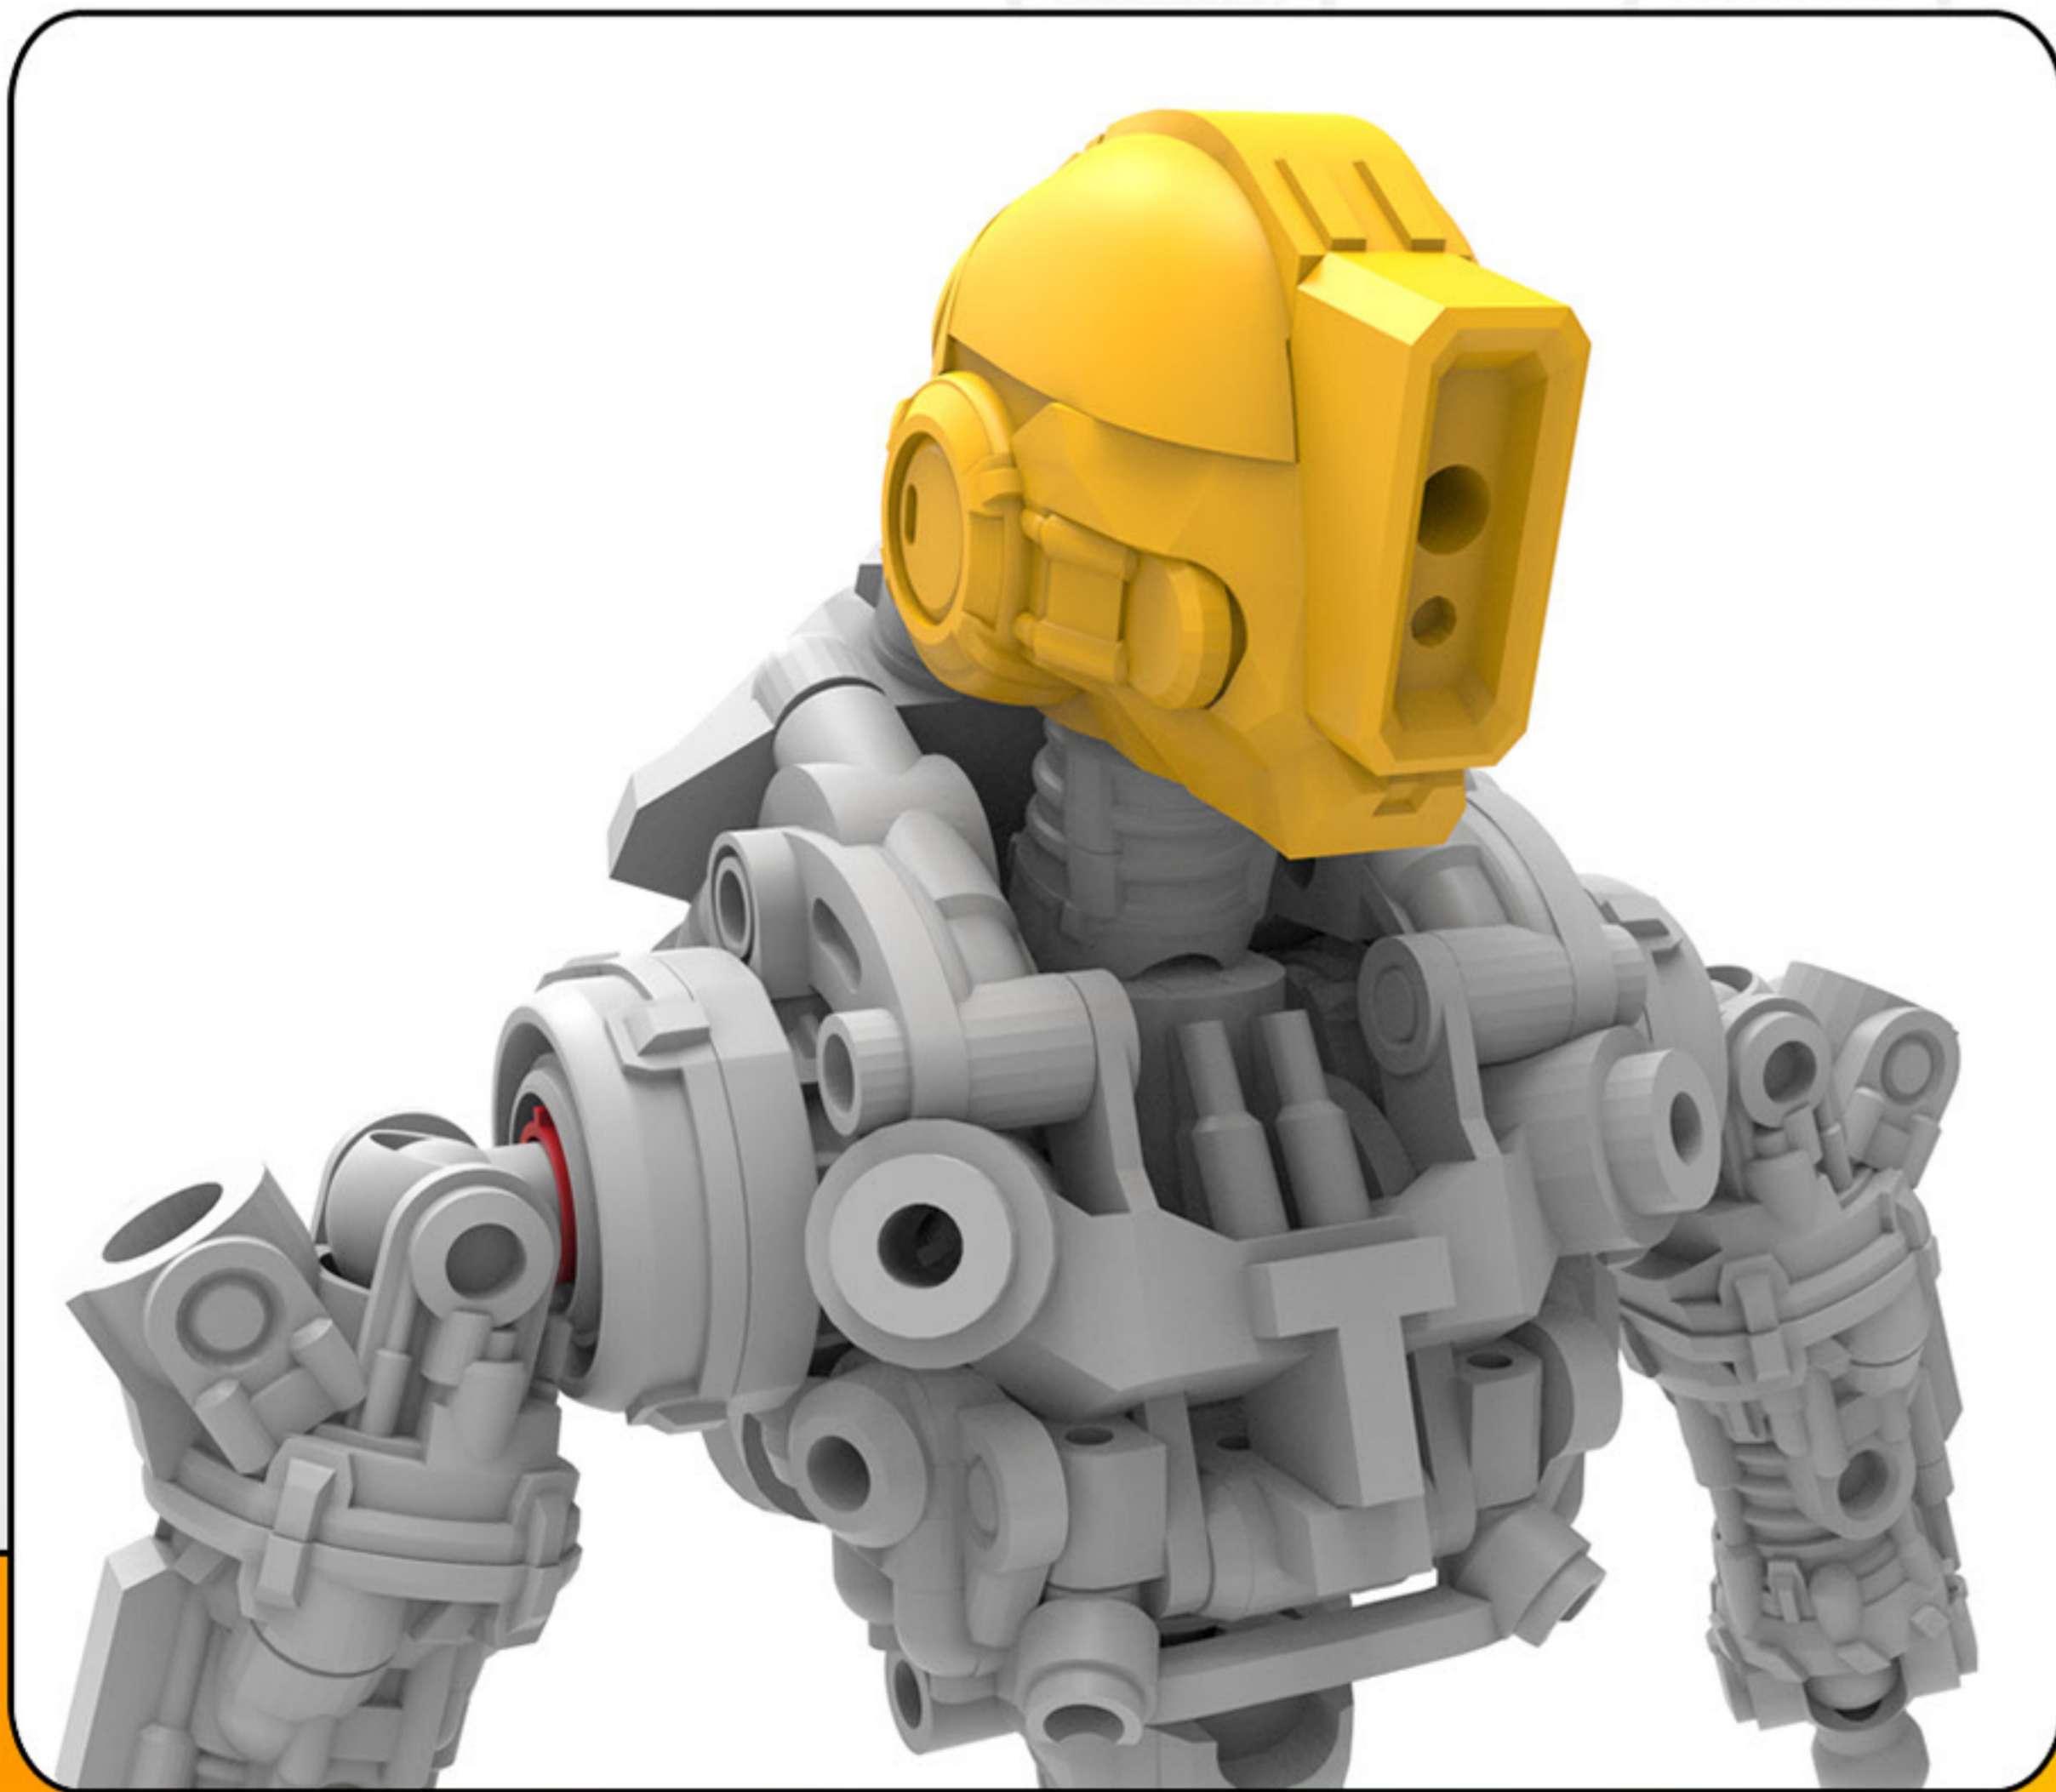


STEP 01

HEAD TOP

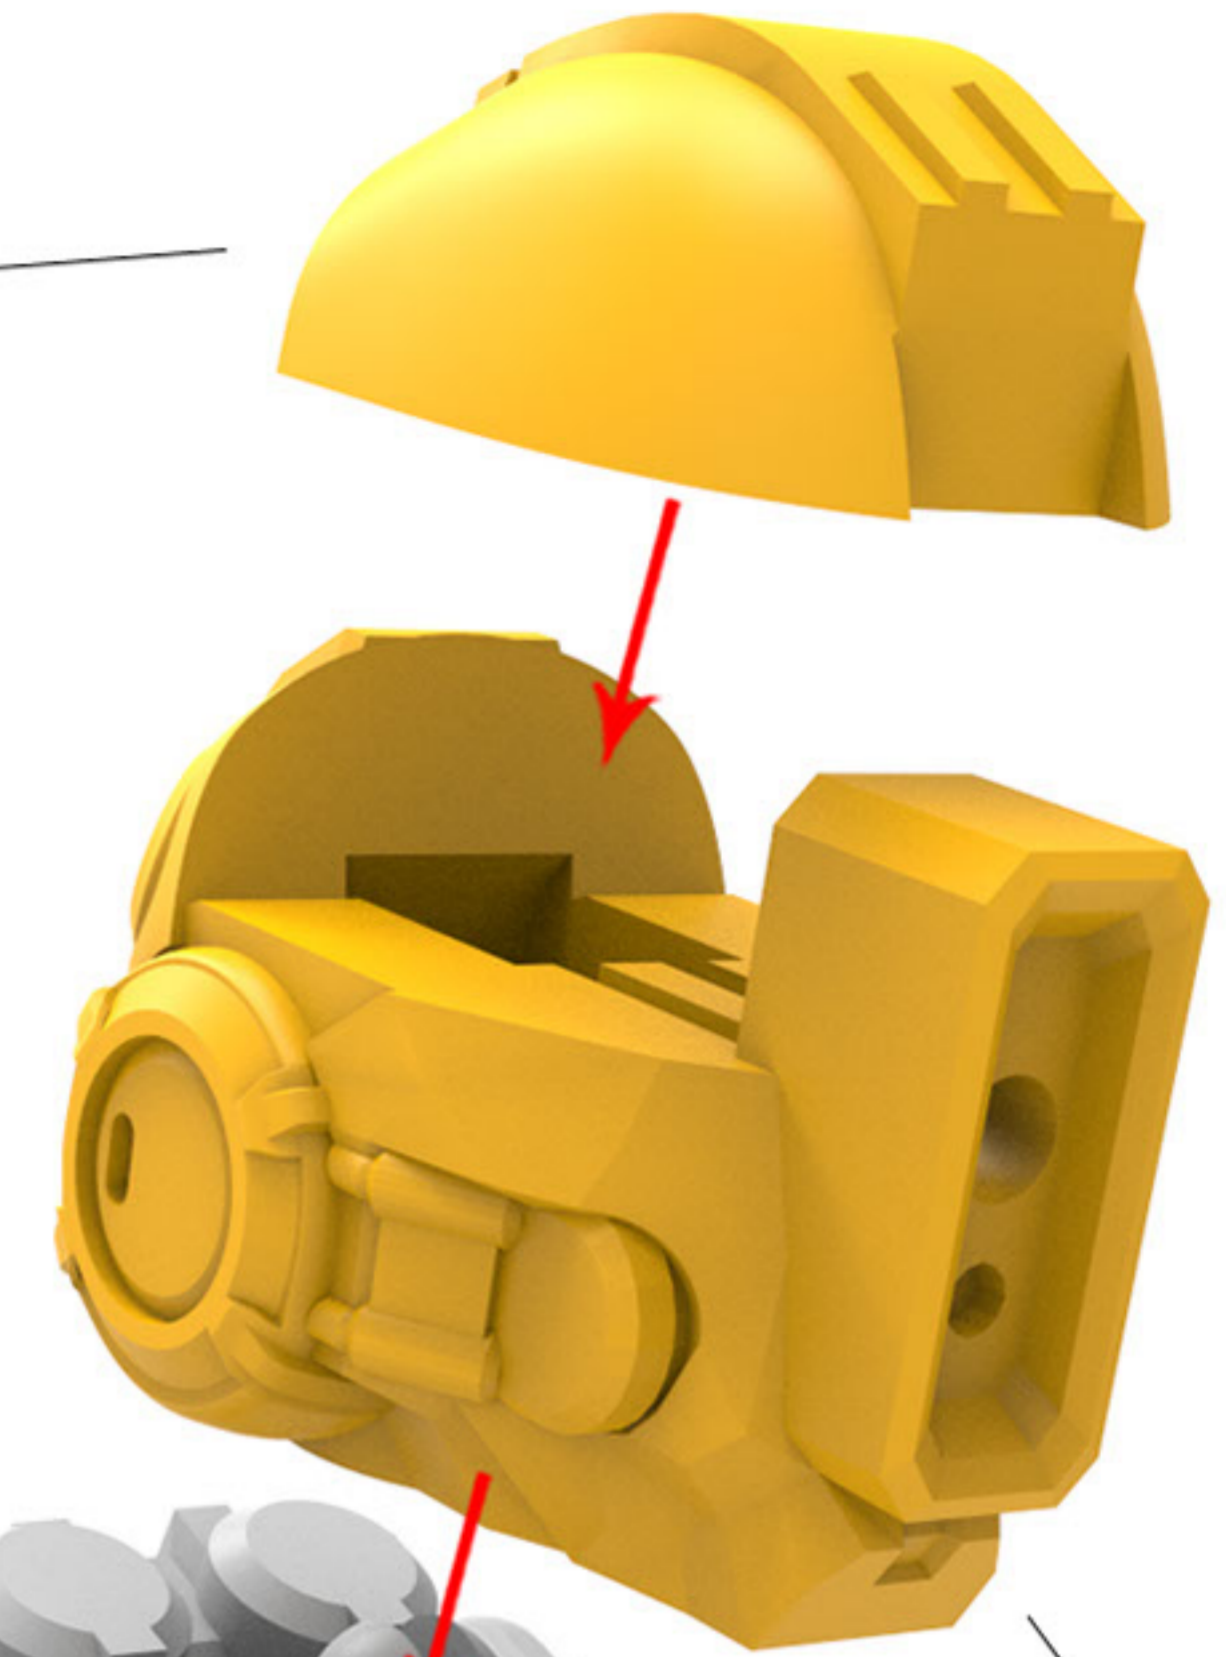

HEAD BASE

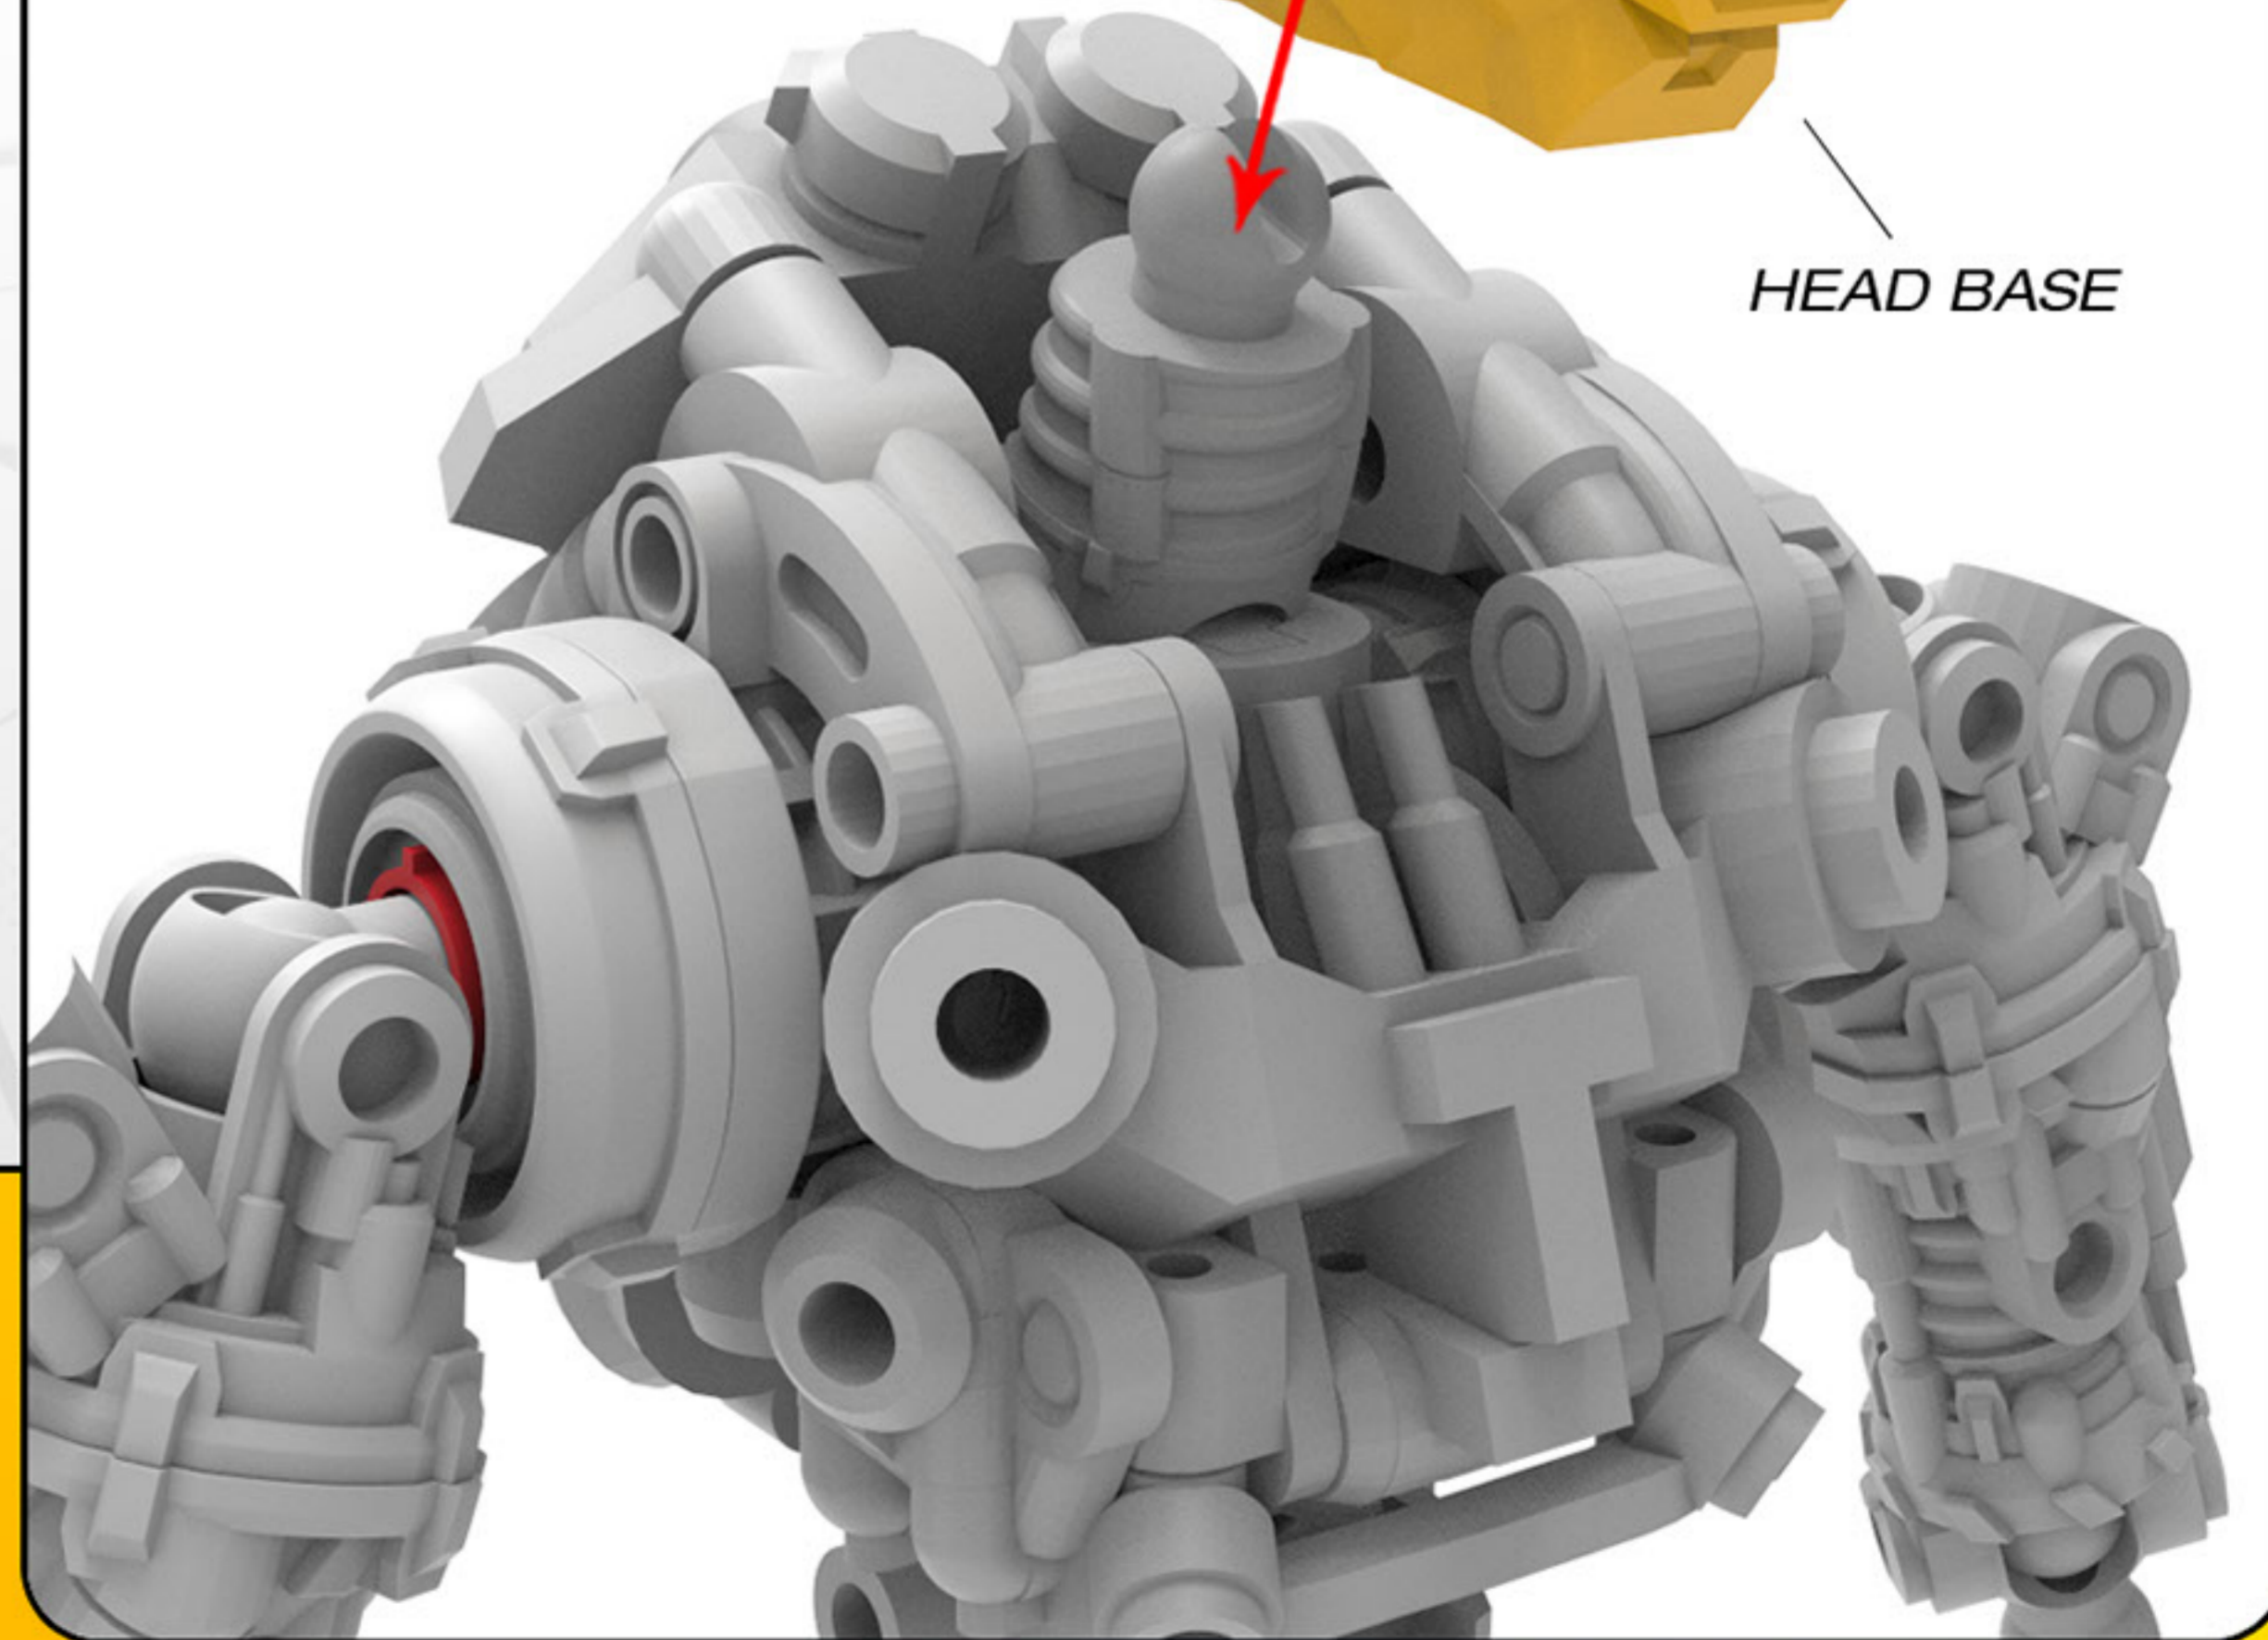

LEG ARMOR CHECKLIST

LEFT THIGH ARMOR

RIGHT THIGH ARMOR

LEFT SHIN ARMOR

RIGHT SHIN ARMOR

LEFT MID LEG ARMOR

RIGHT MID LEG ARMOR

LEFT FOOT

RIGHT FOOT


LEFT MID LEG GUIDEPIPE

RIGHT MID LEG GUIDEPIPE


JOINT COG x 8




PREP

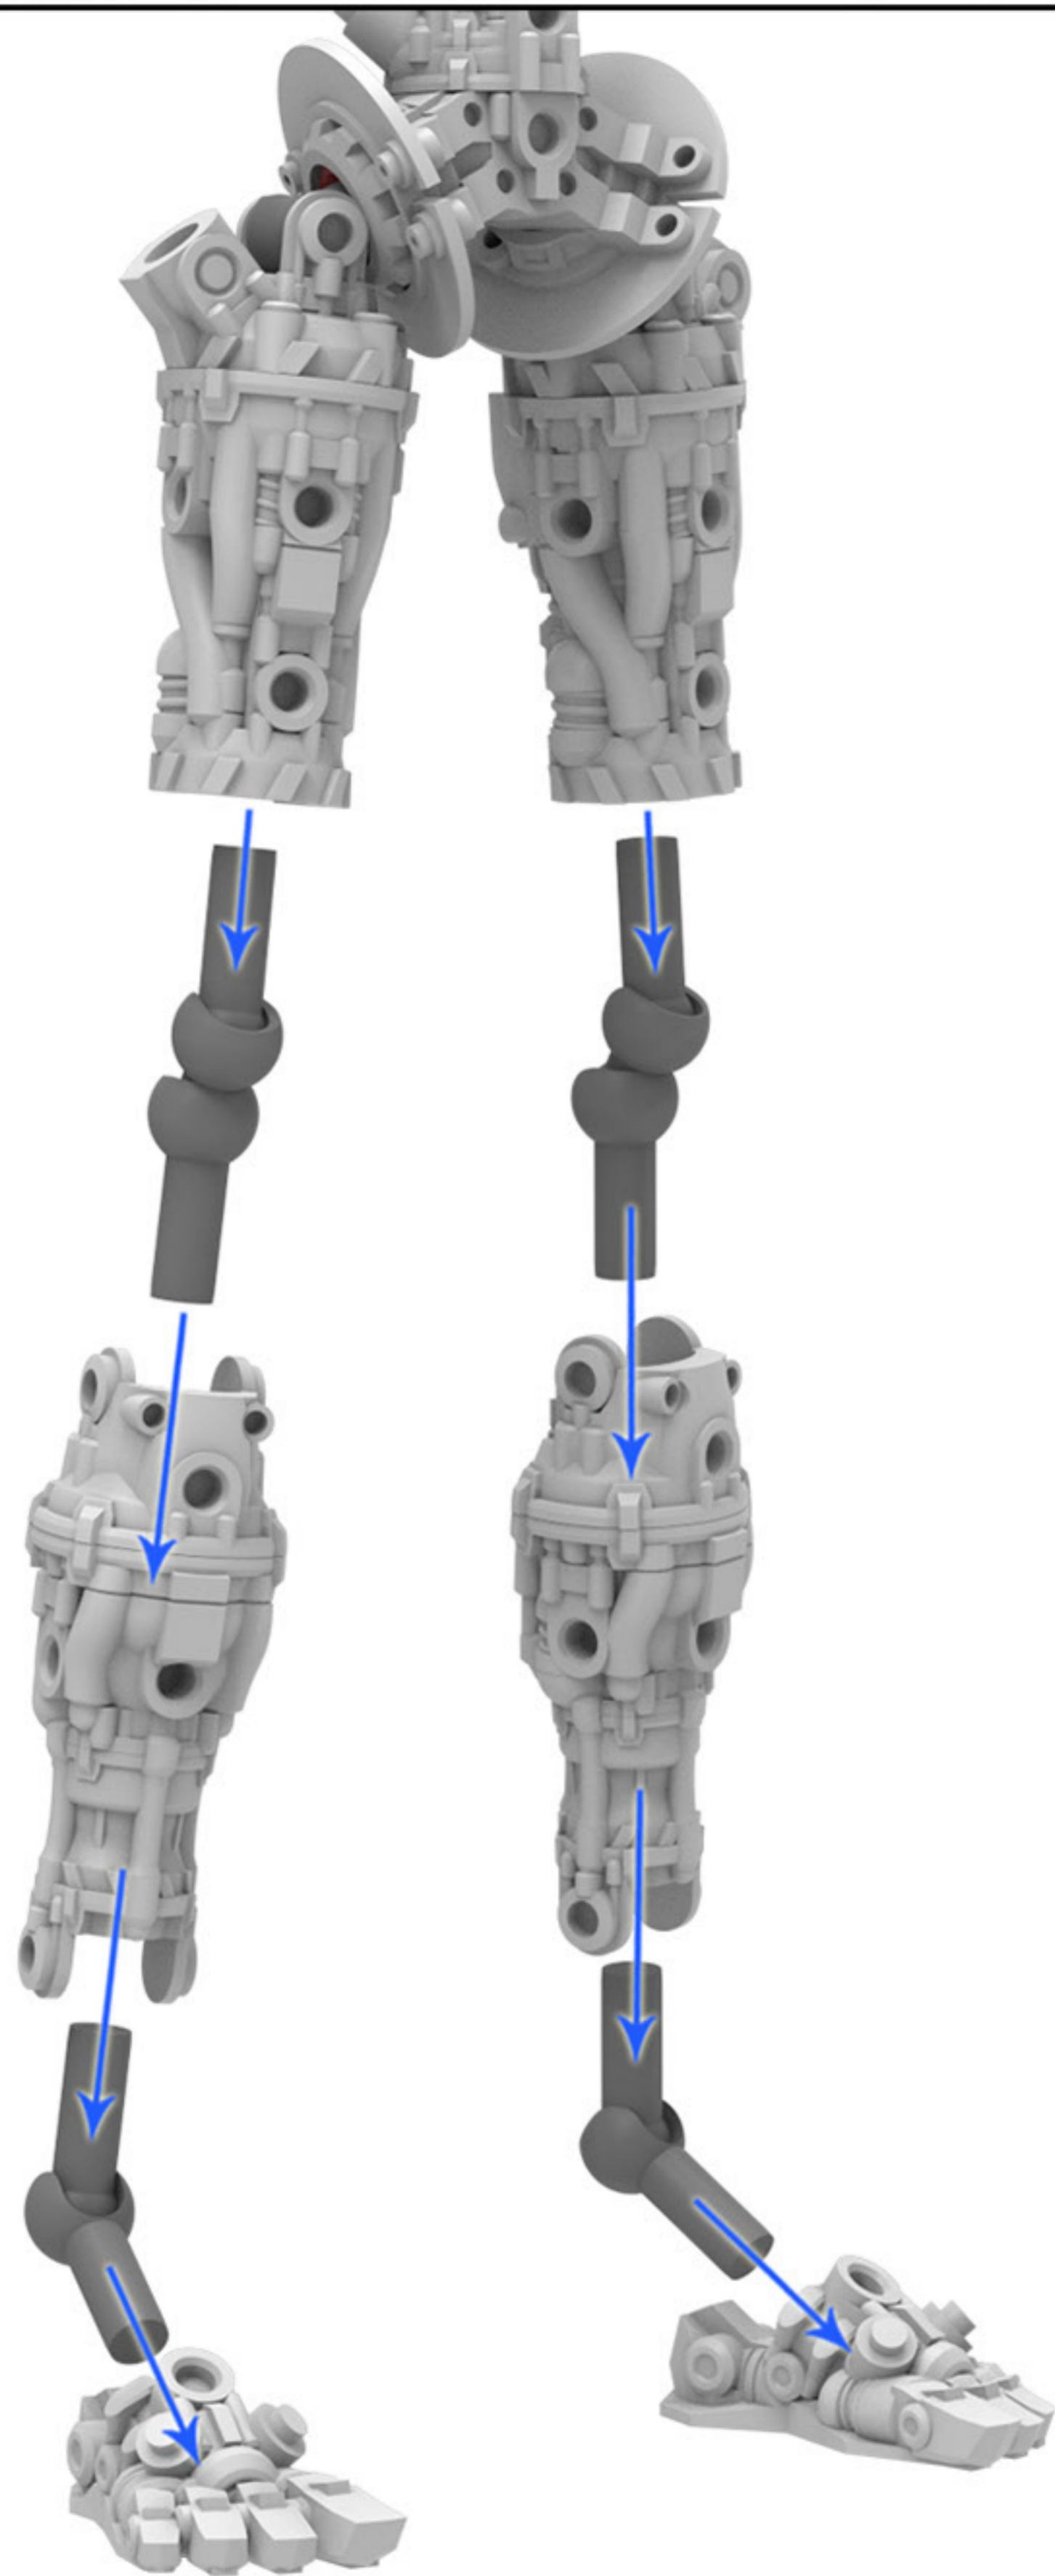

STEP 01

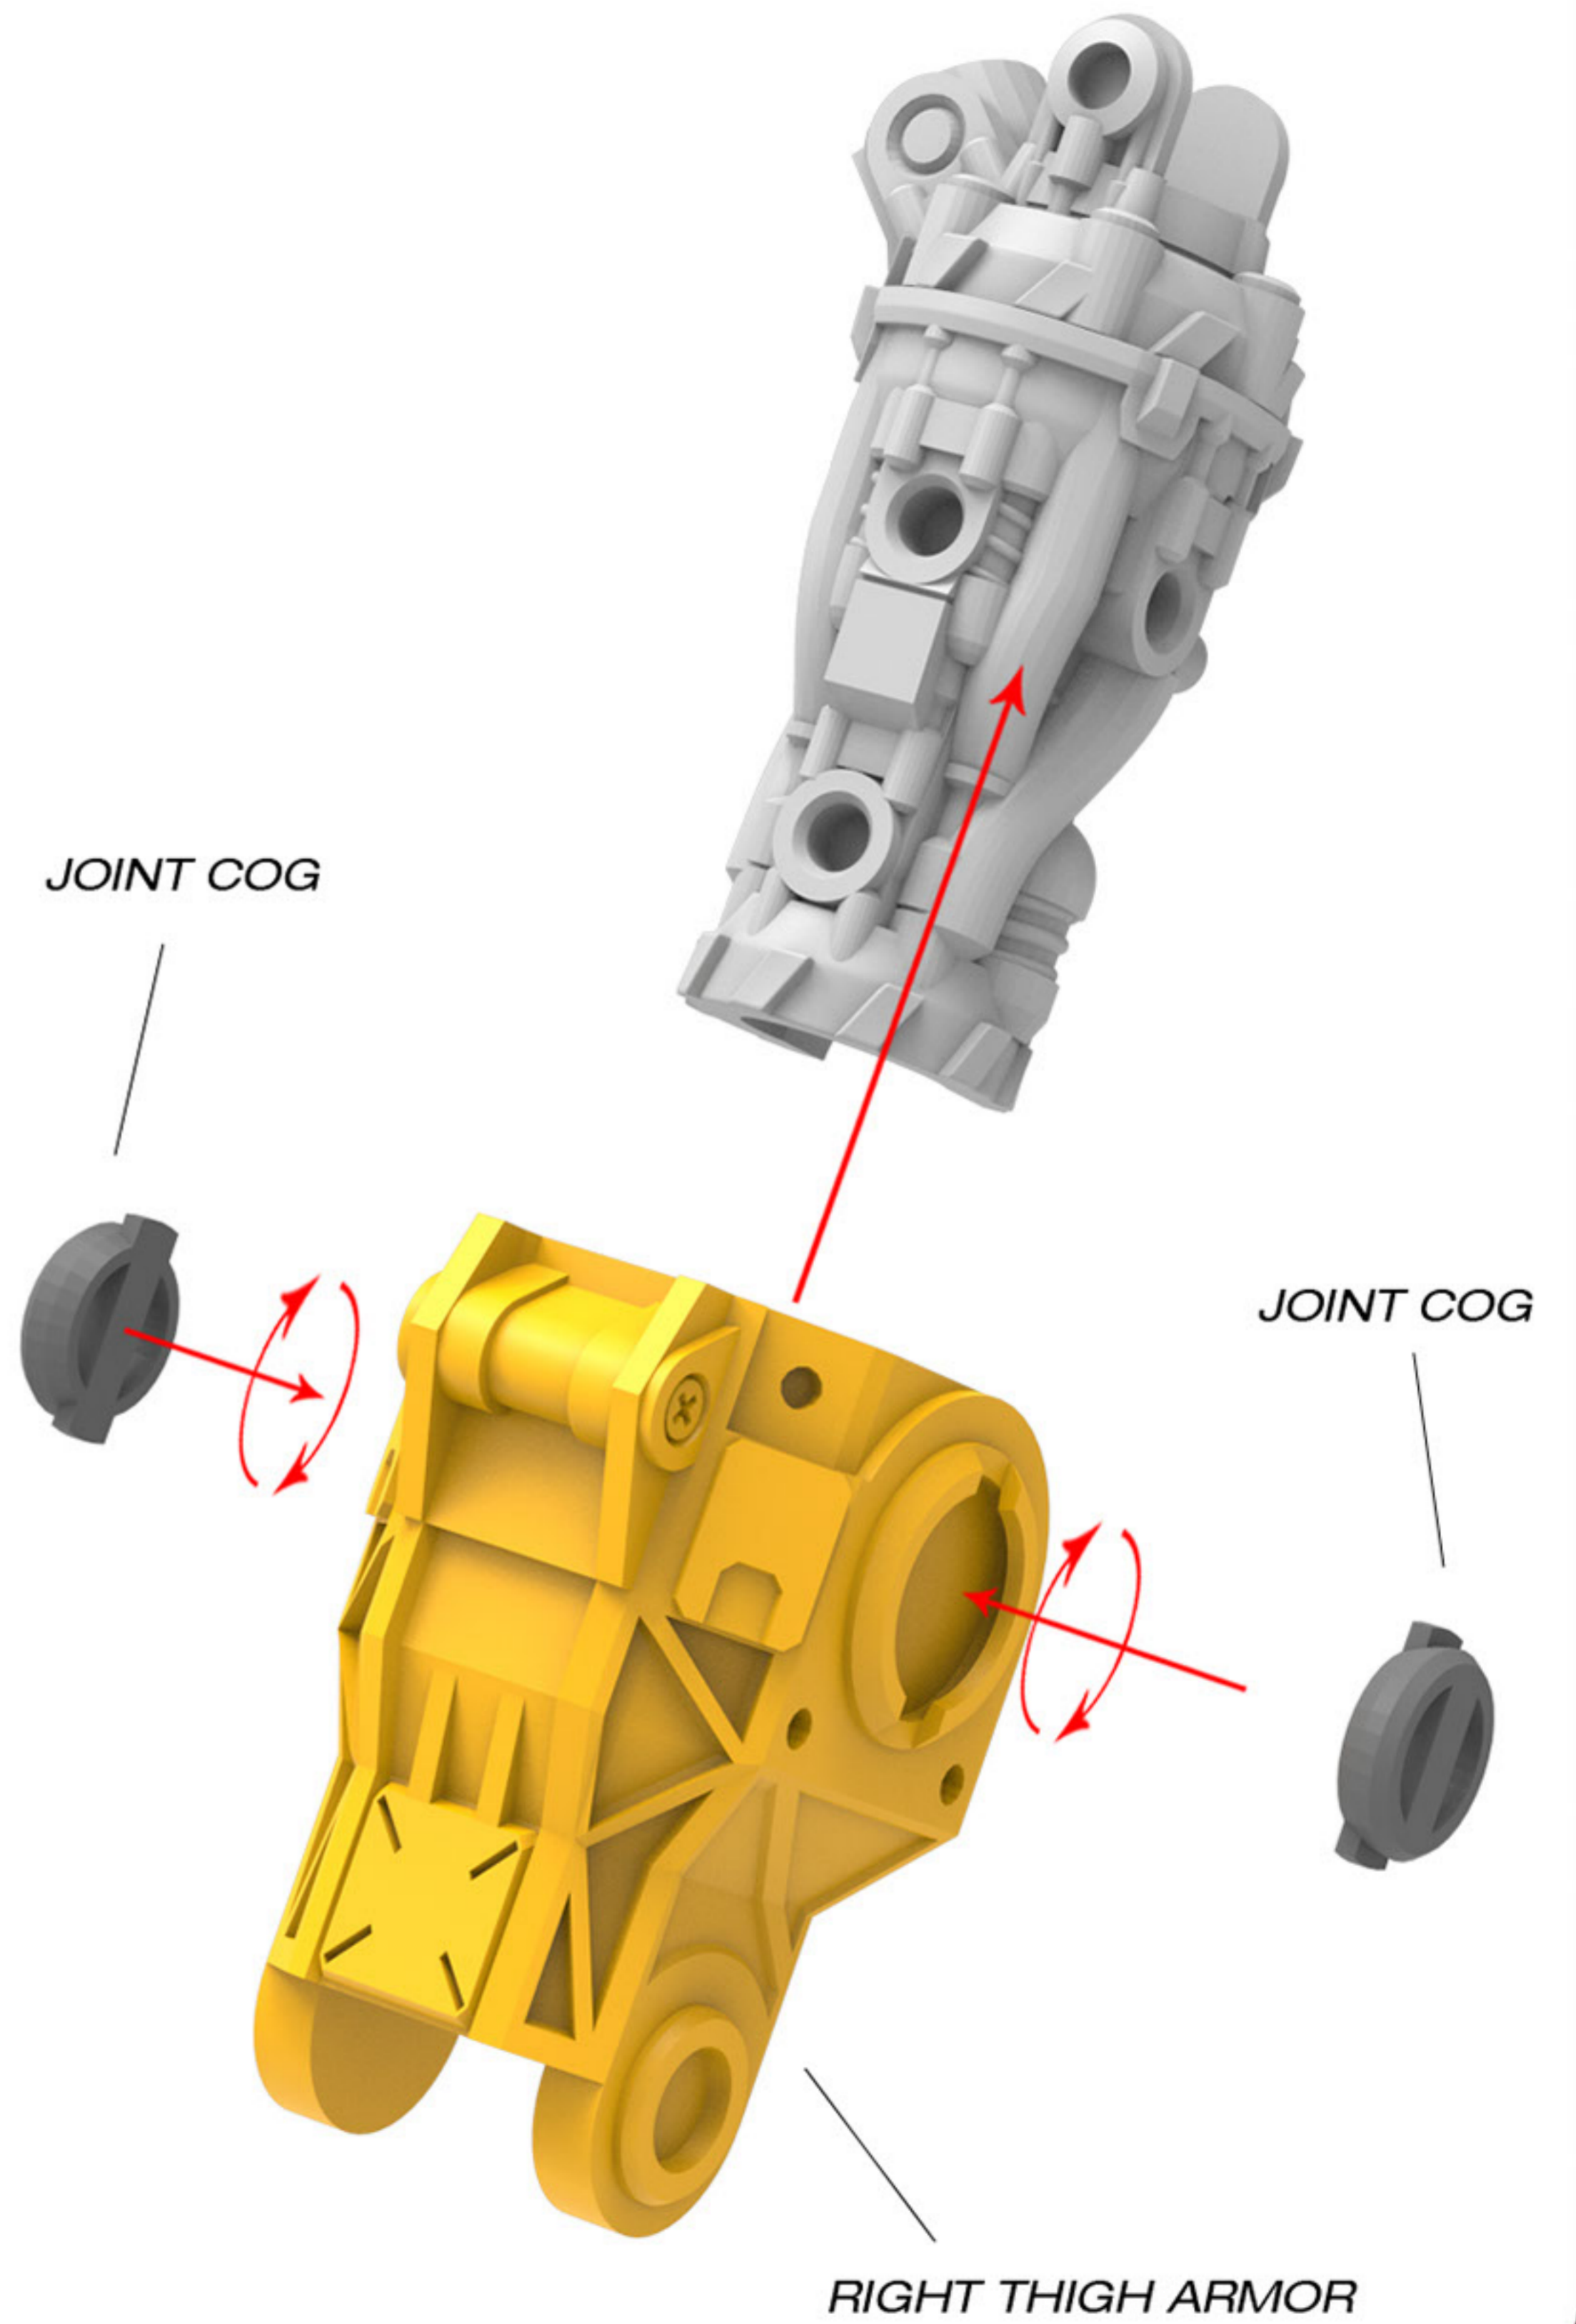


STEP 02

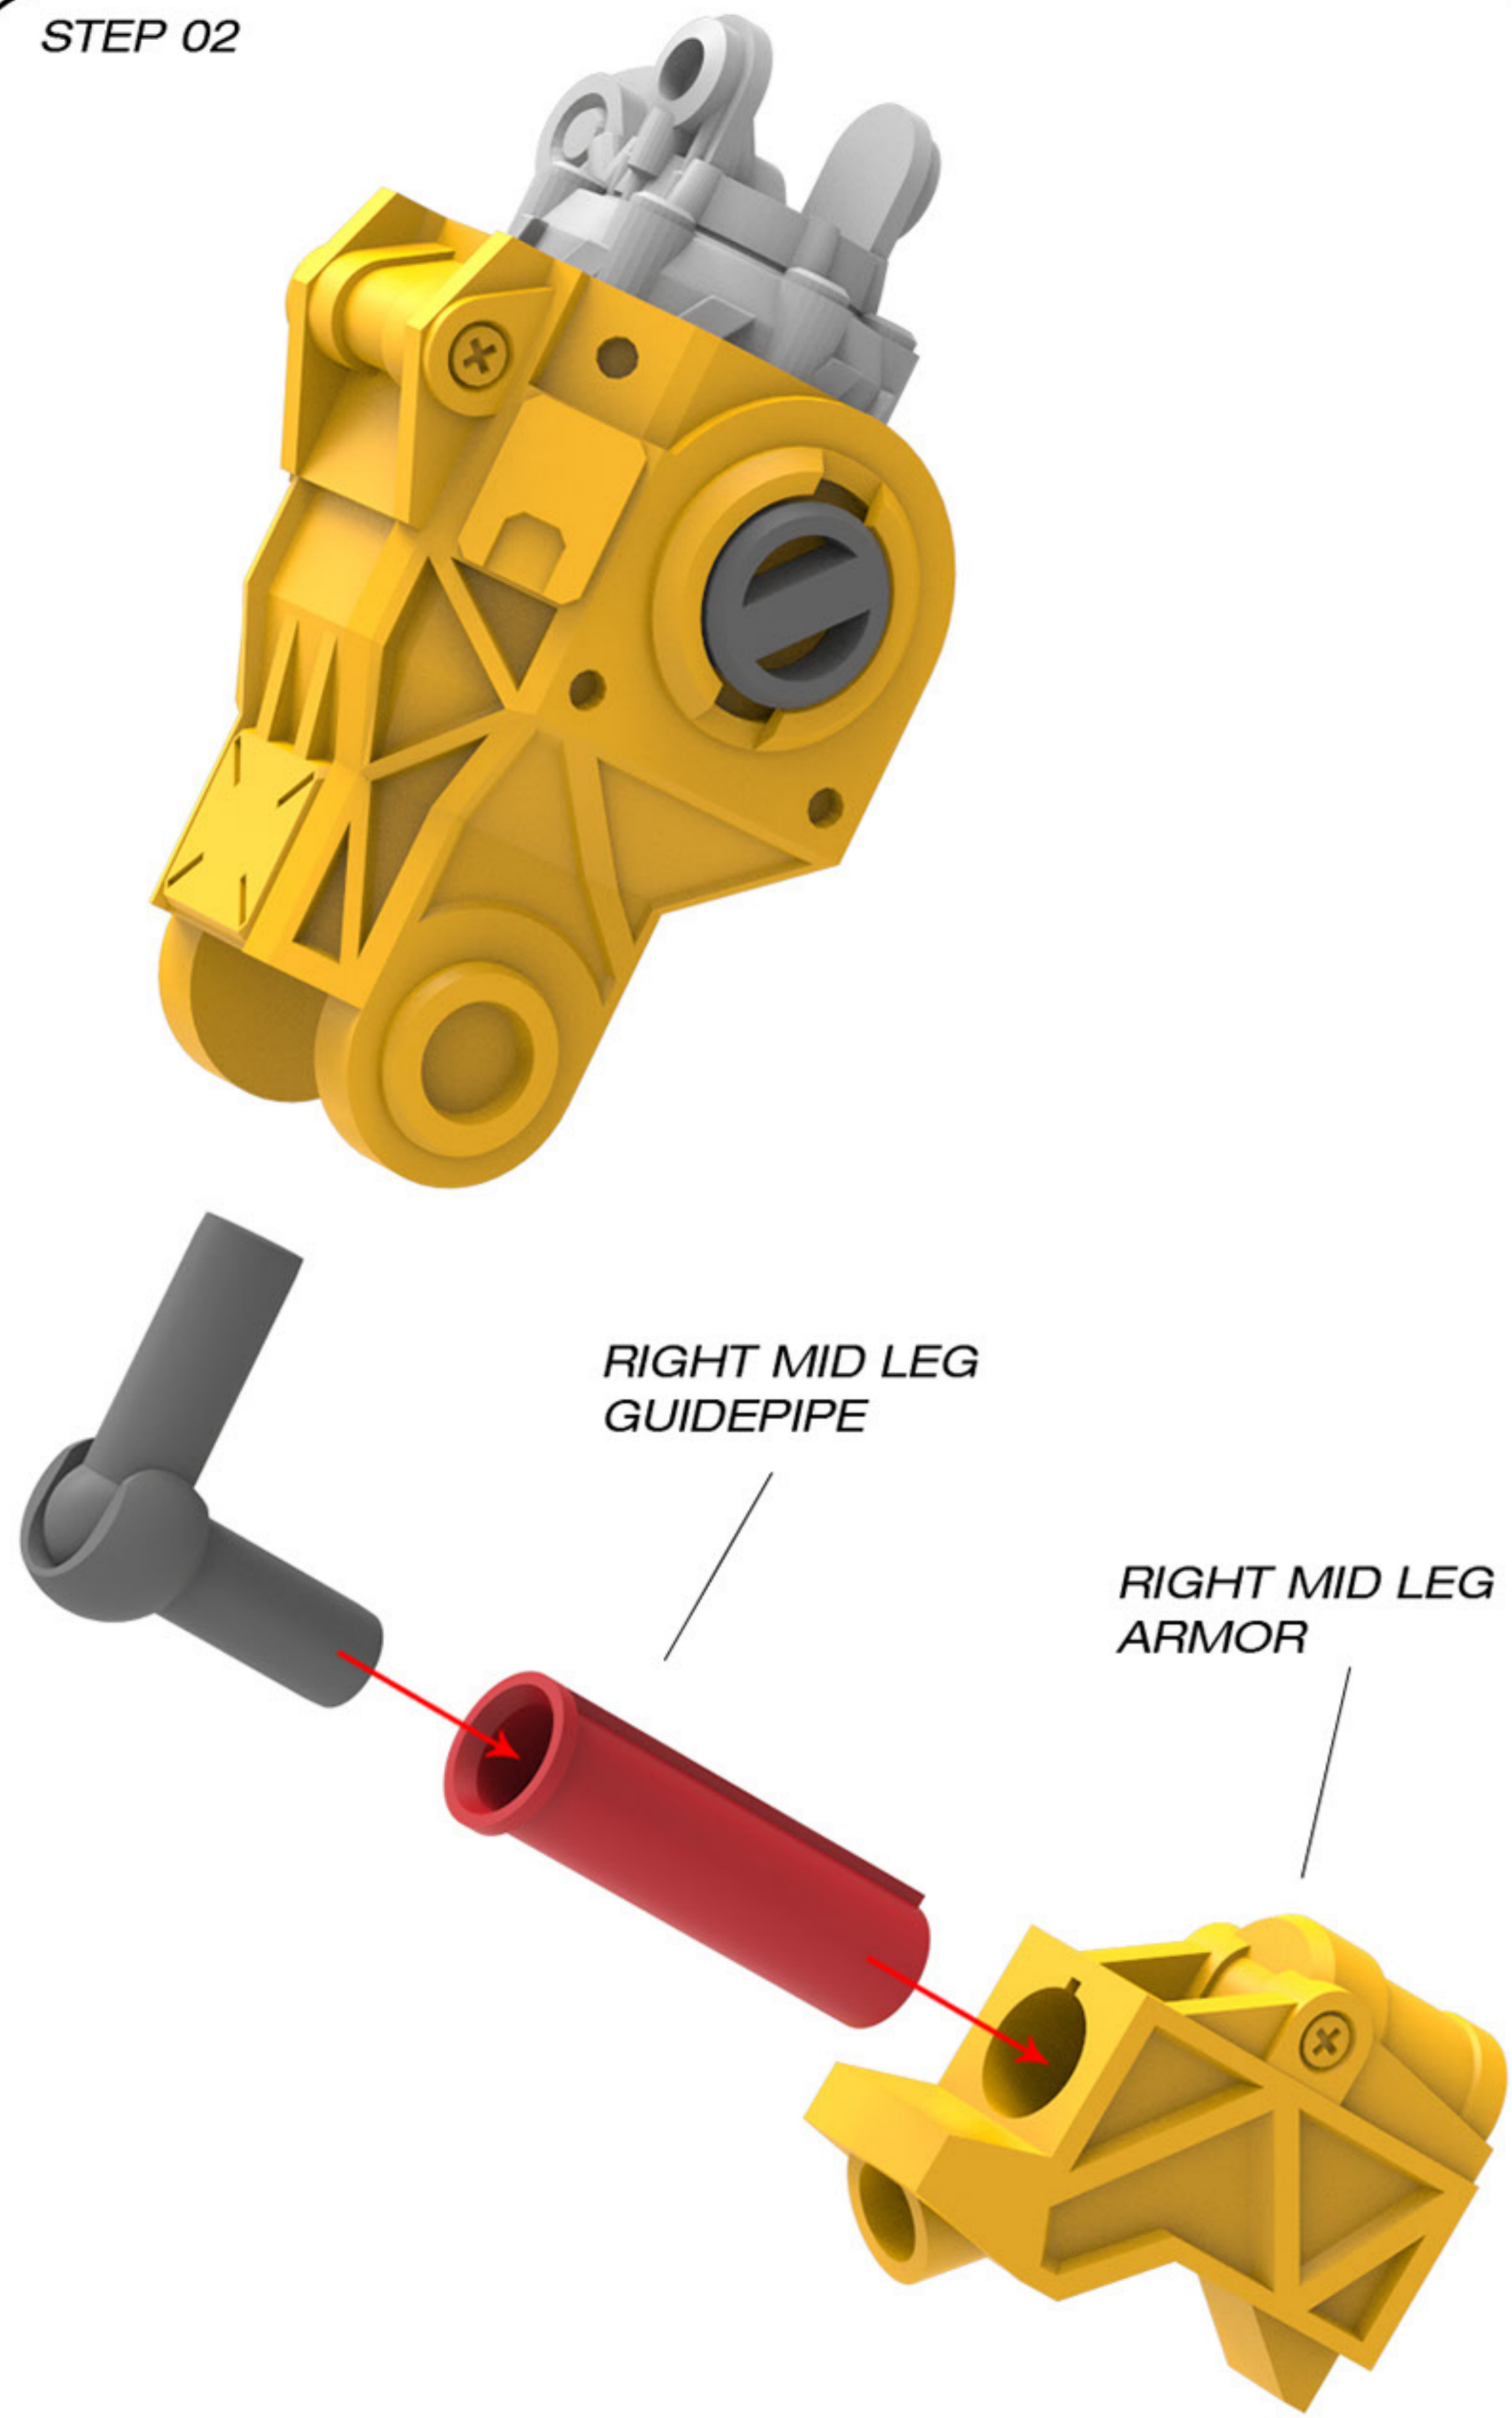


STEP 03



STEP 04

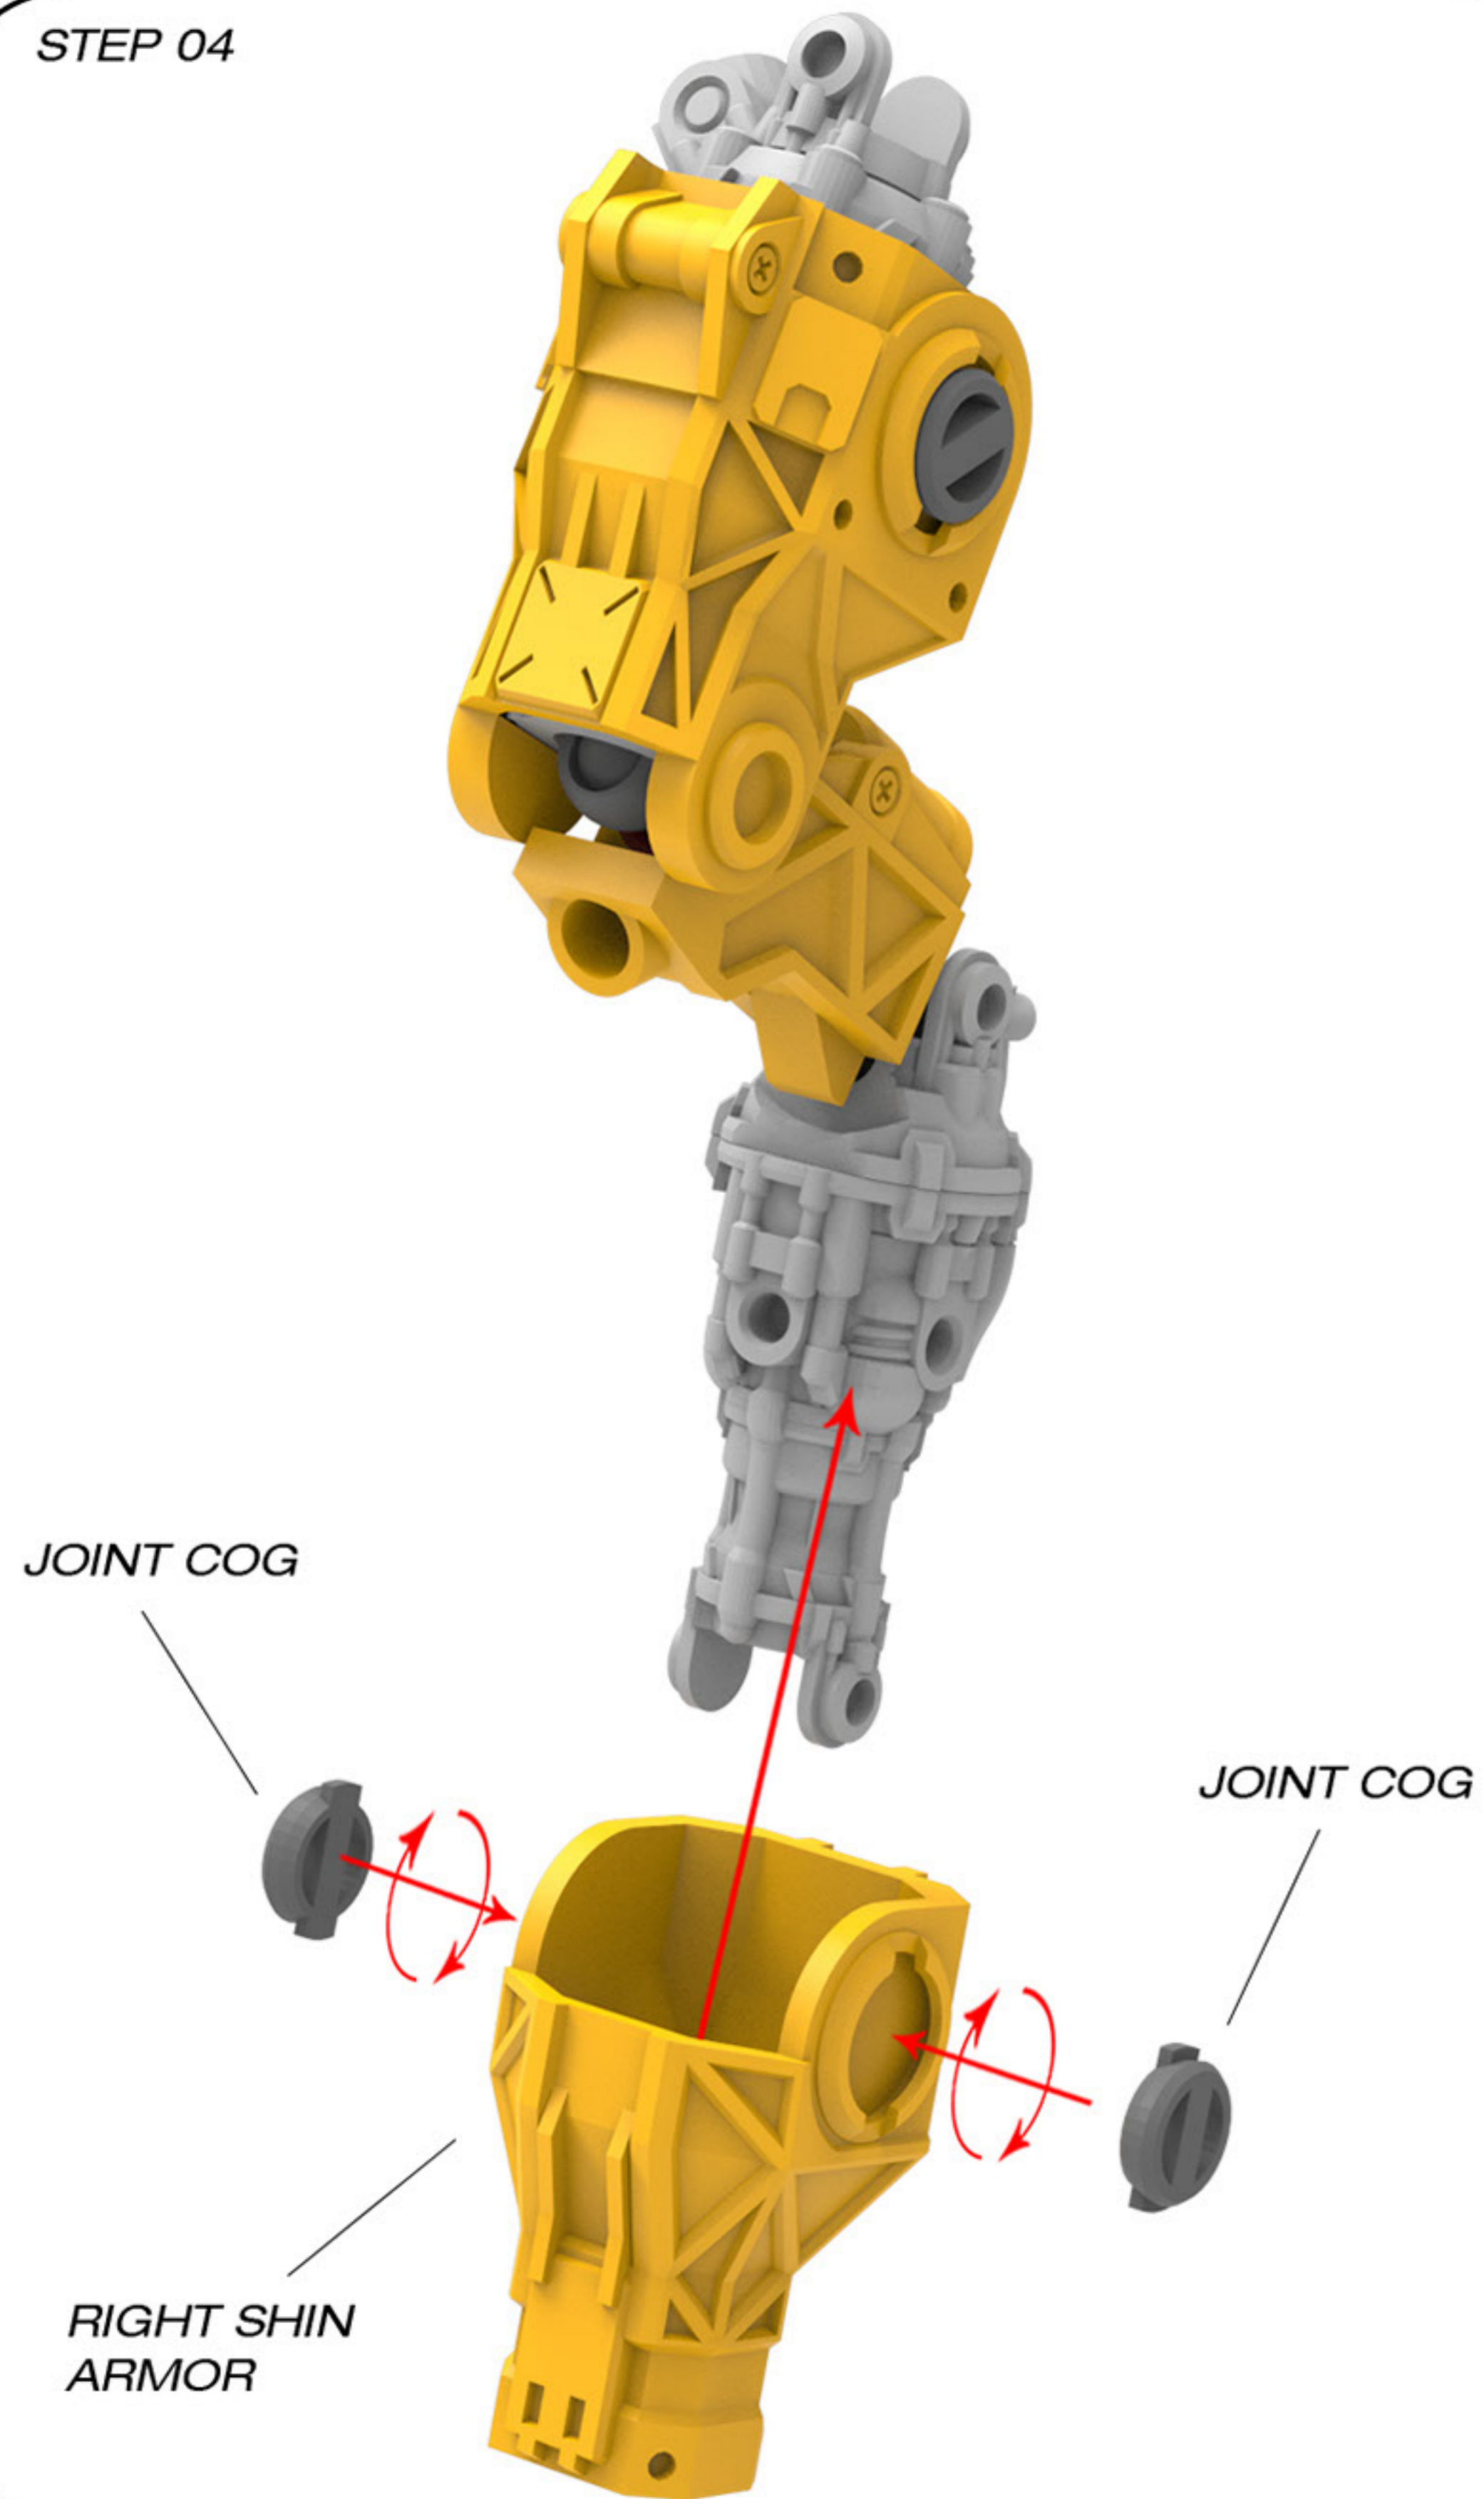

STEP 05

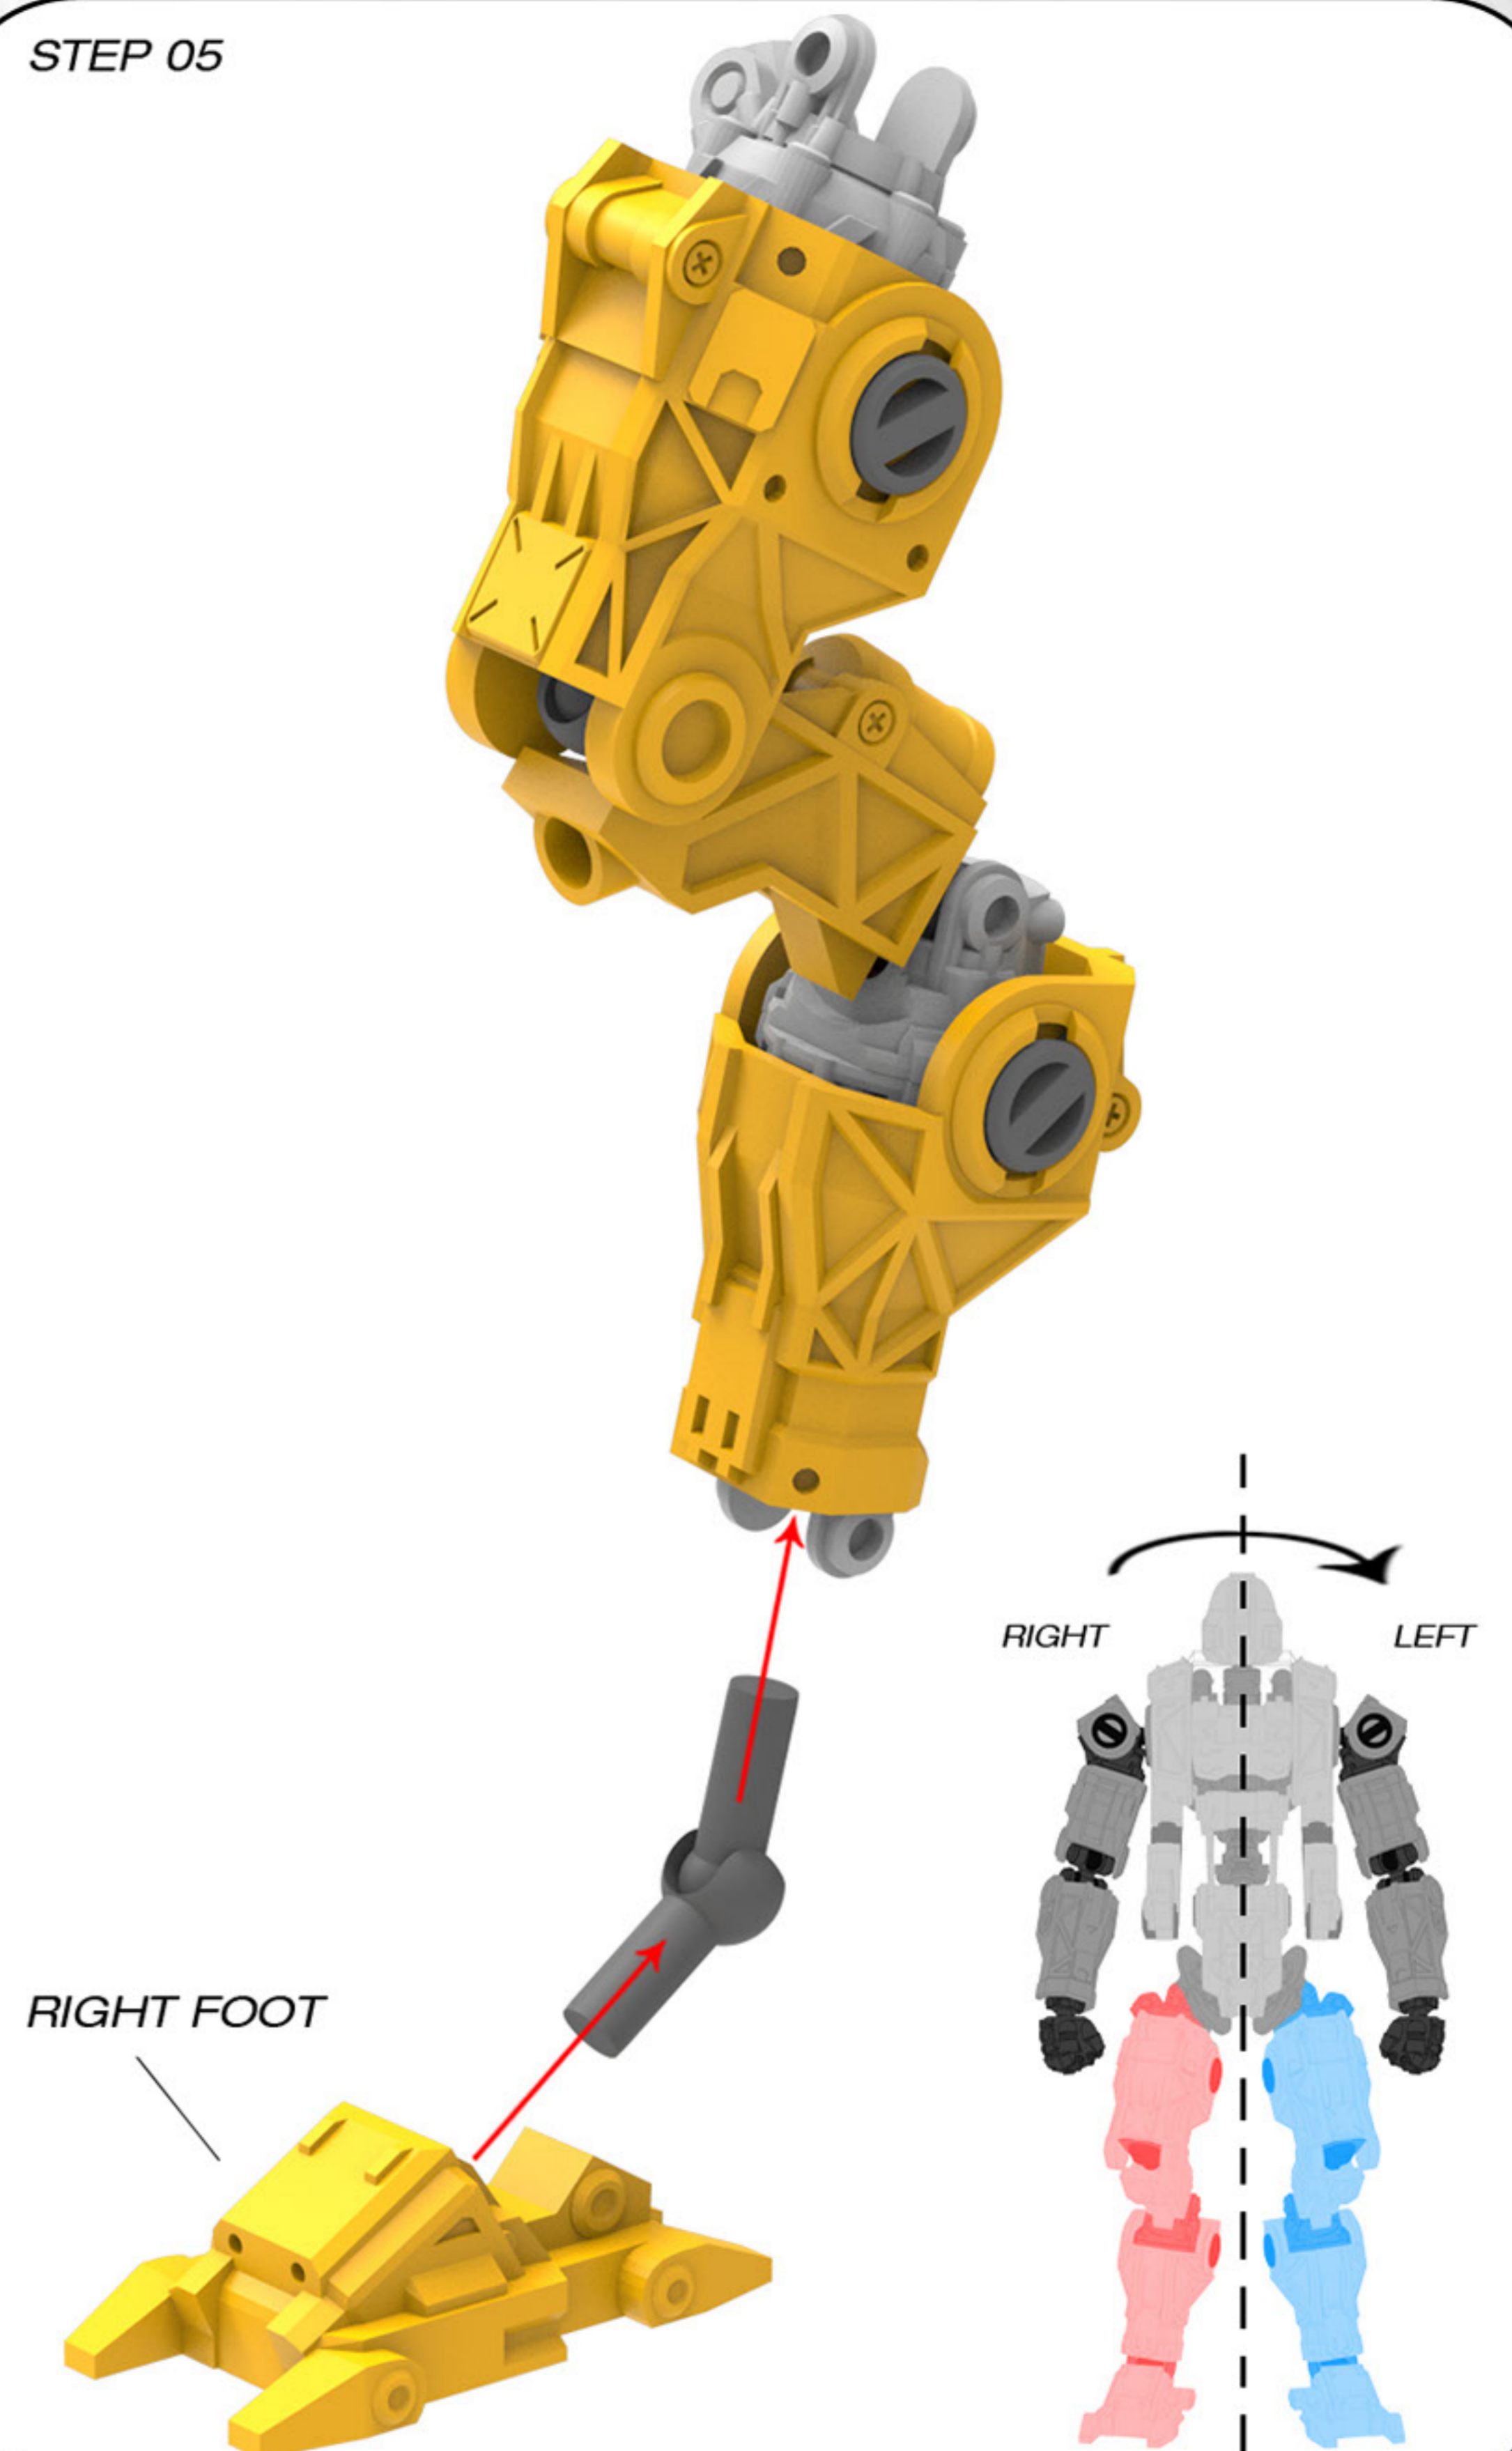

ARM ARMOR CHECKLIST

LEFT SHOULDER ARMOR

RIGHT SHOULDER ARMOR

LEFT BICEP ARMOR

RIGHT BICEP ARMOR

LEFT FOREARM ARMOR

RIGHT FOREARM ARMOR


JOINT COG x 4

AUX ARM DOUBLEJOINT x 6


AUX UPPER ARM x 2

AUX LOWER ARM x 2

AUX ARM CLAW x 2

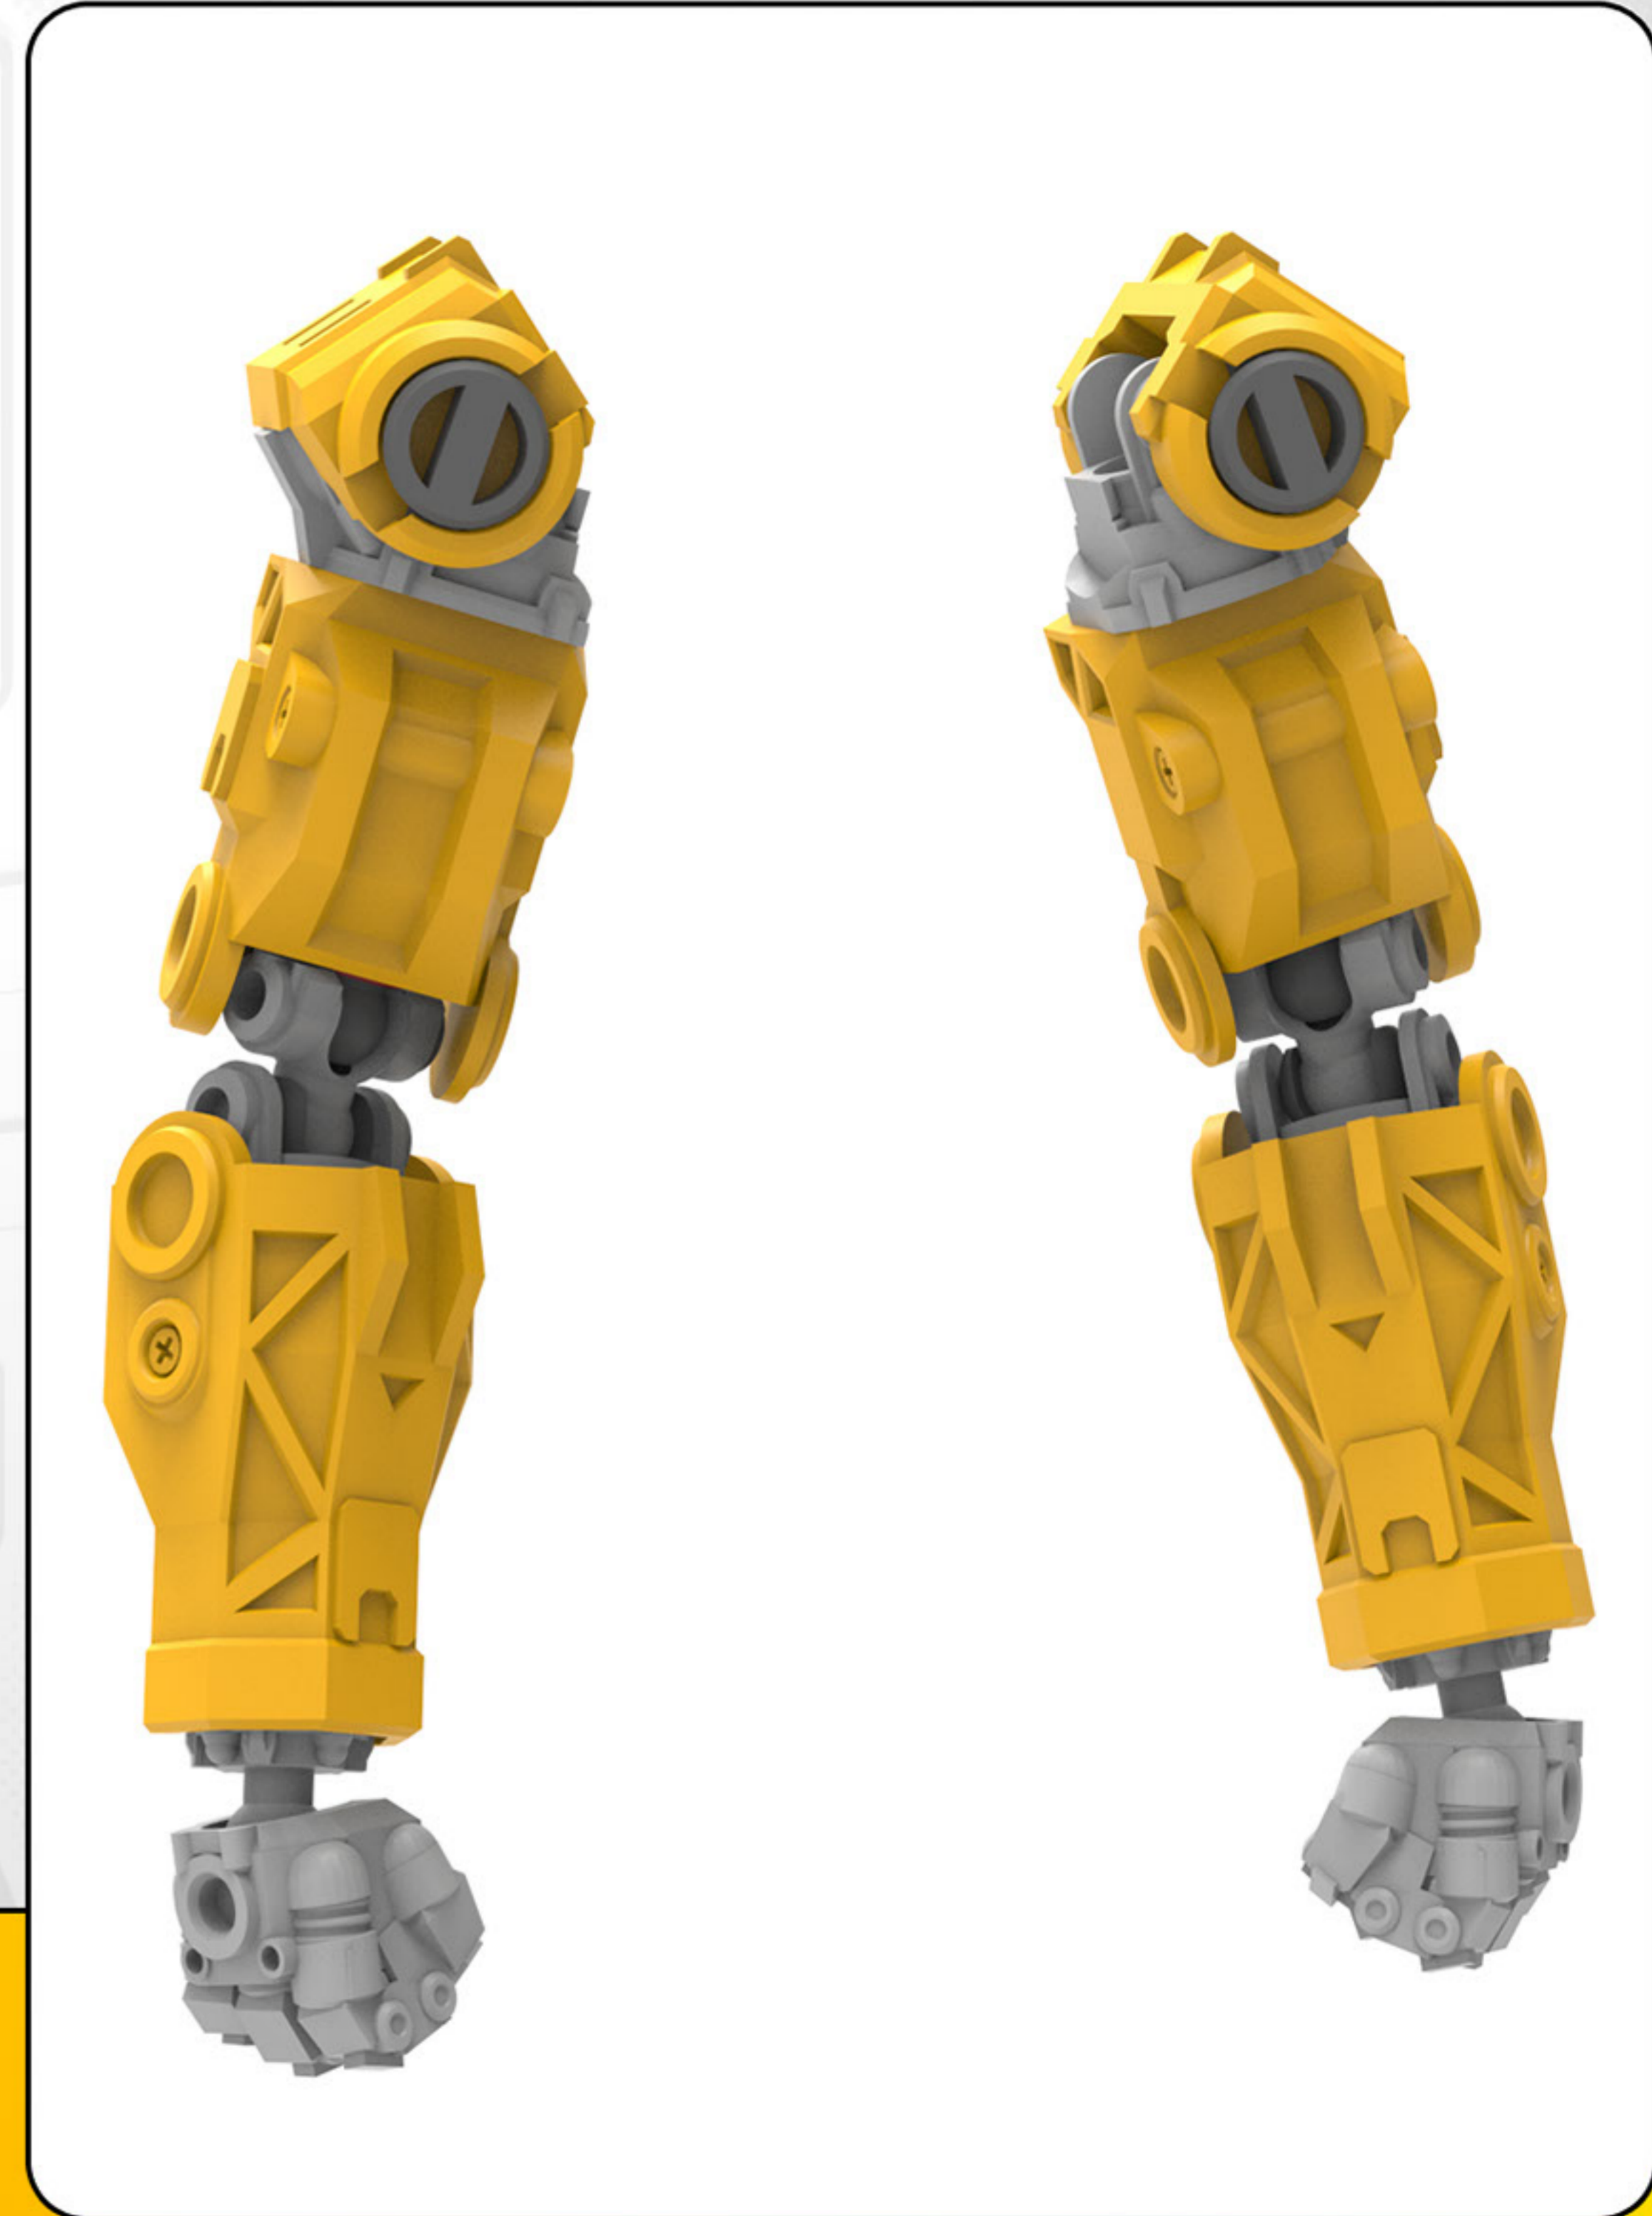


STEP 05

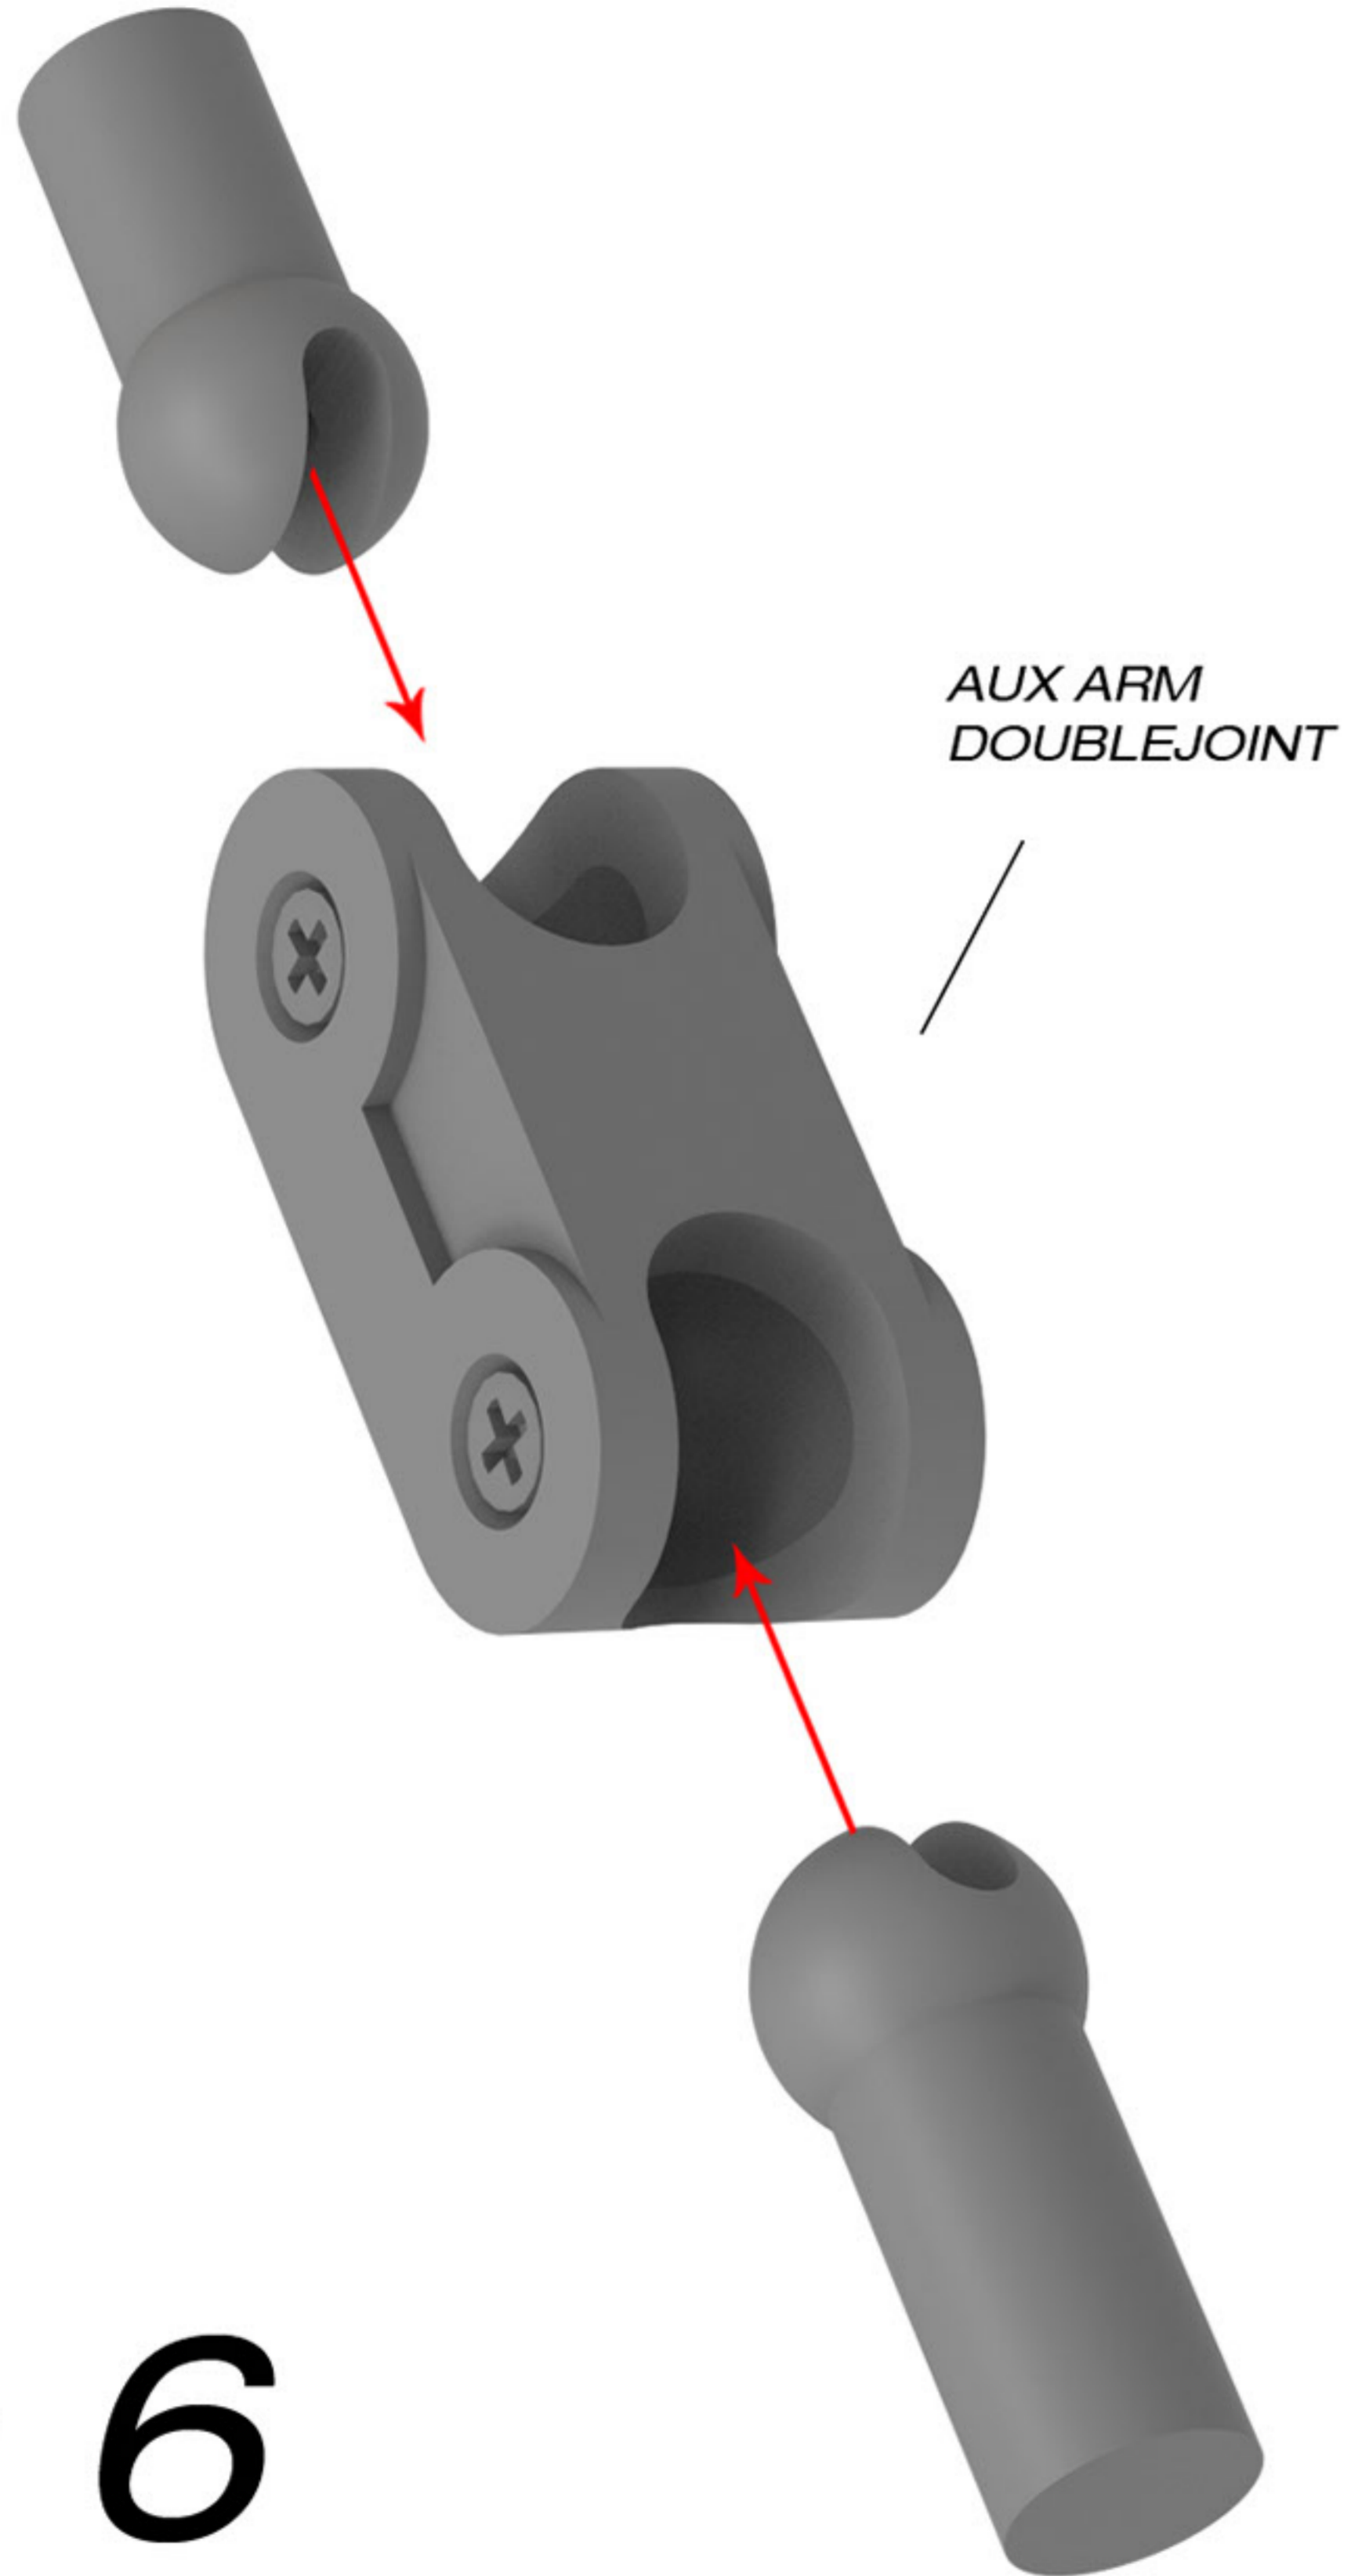

x 6

STEP 06

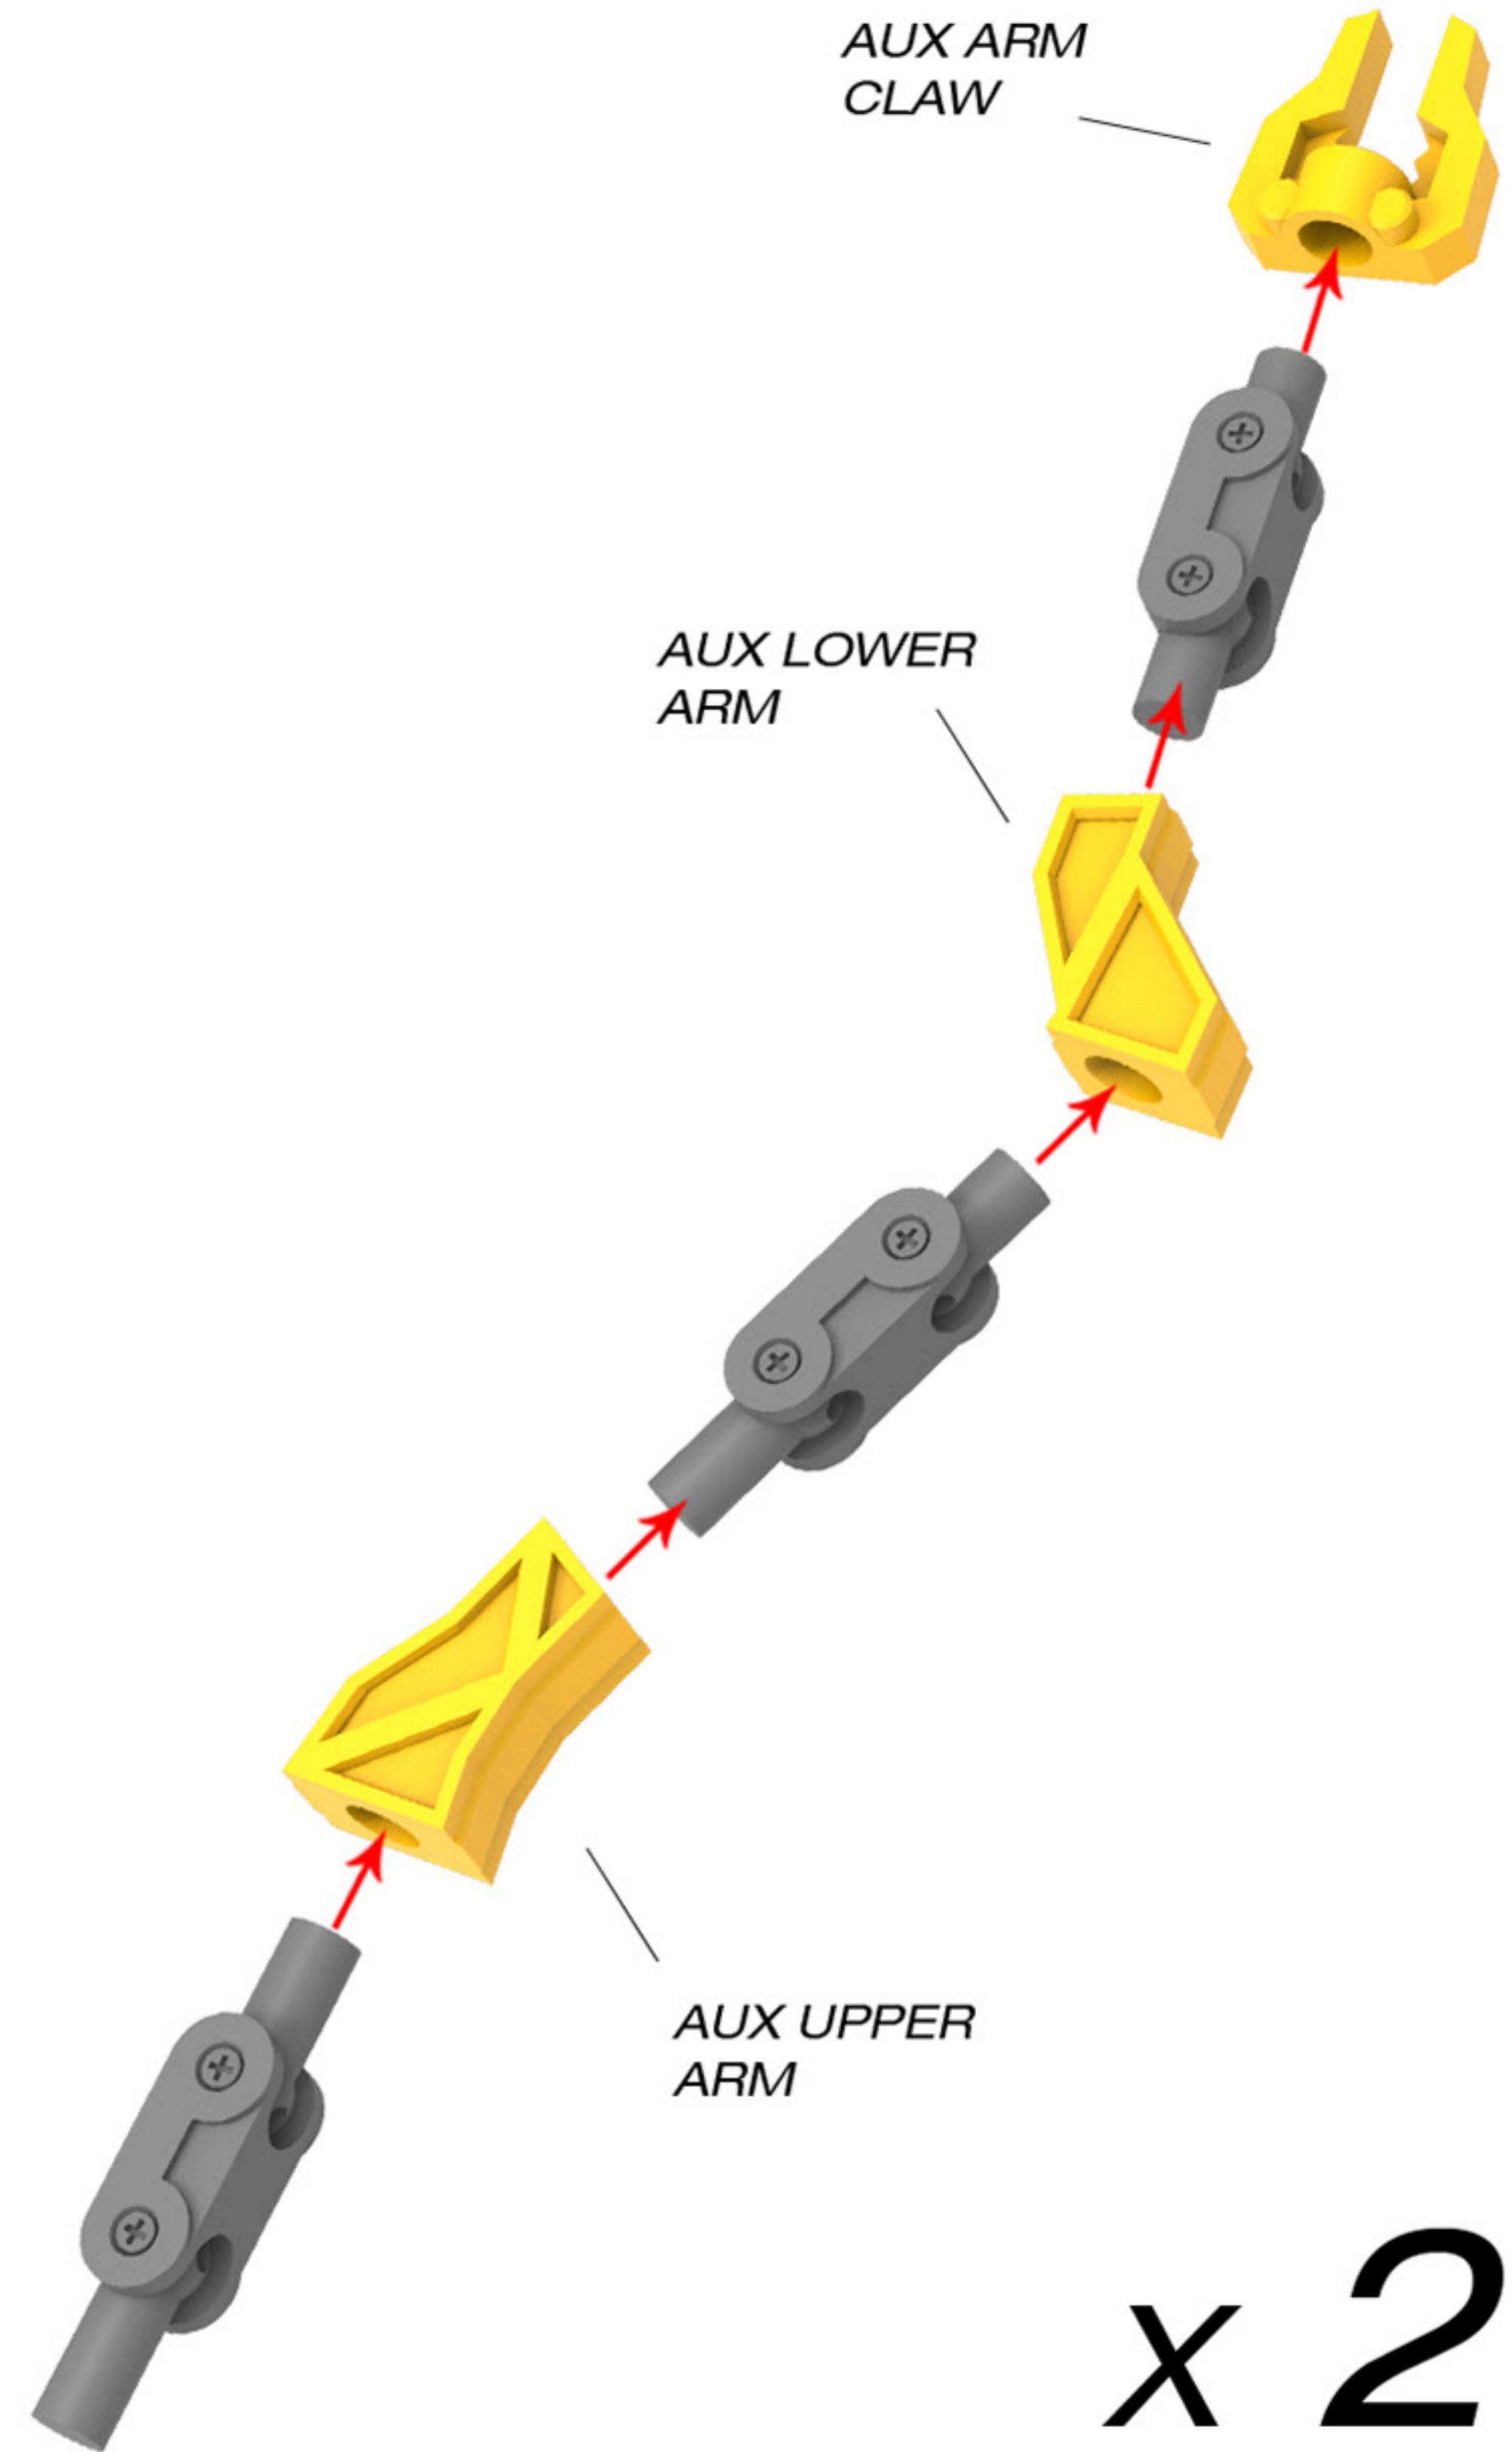

x 2

TORSO, SPINE & PELVIS ARMOR CHECKLIST

PELVIS ARMOR

RIGHT CLAVICLE ARMOR

LEFT CLAVICLE ARMOR


SPINE FRAME ARMOR

CHEST CENTER ARMOR


TORSO CENTER MECHA

BACKPACK


JOINT COG x 2

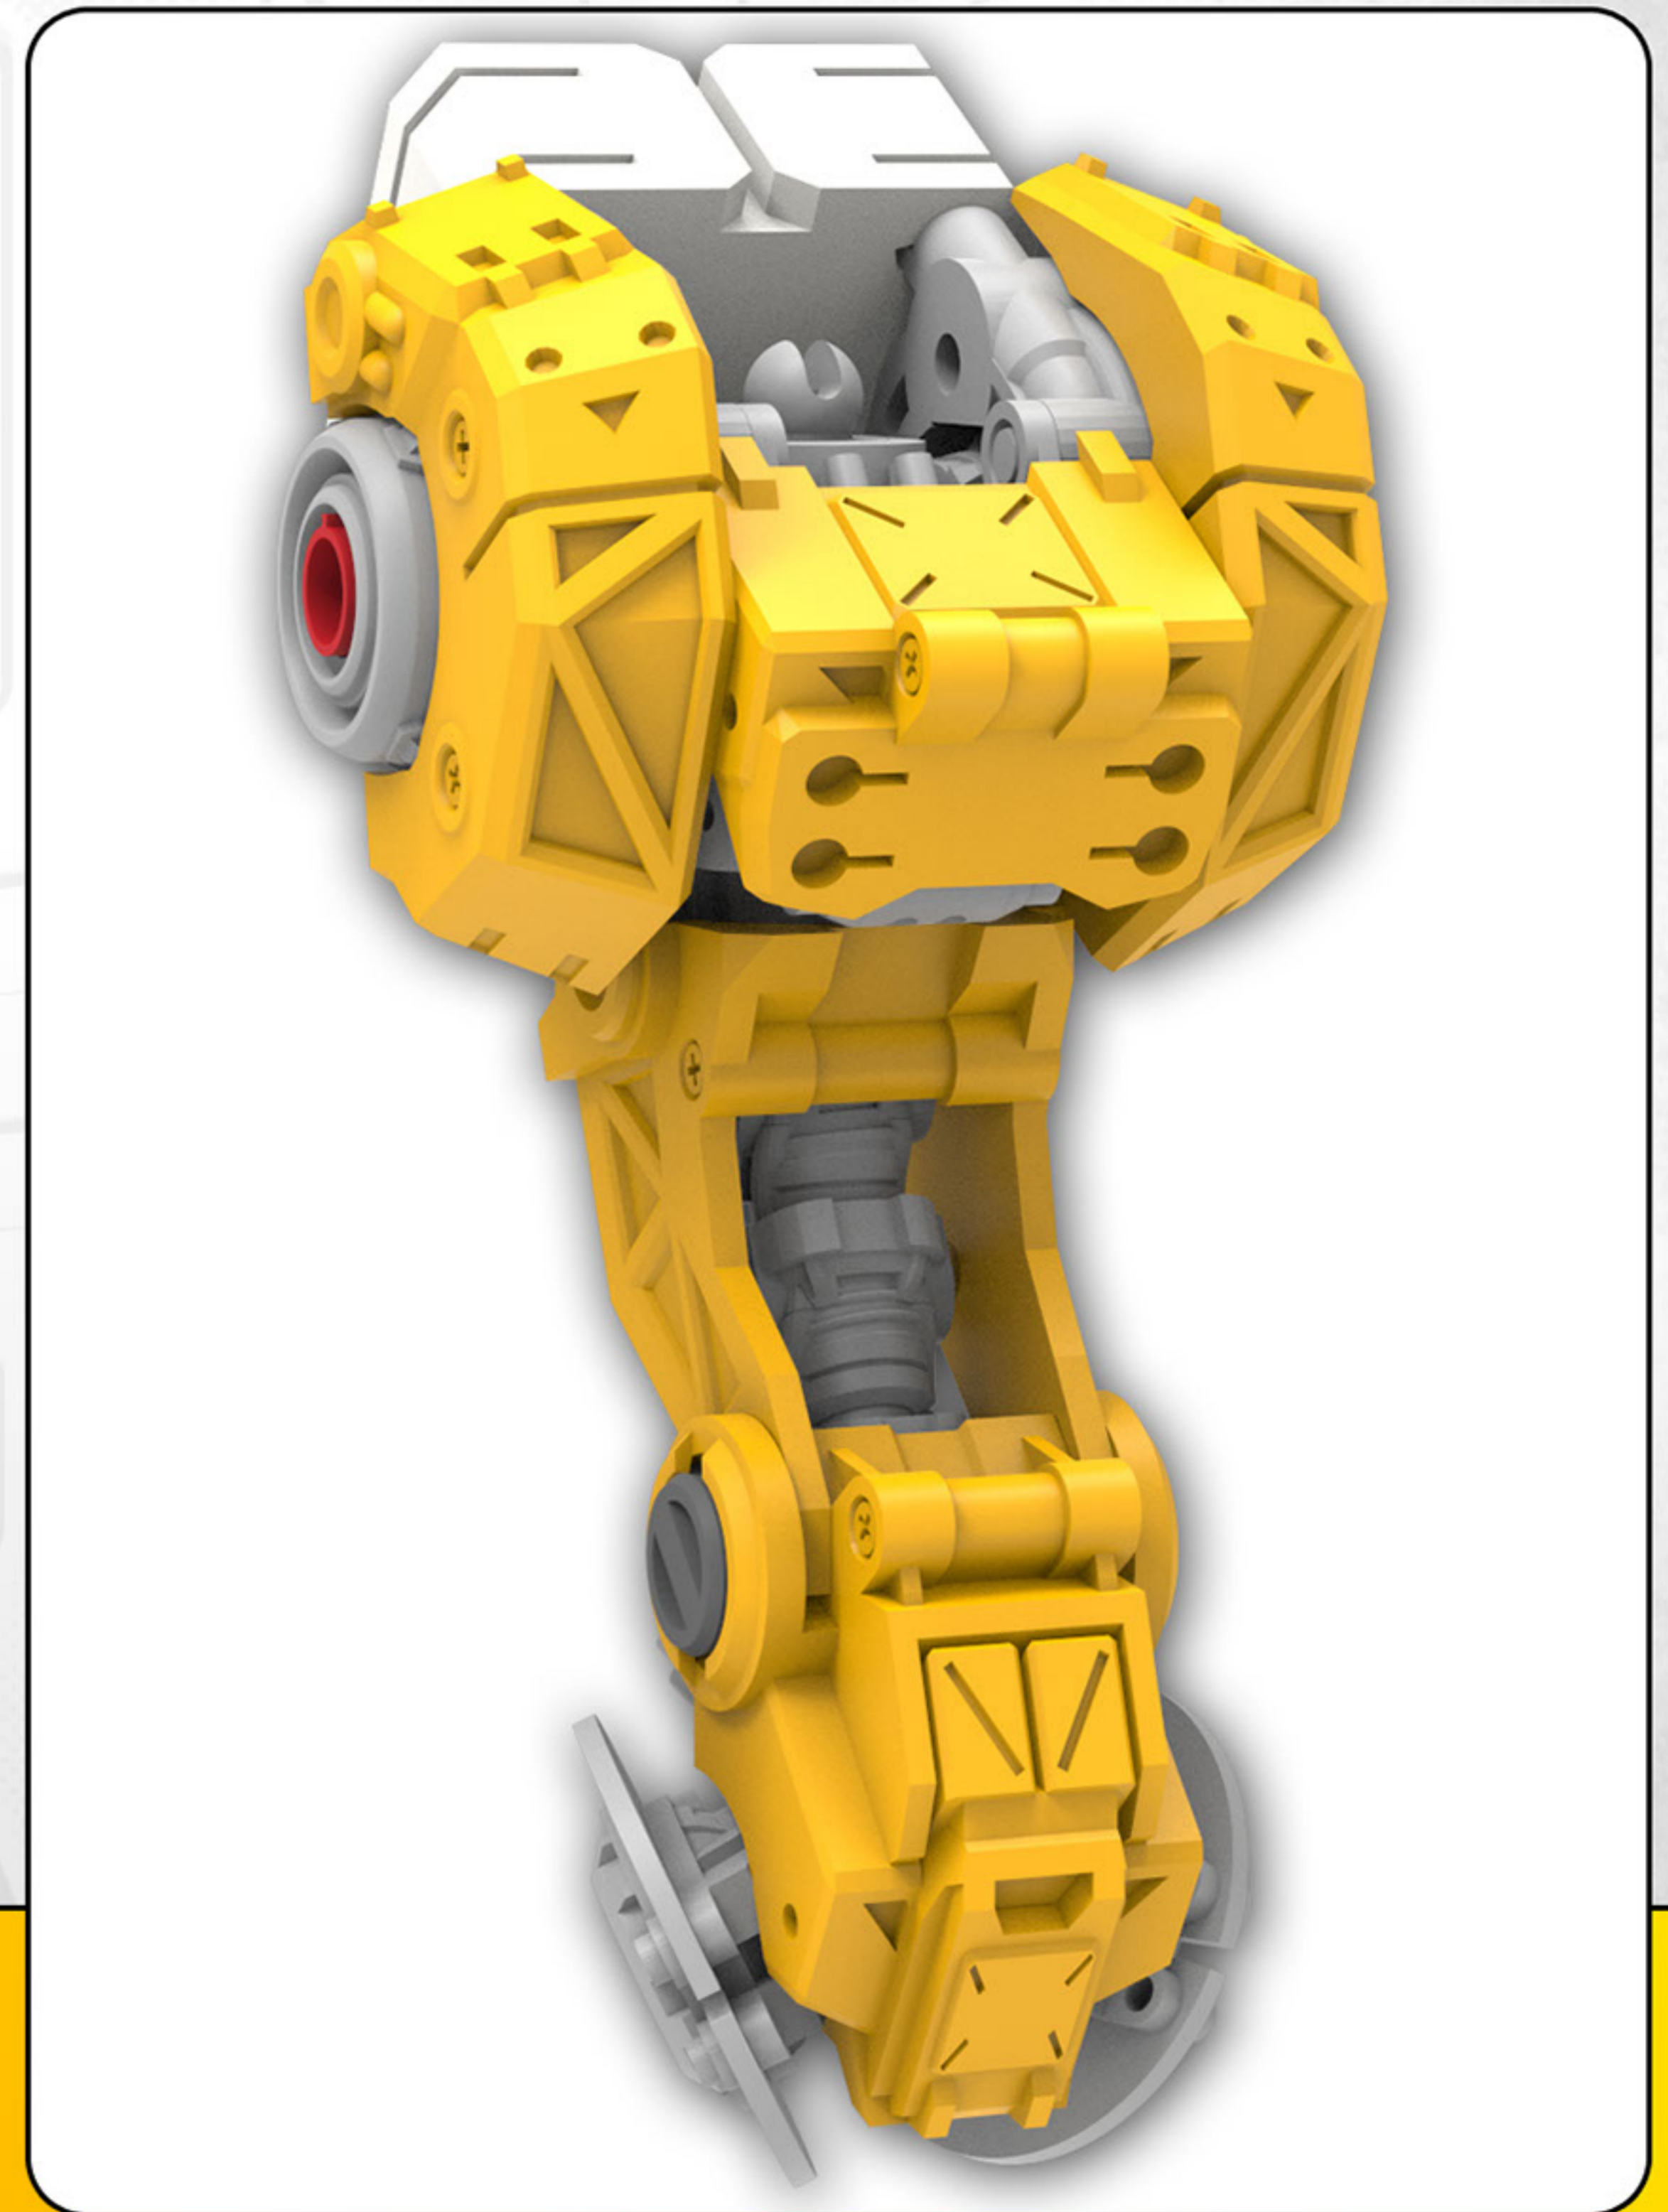

PREP

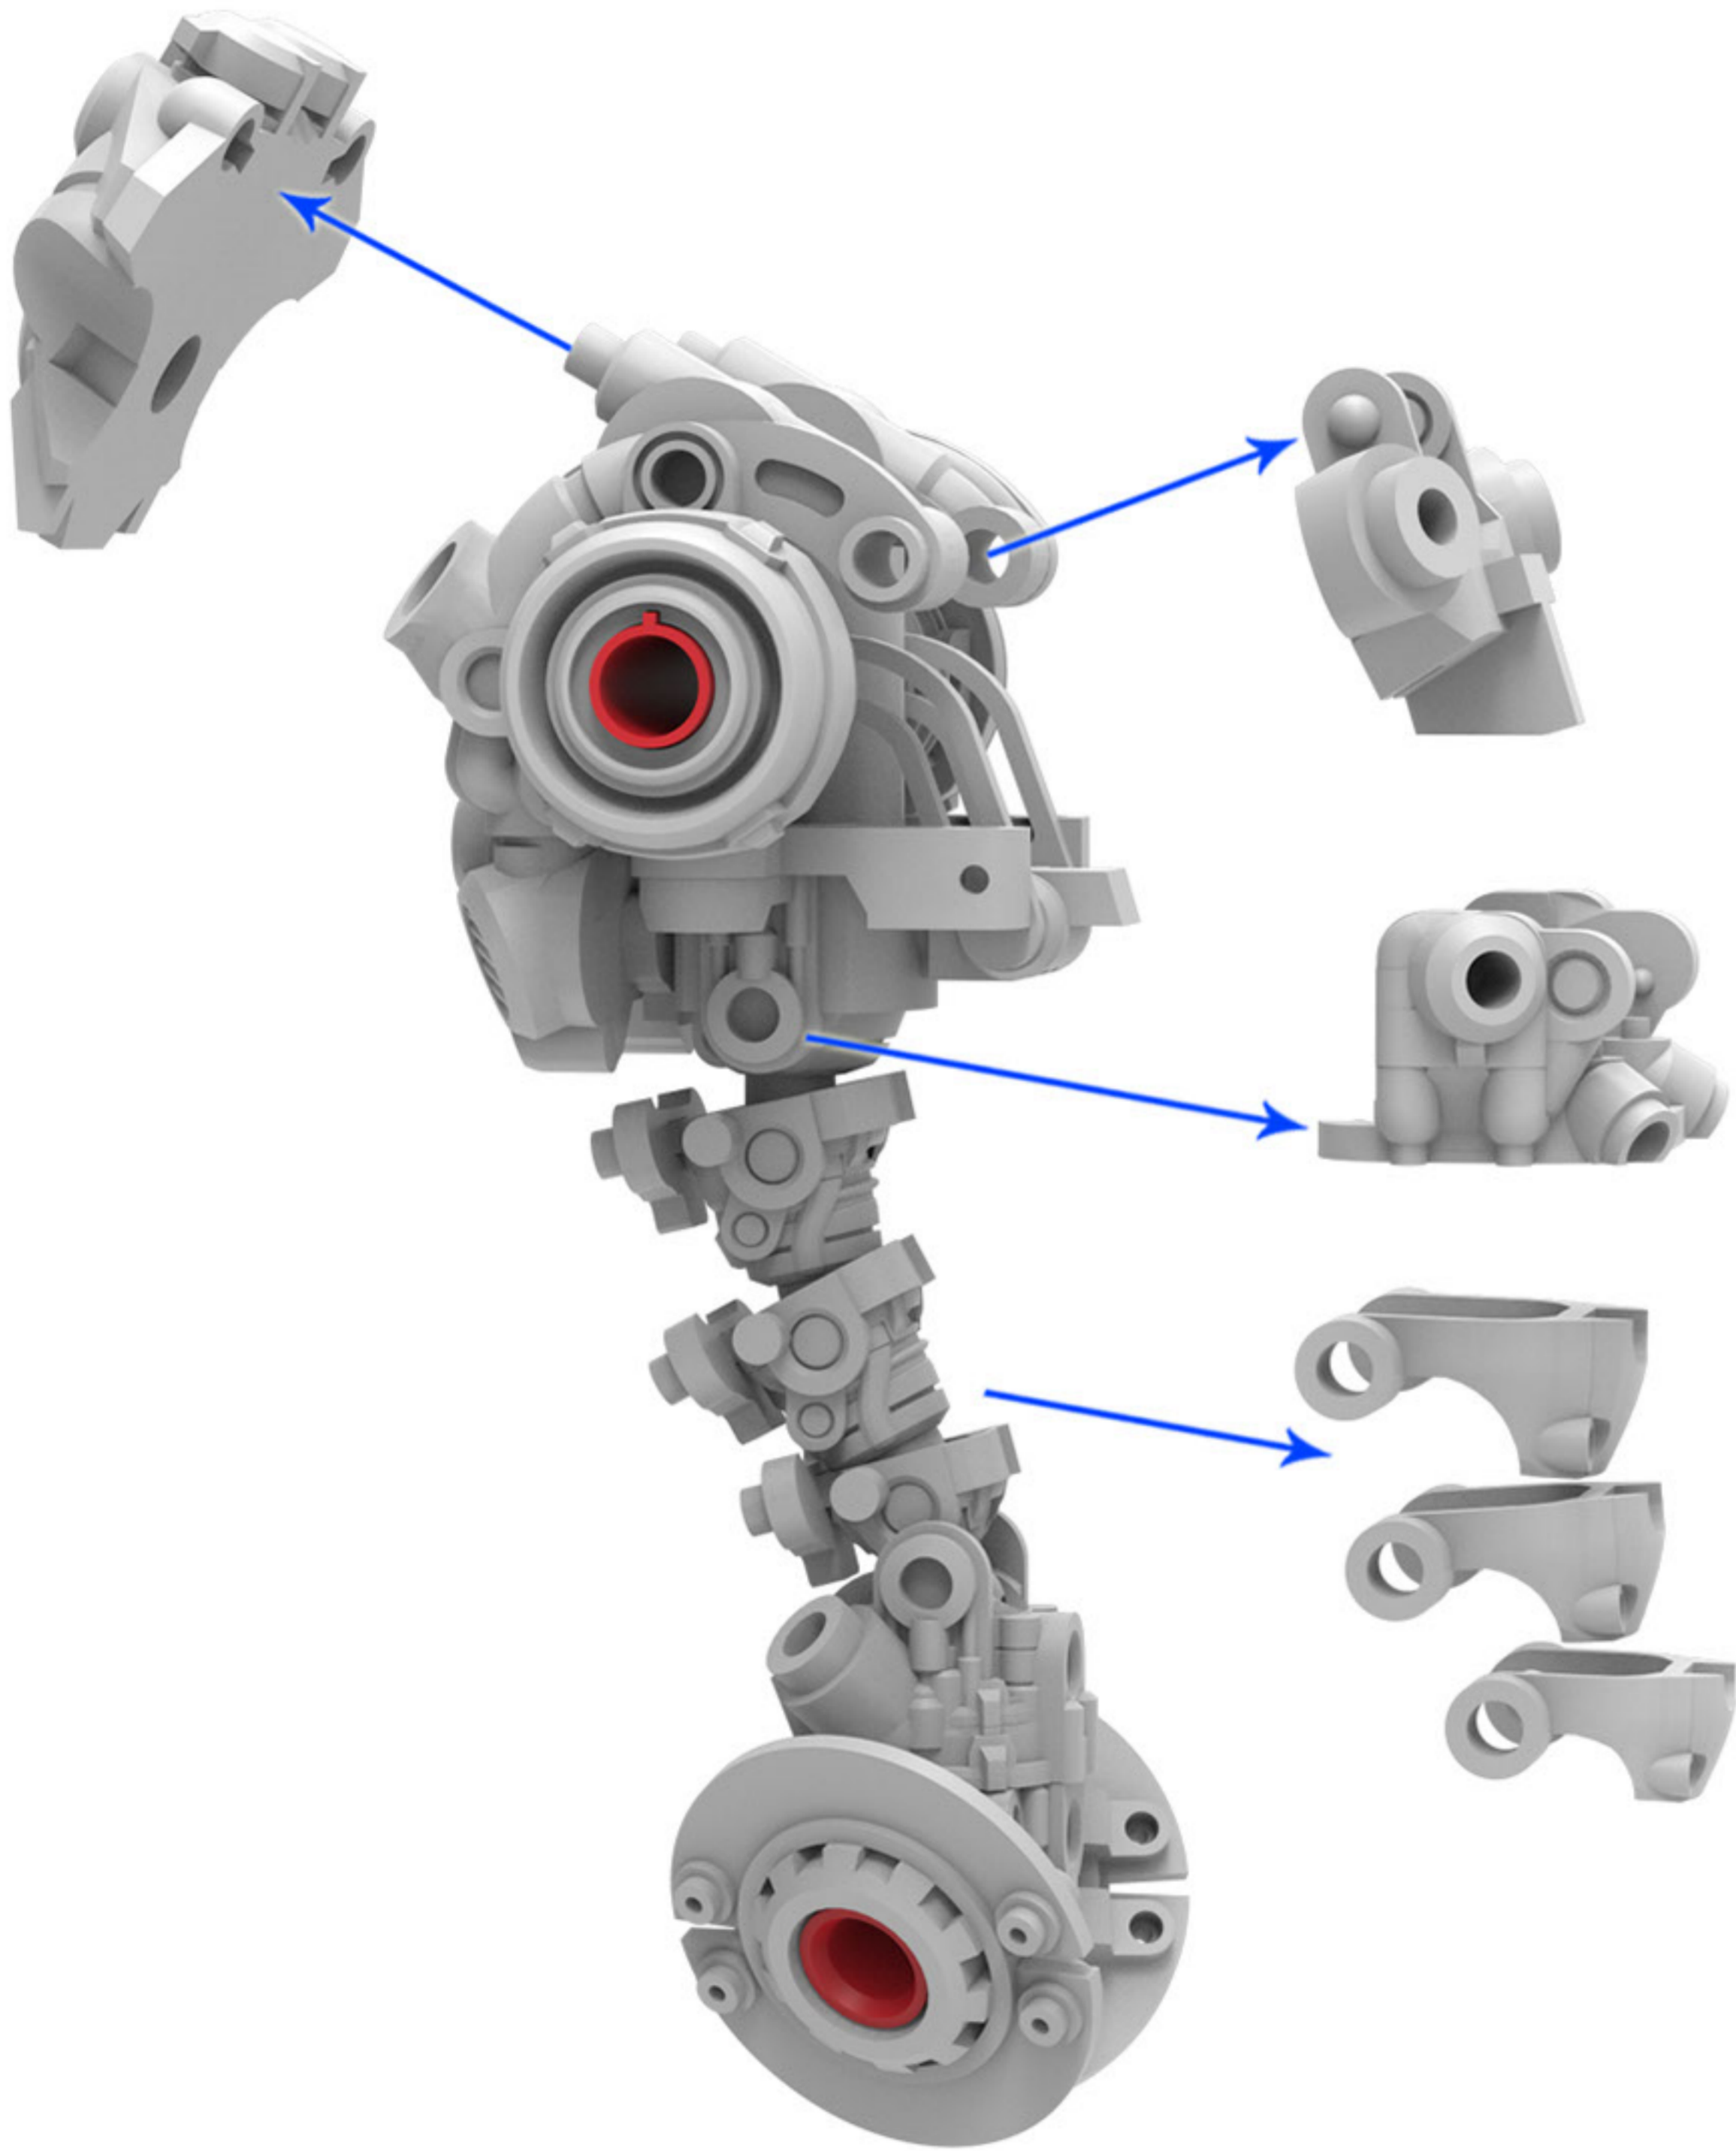

STEP 01

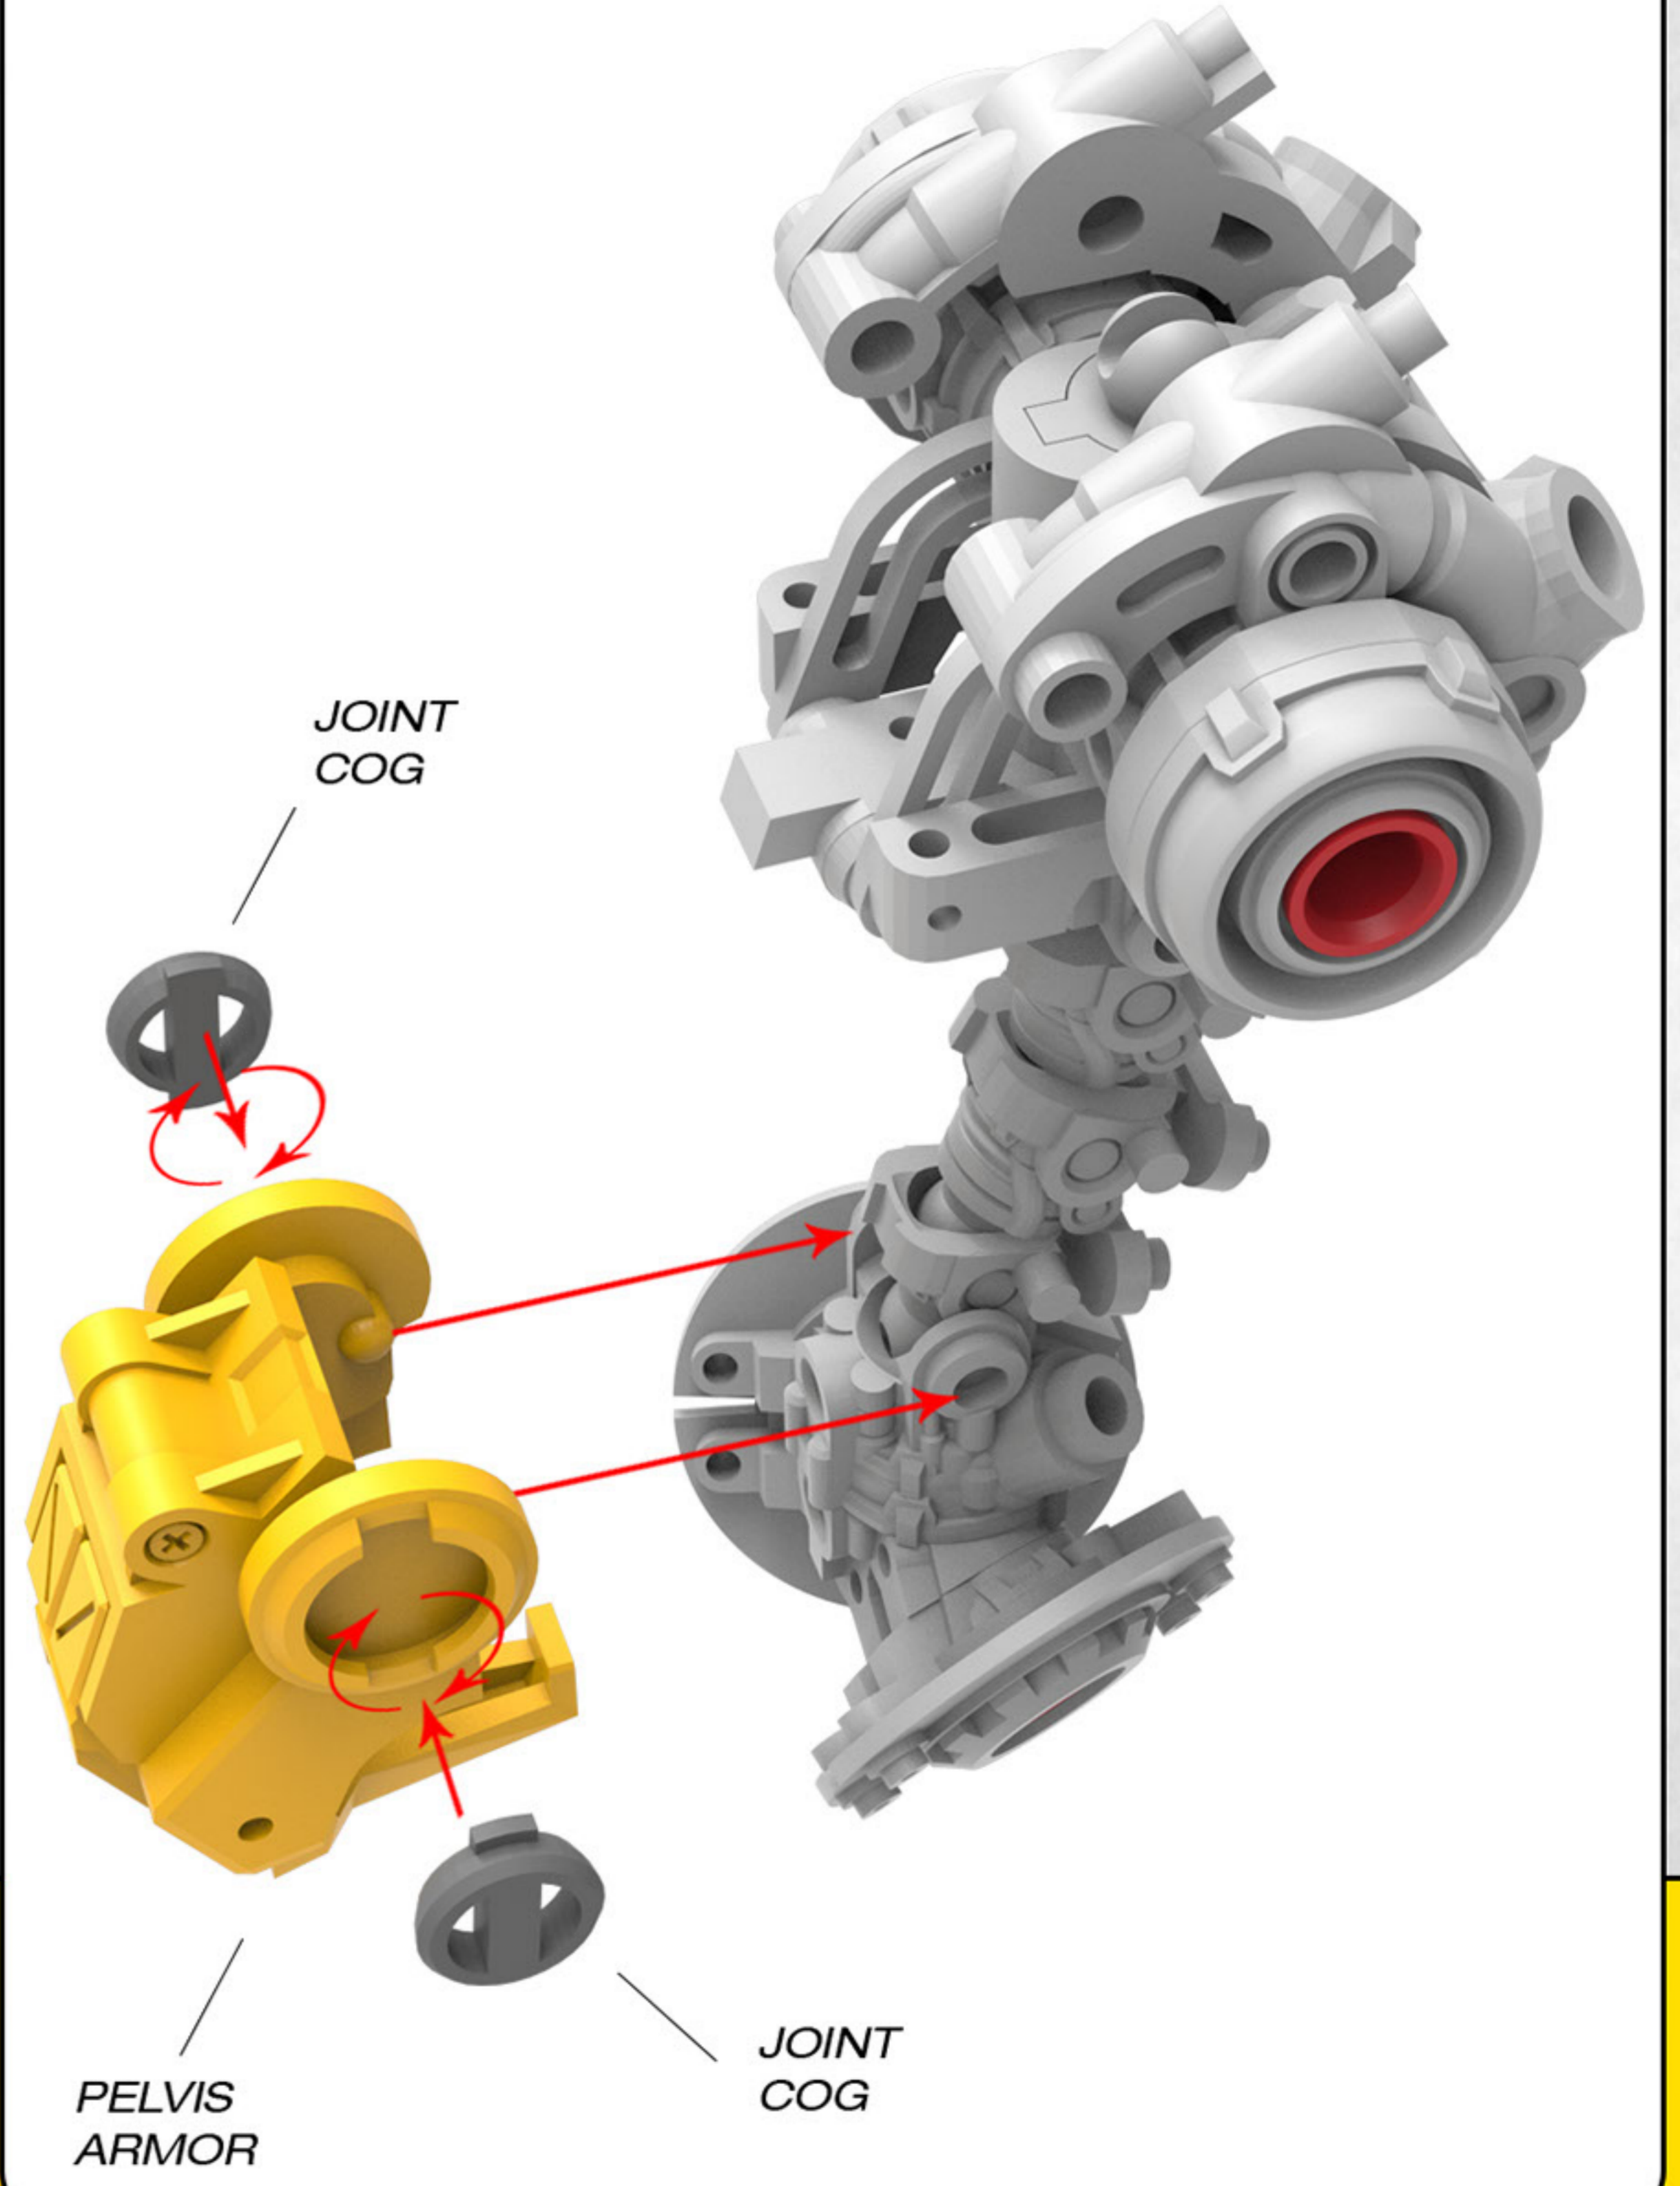


PELVIS
ARMOR


JOINT
COG

STEP 02


SPINE FRAME
ARMOR

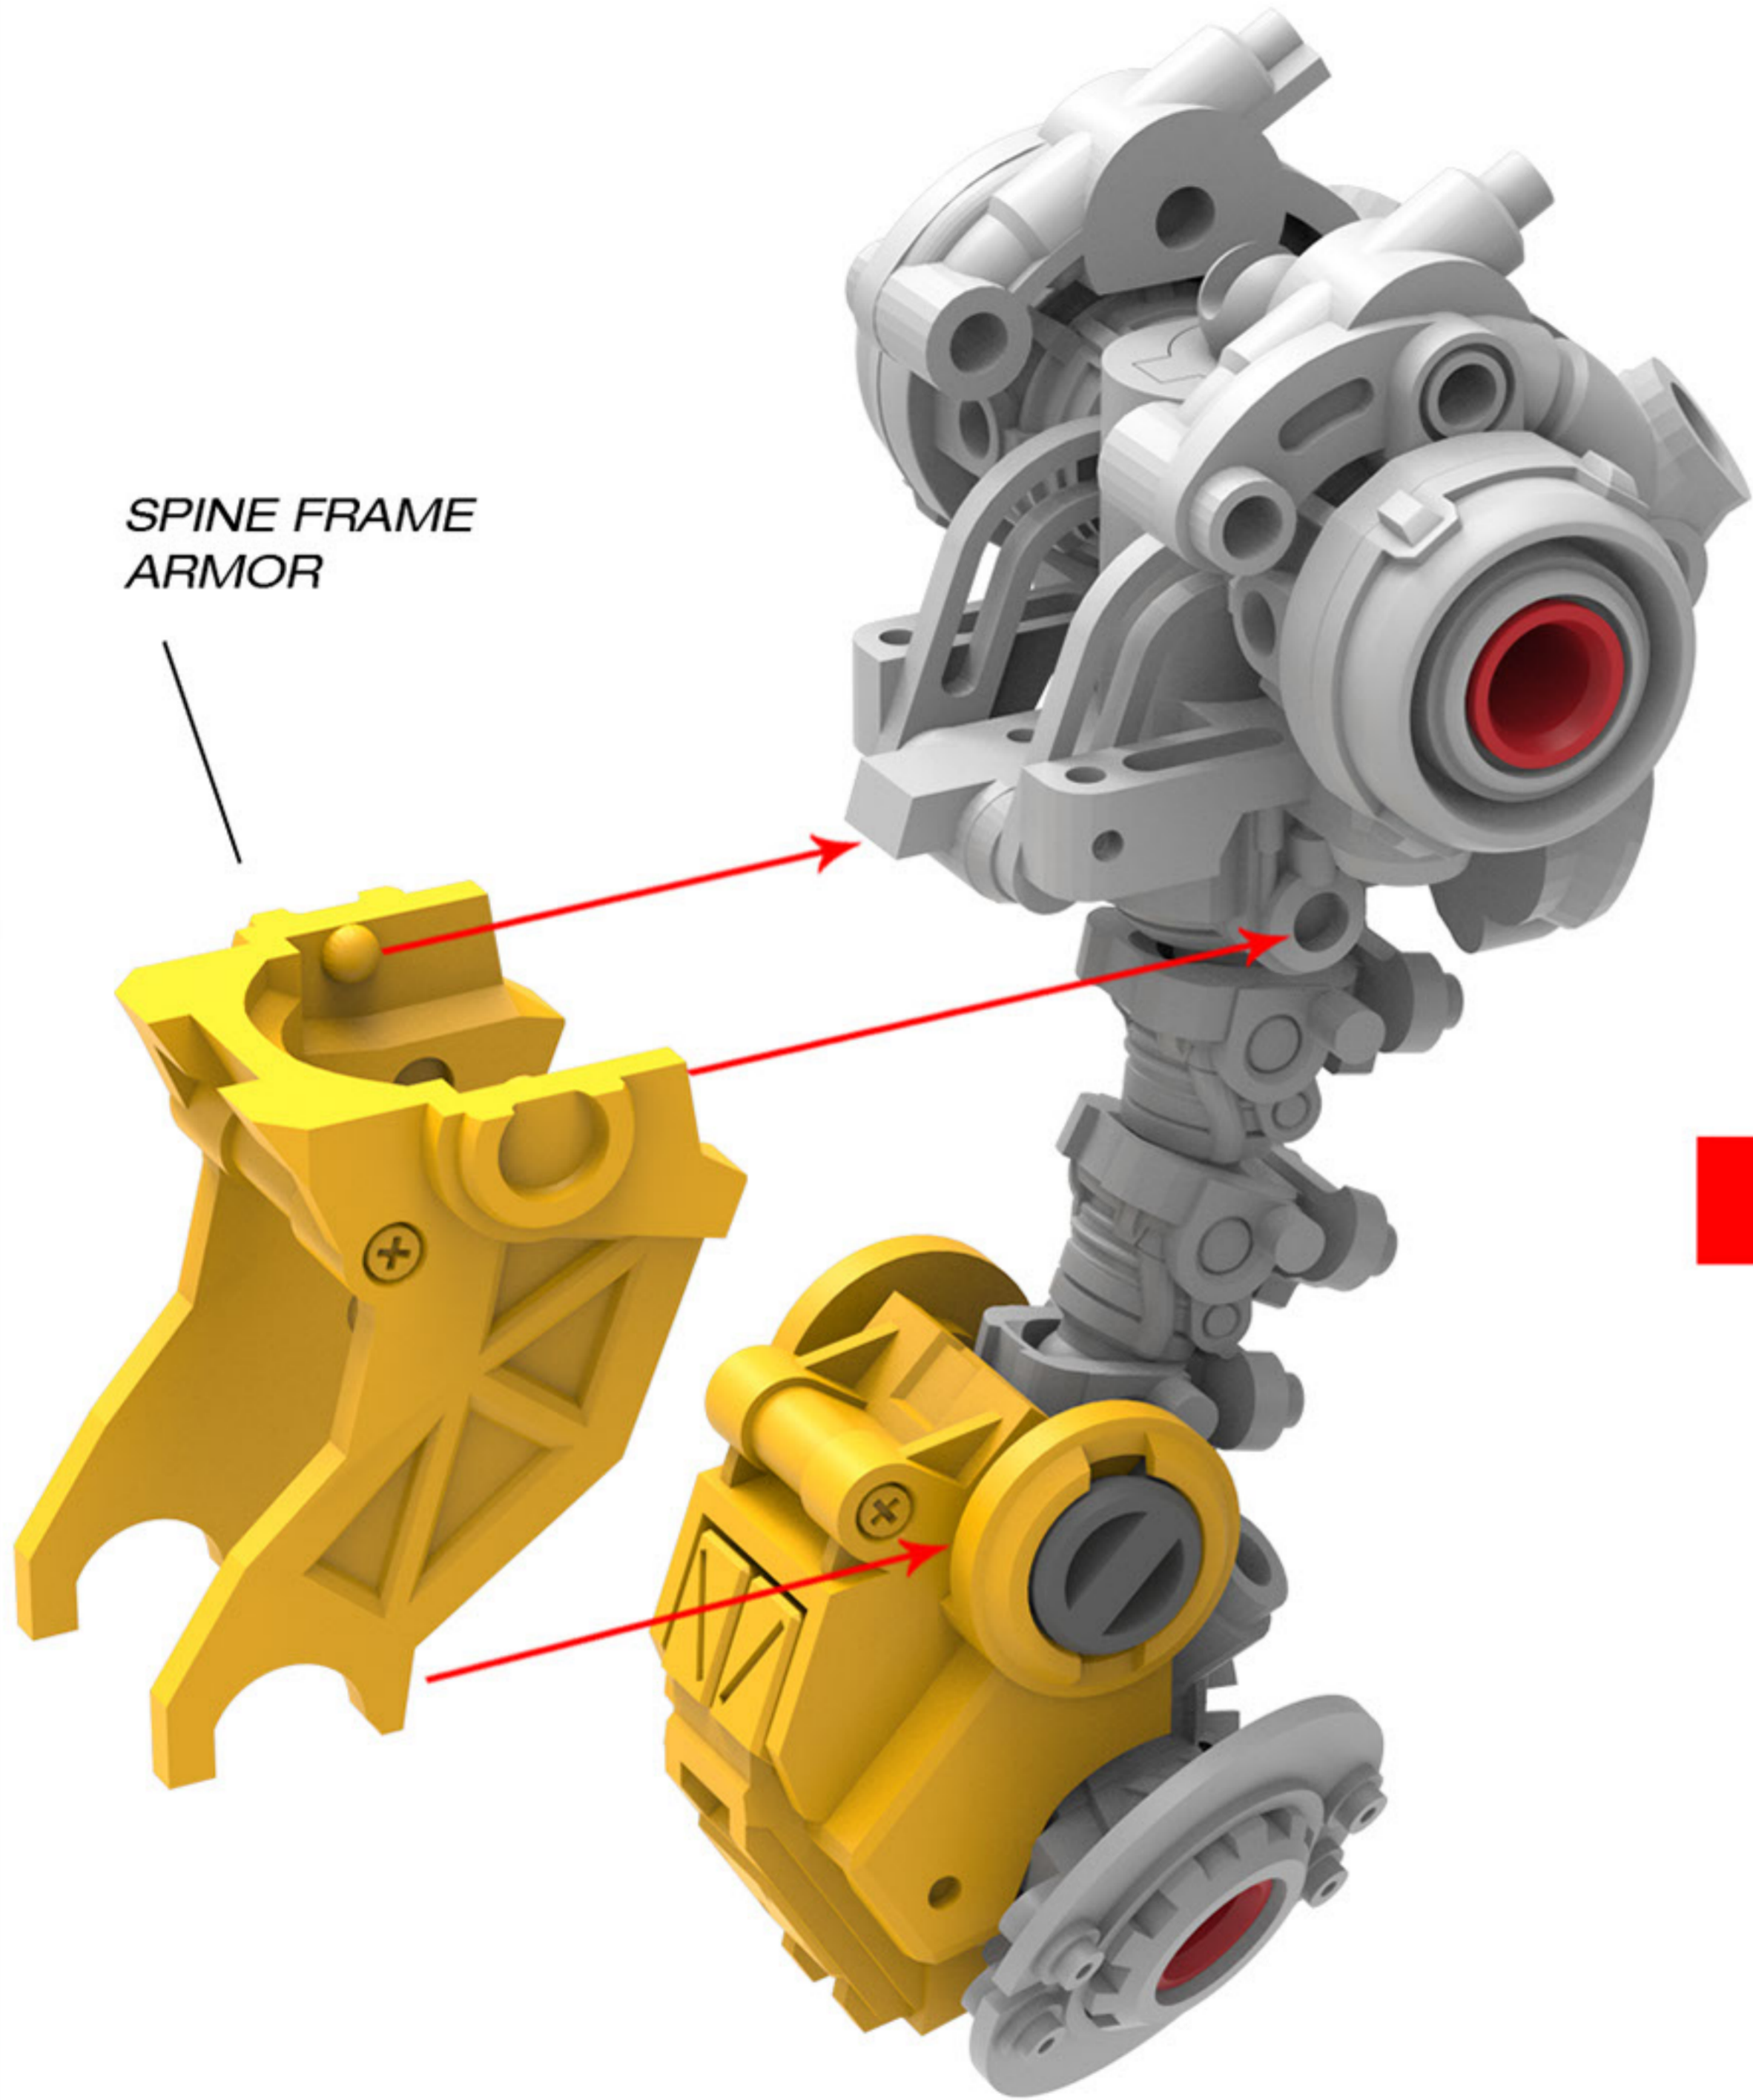


REAR VIEW

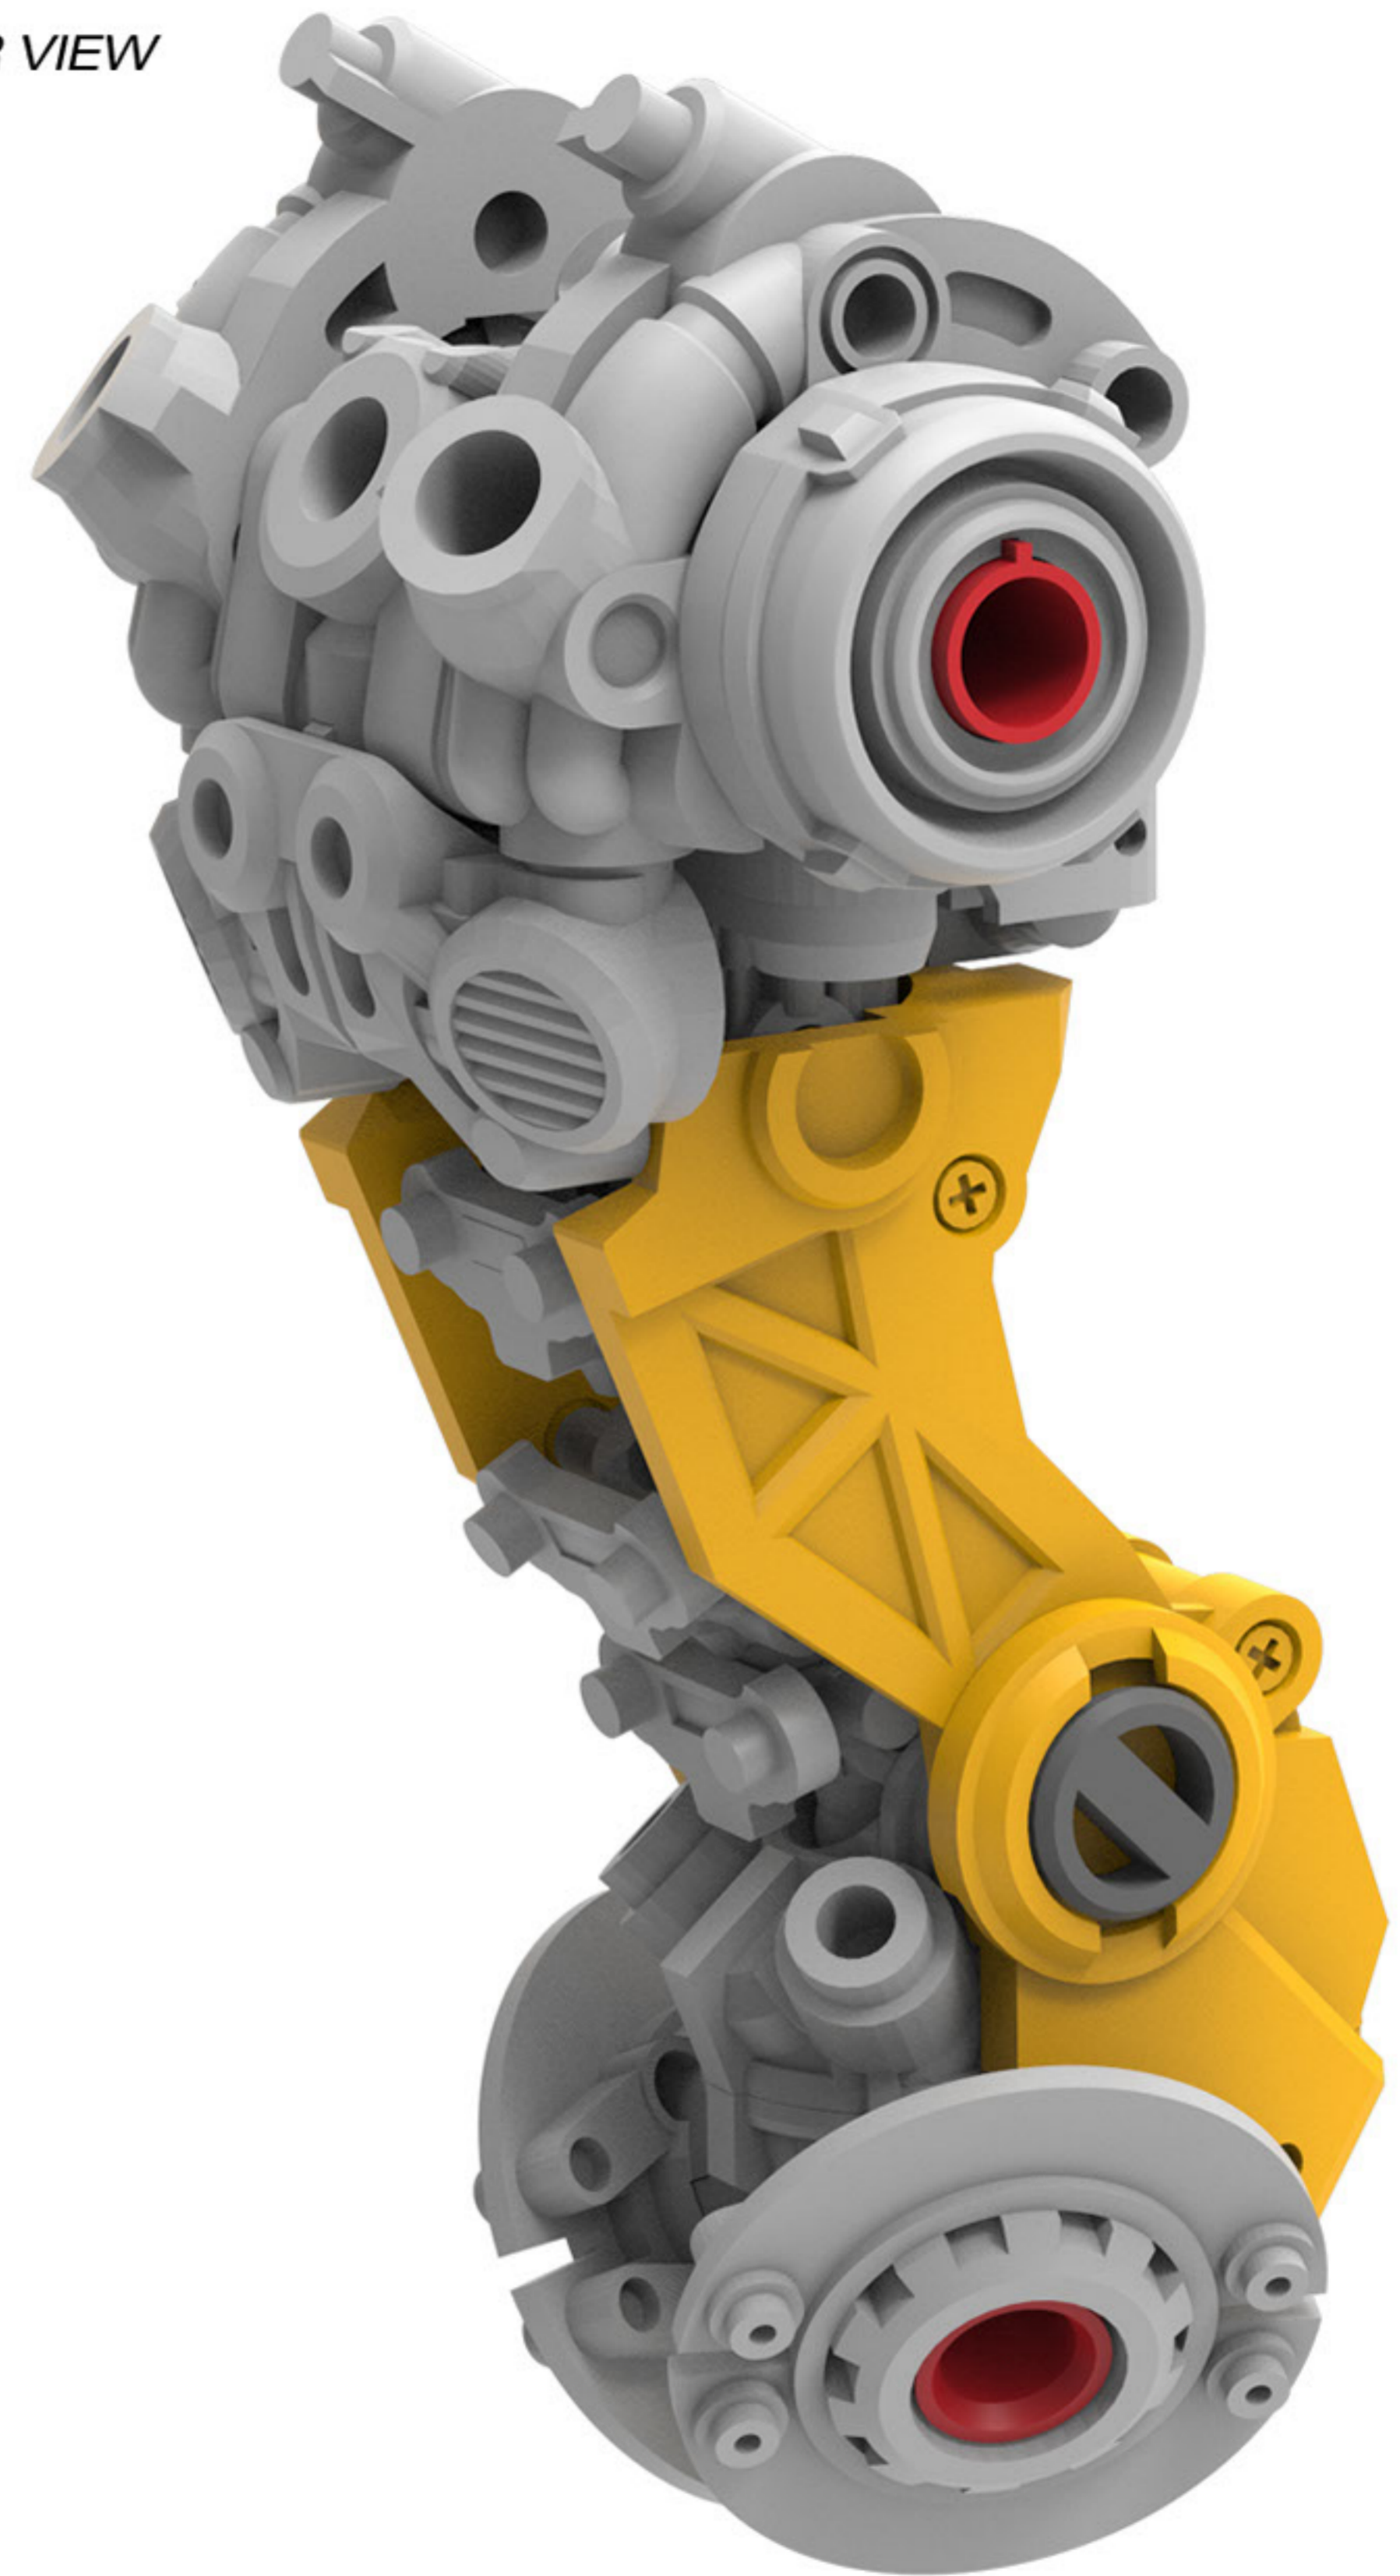


STEP 03

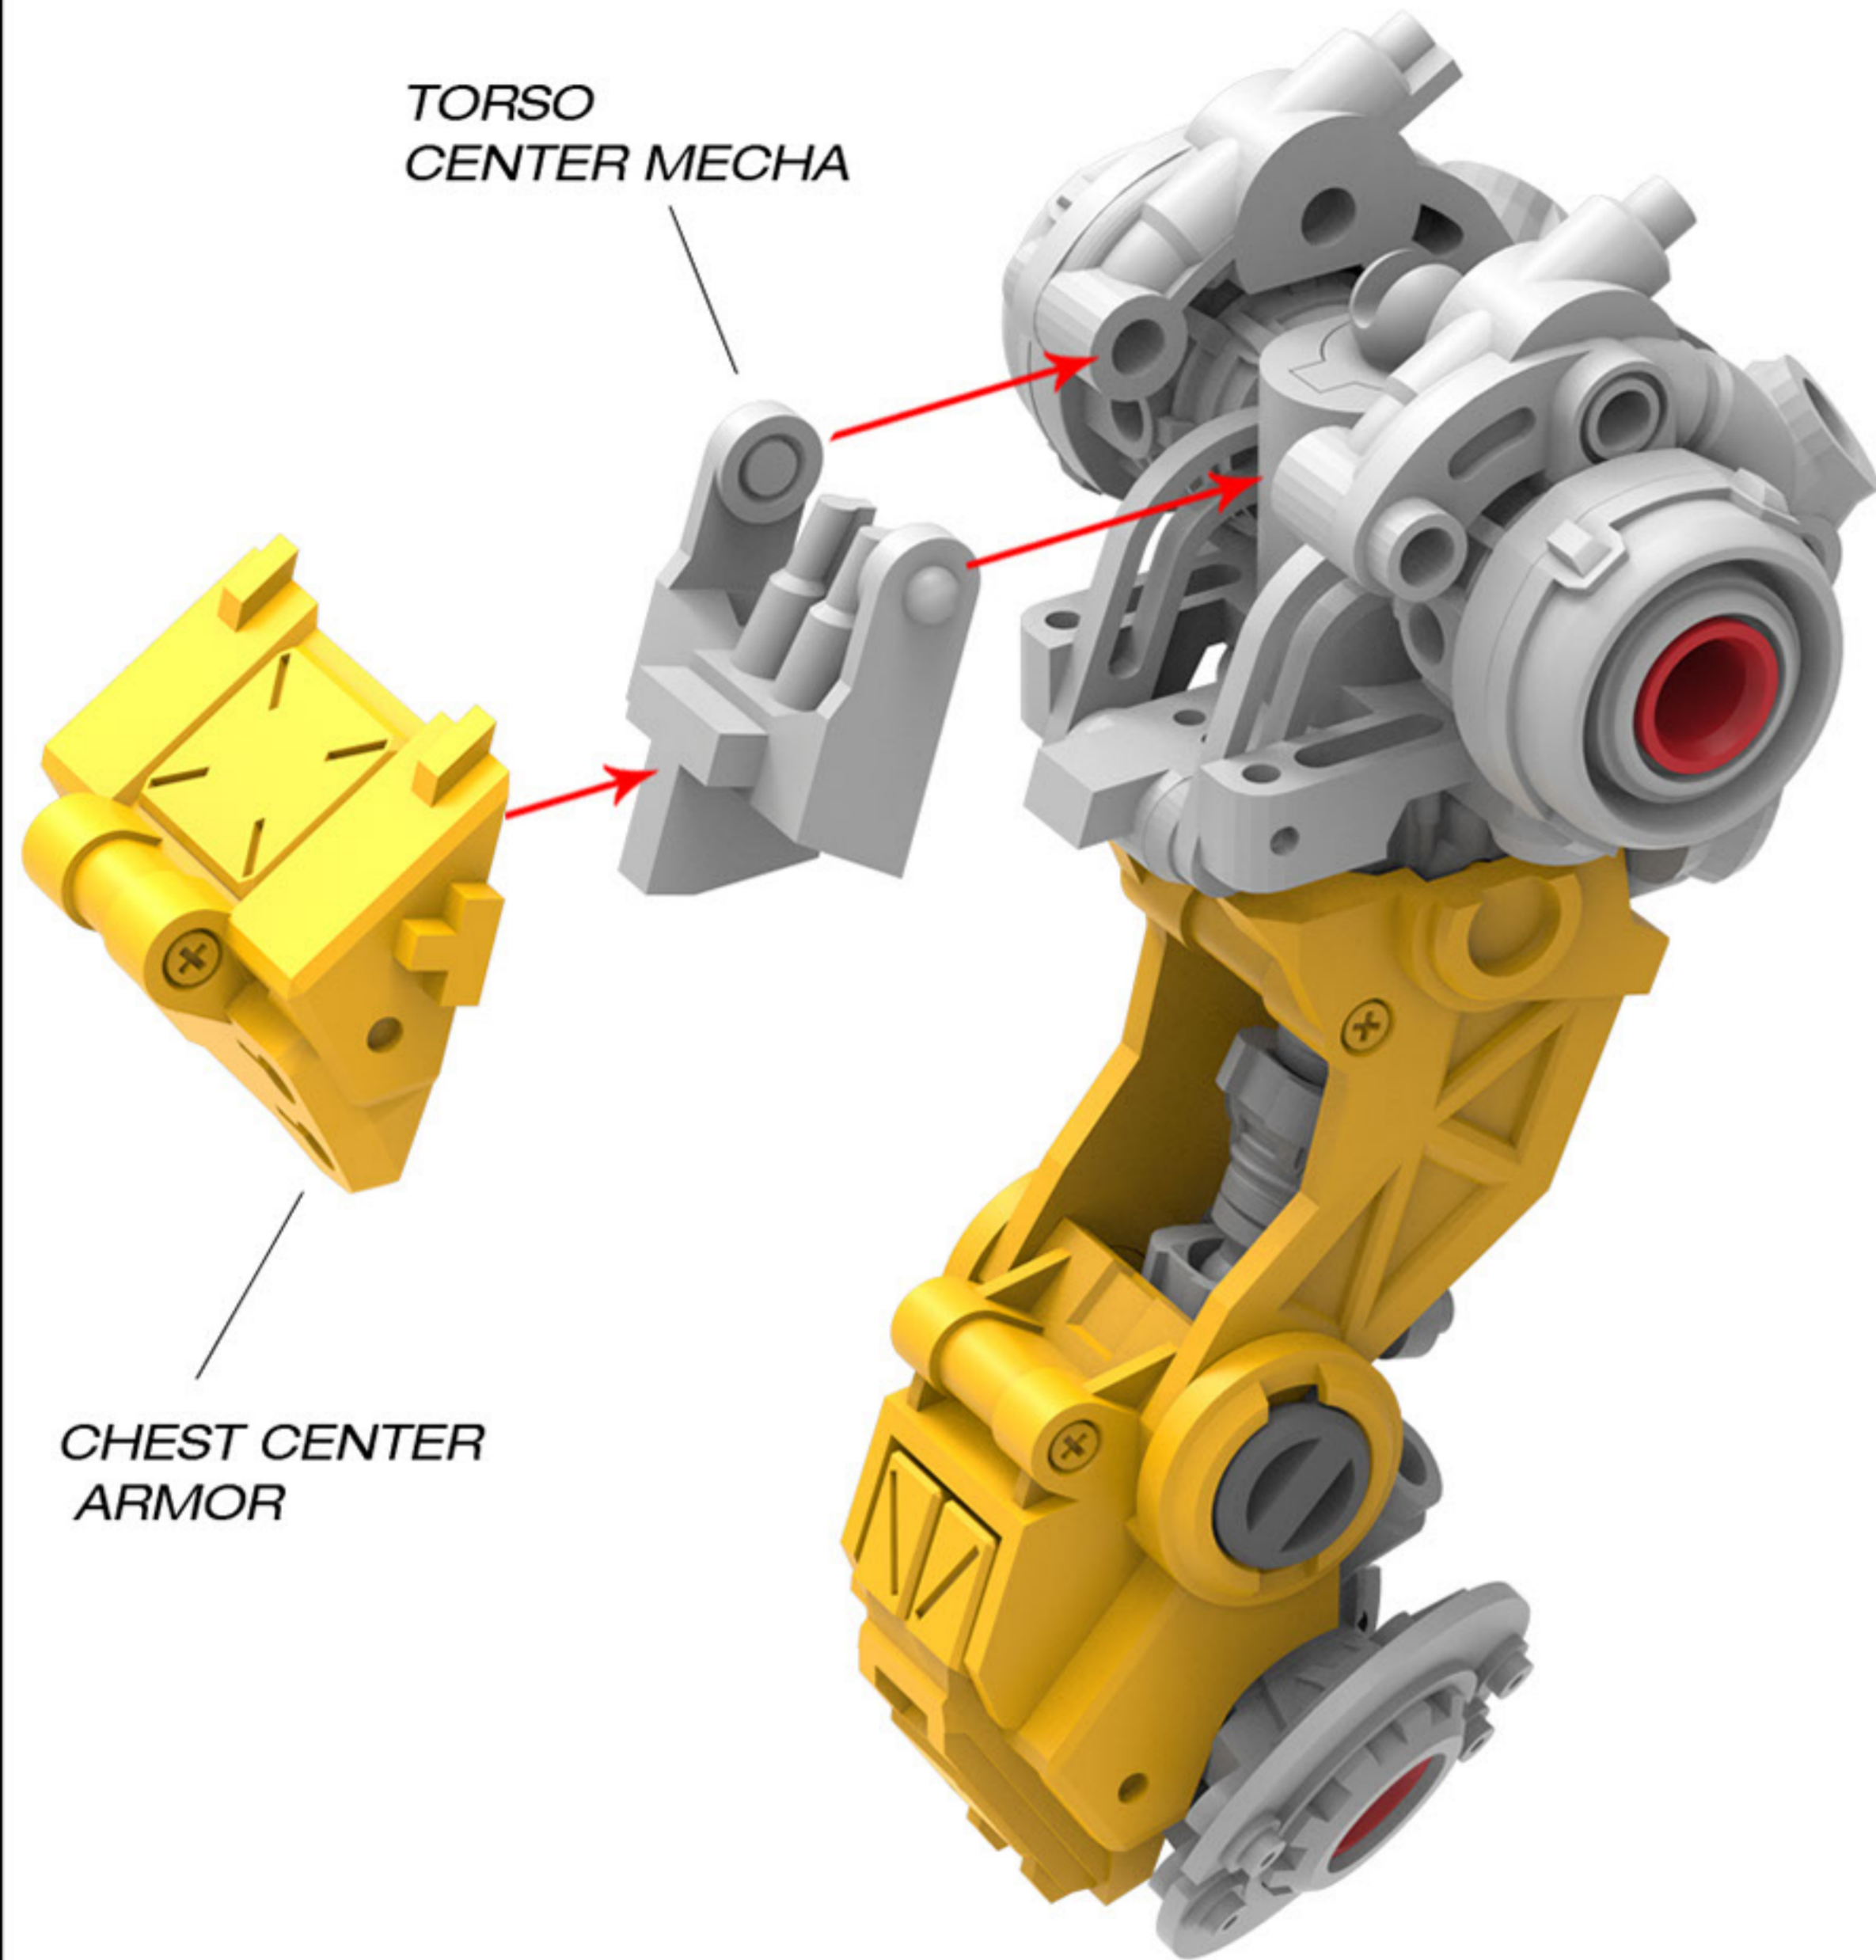


STEP 04

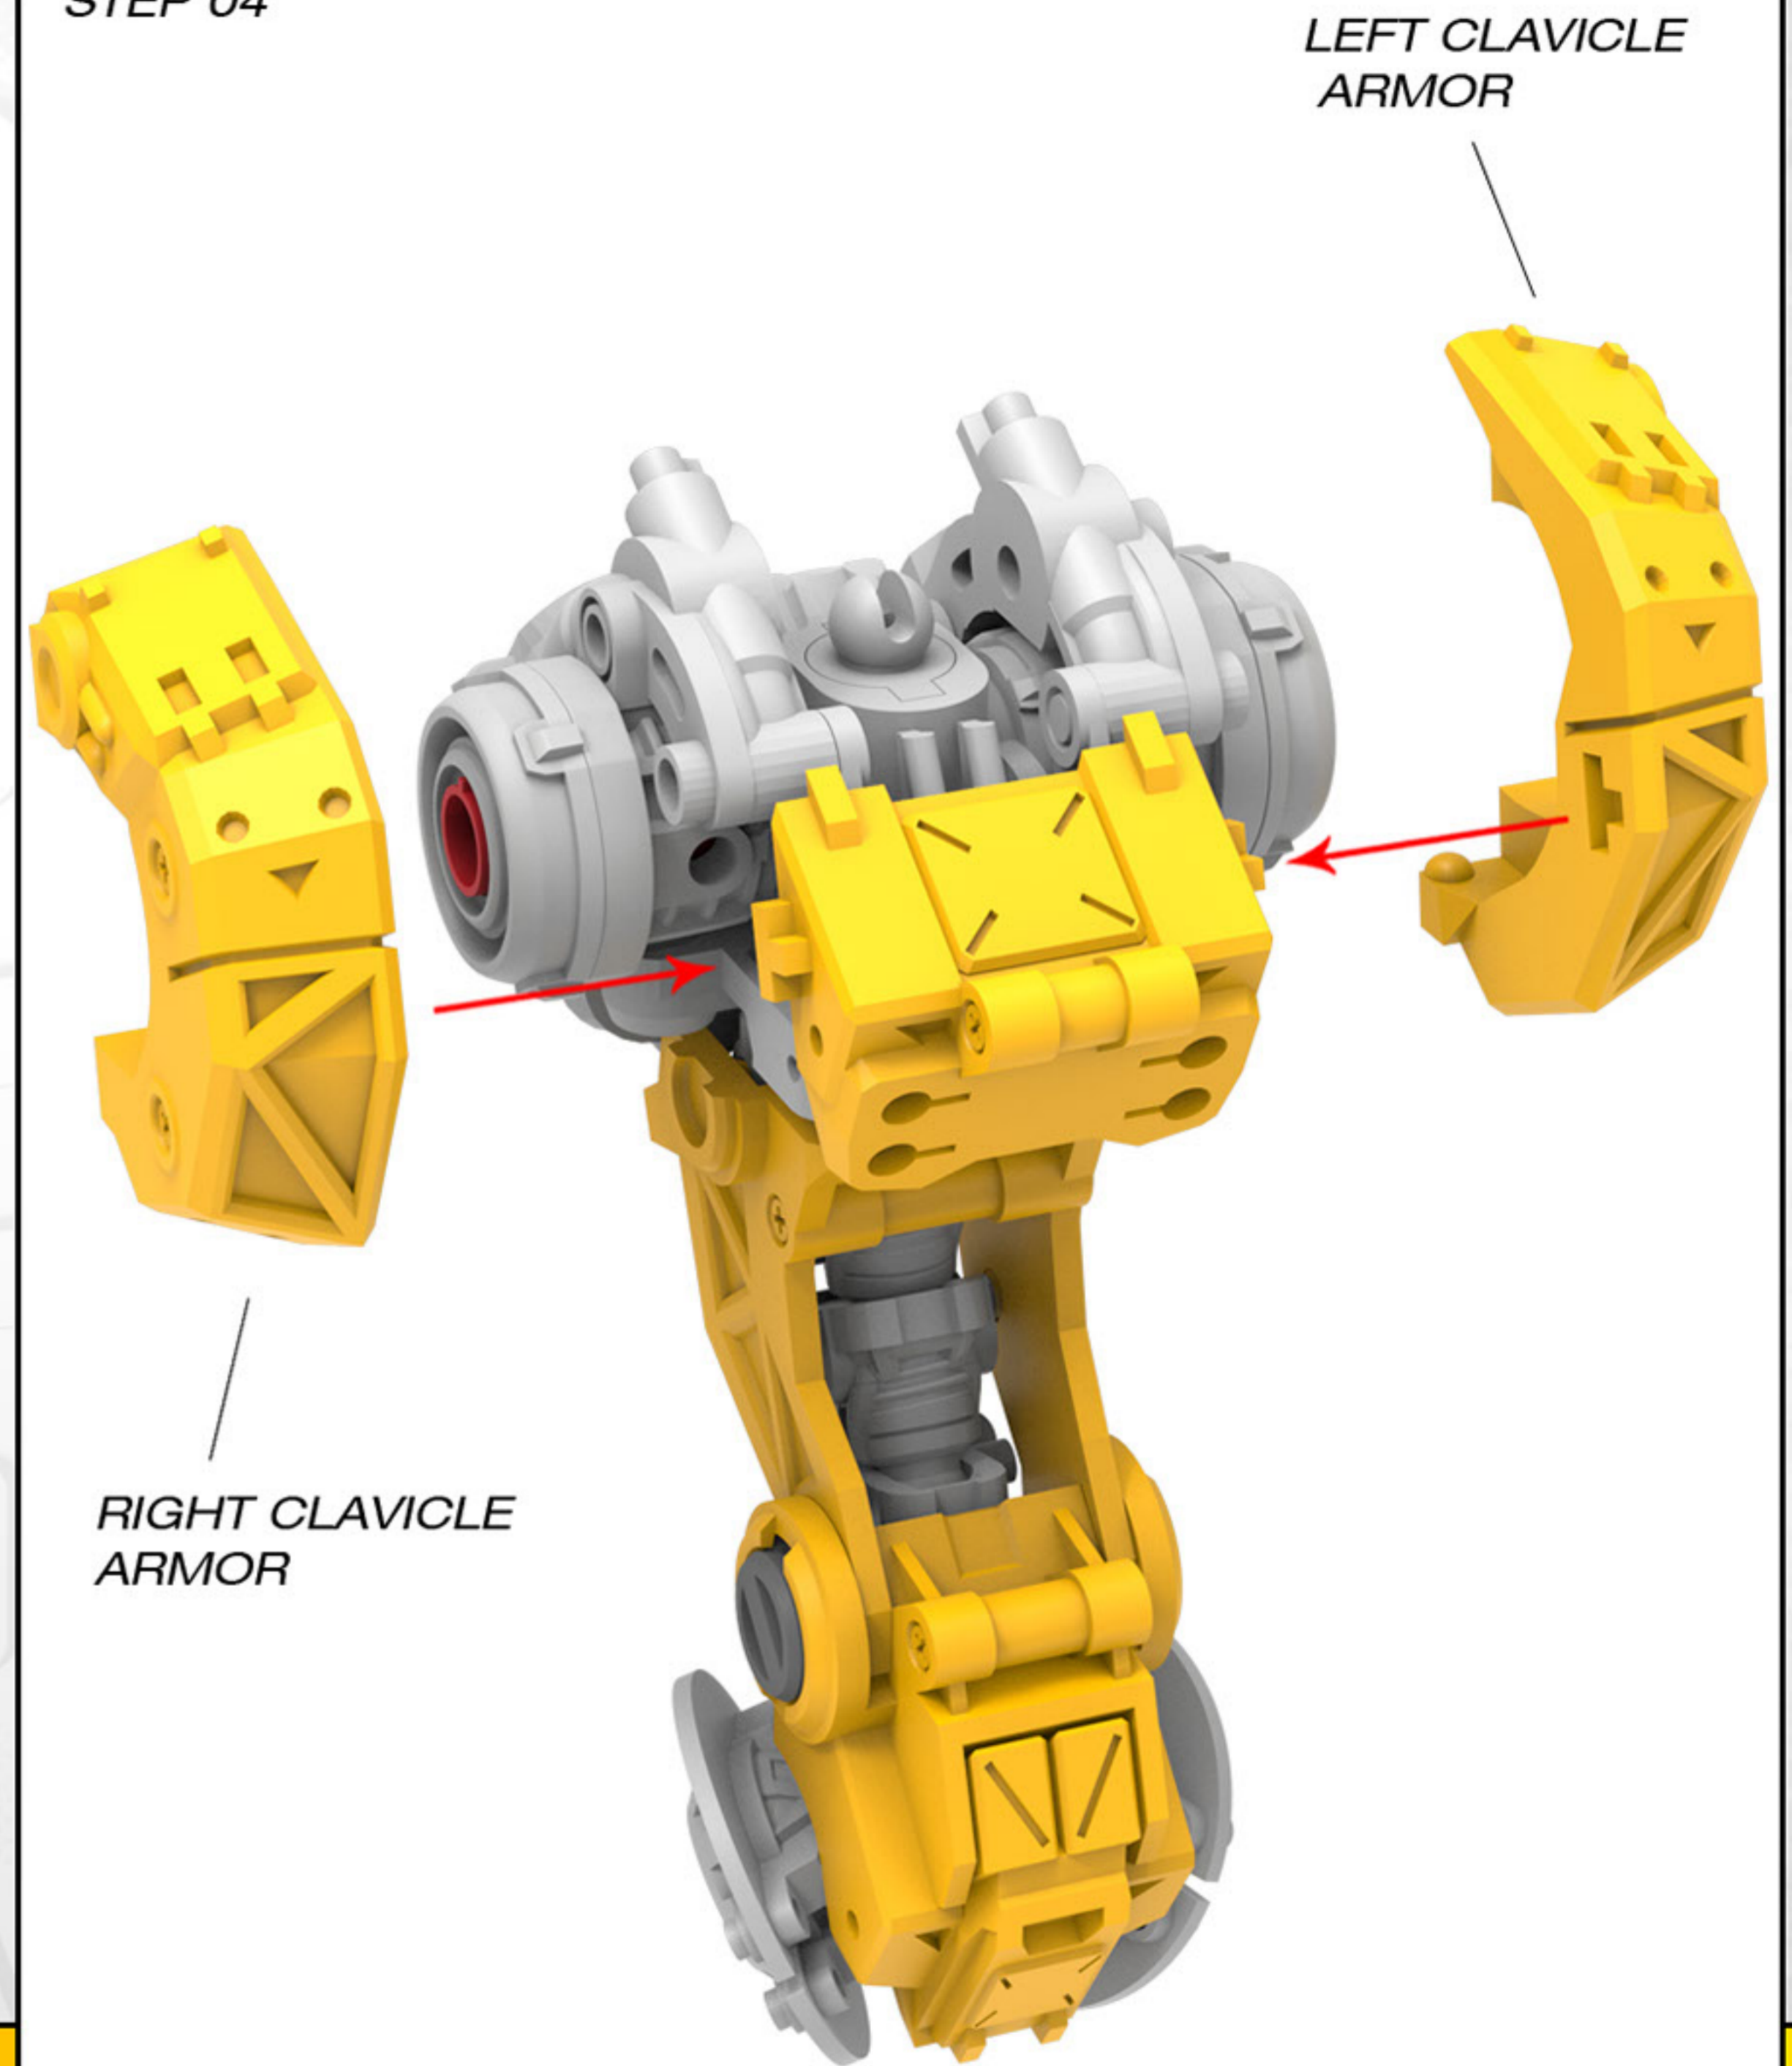


STEP 05

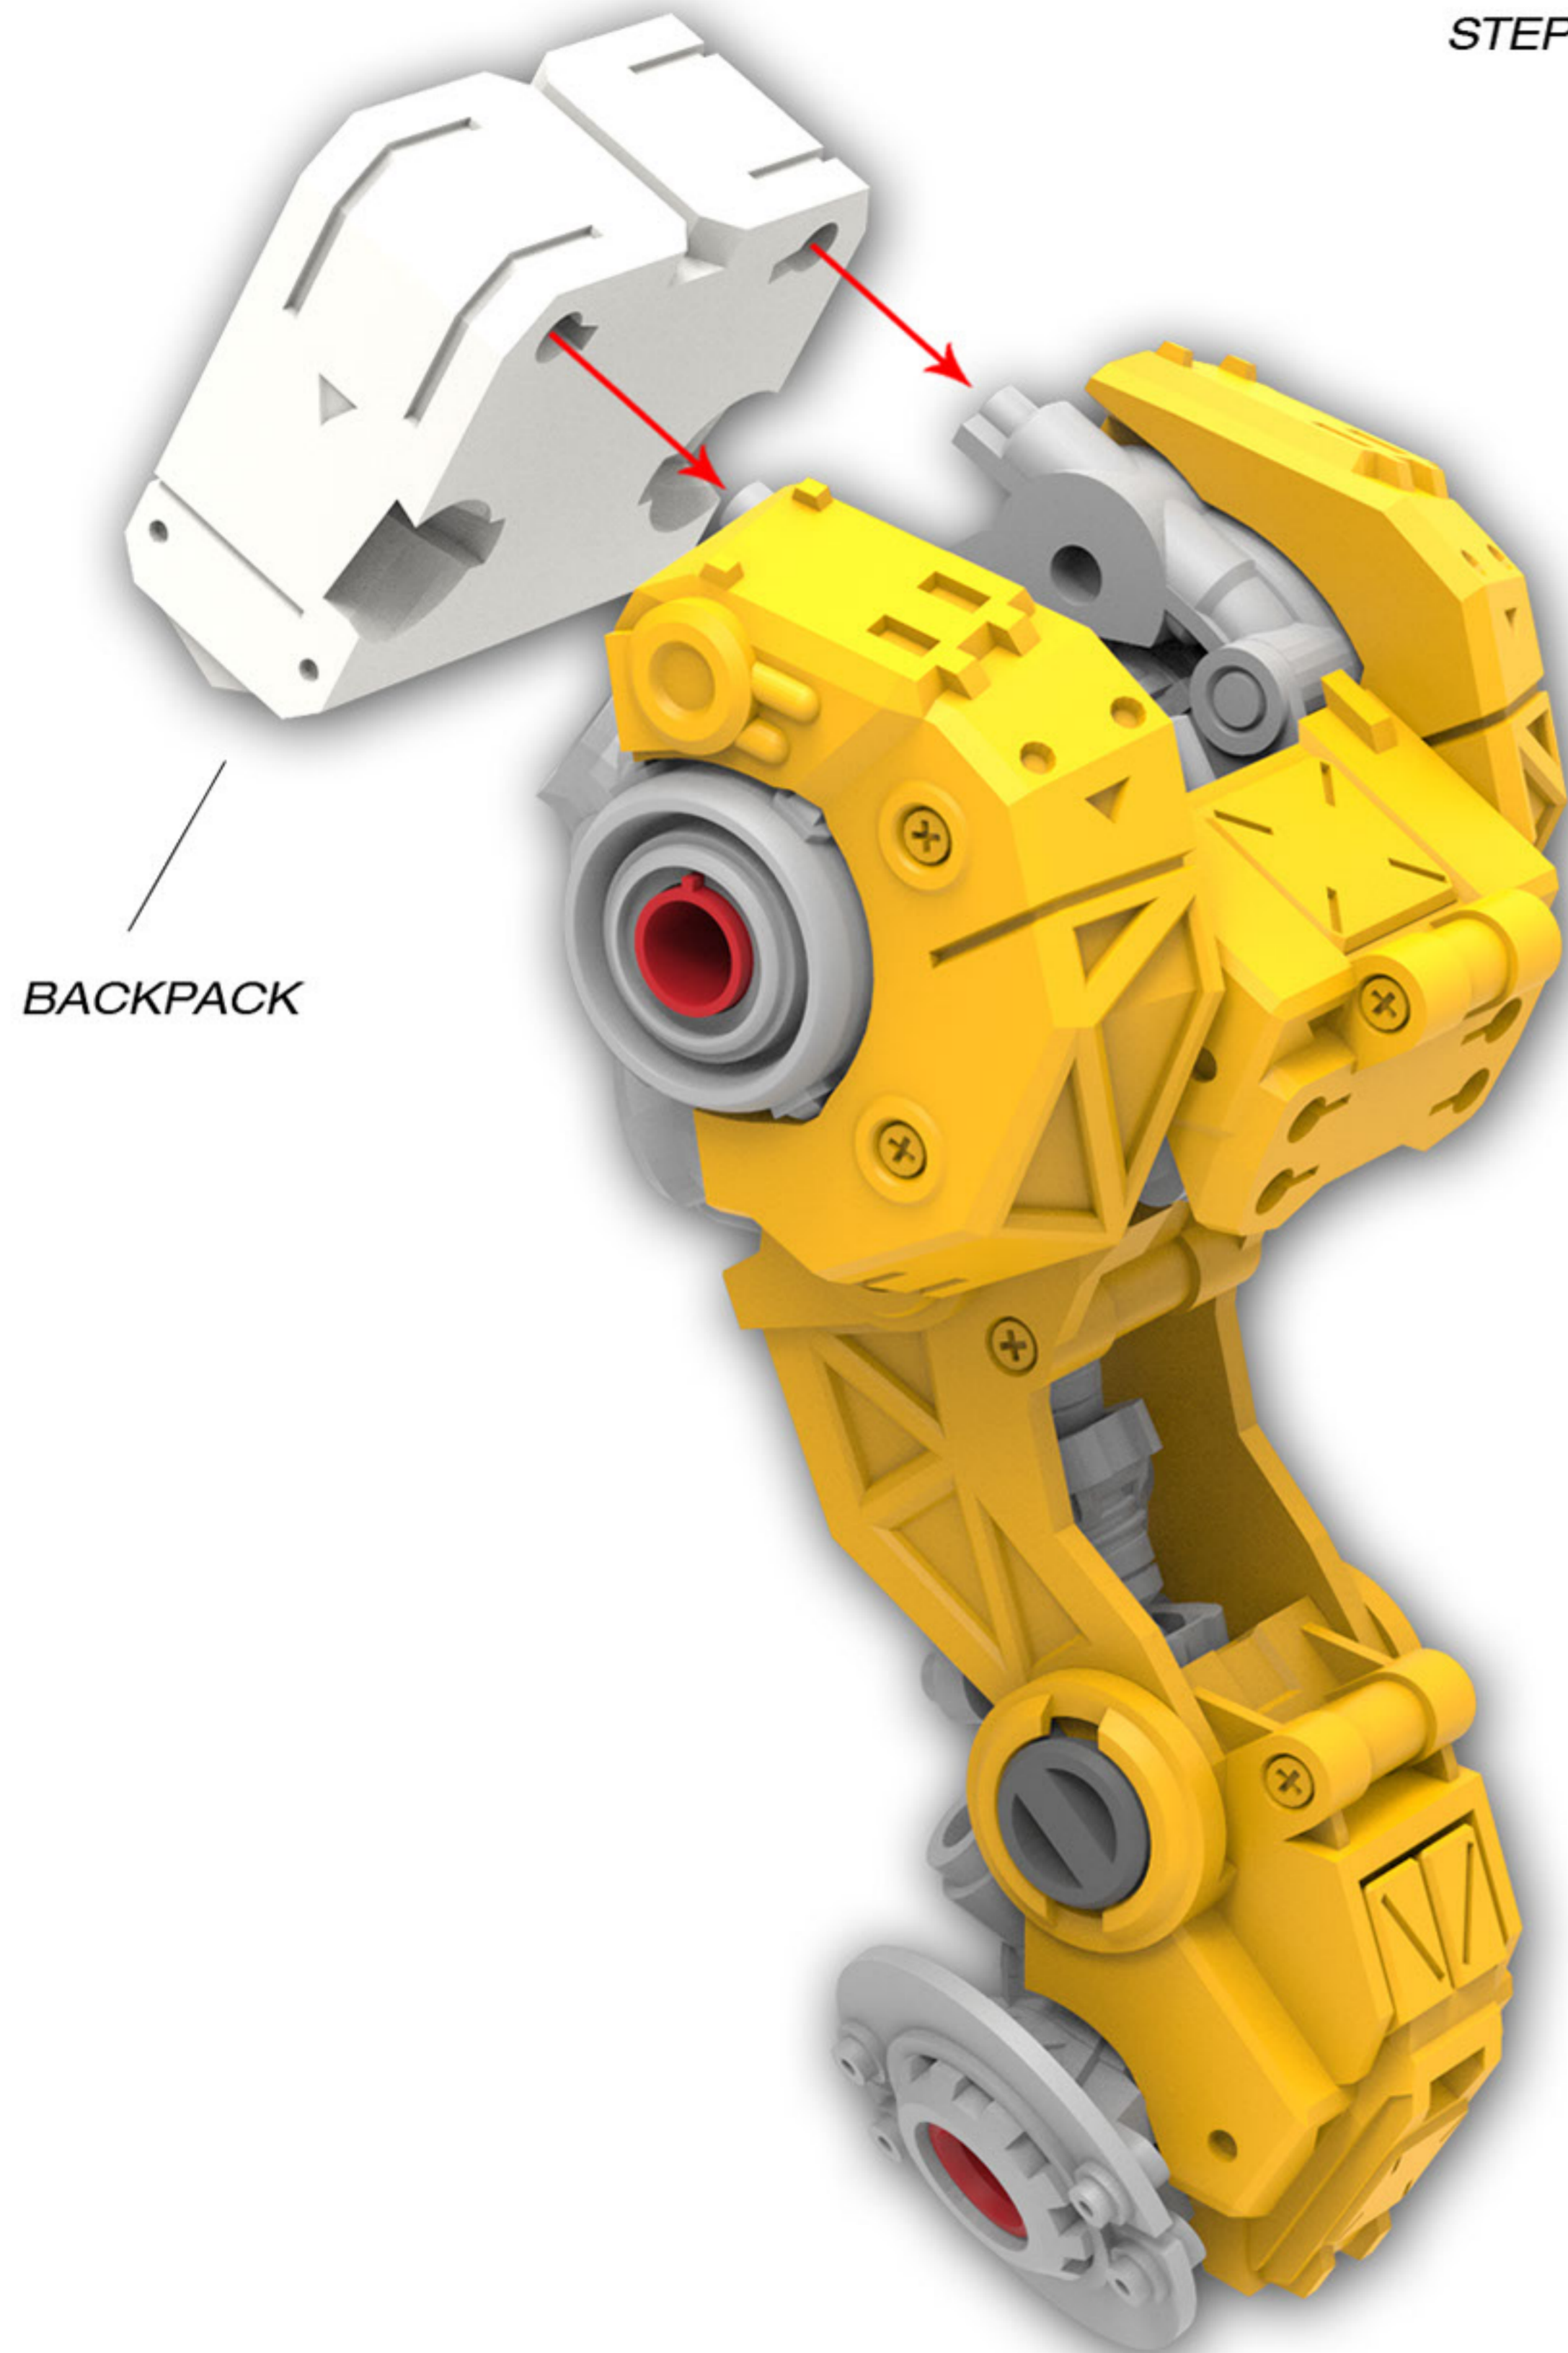

STEP 06

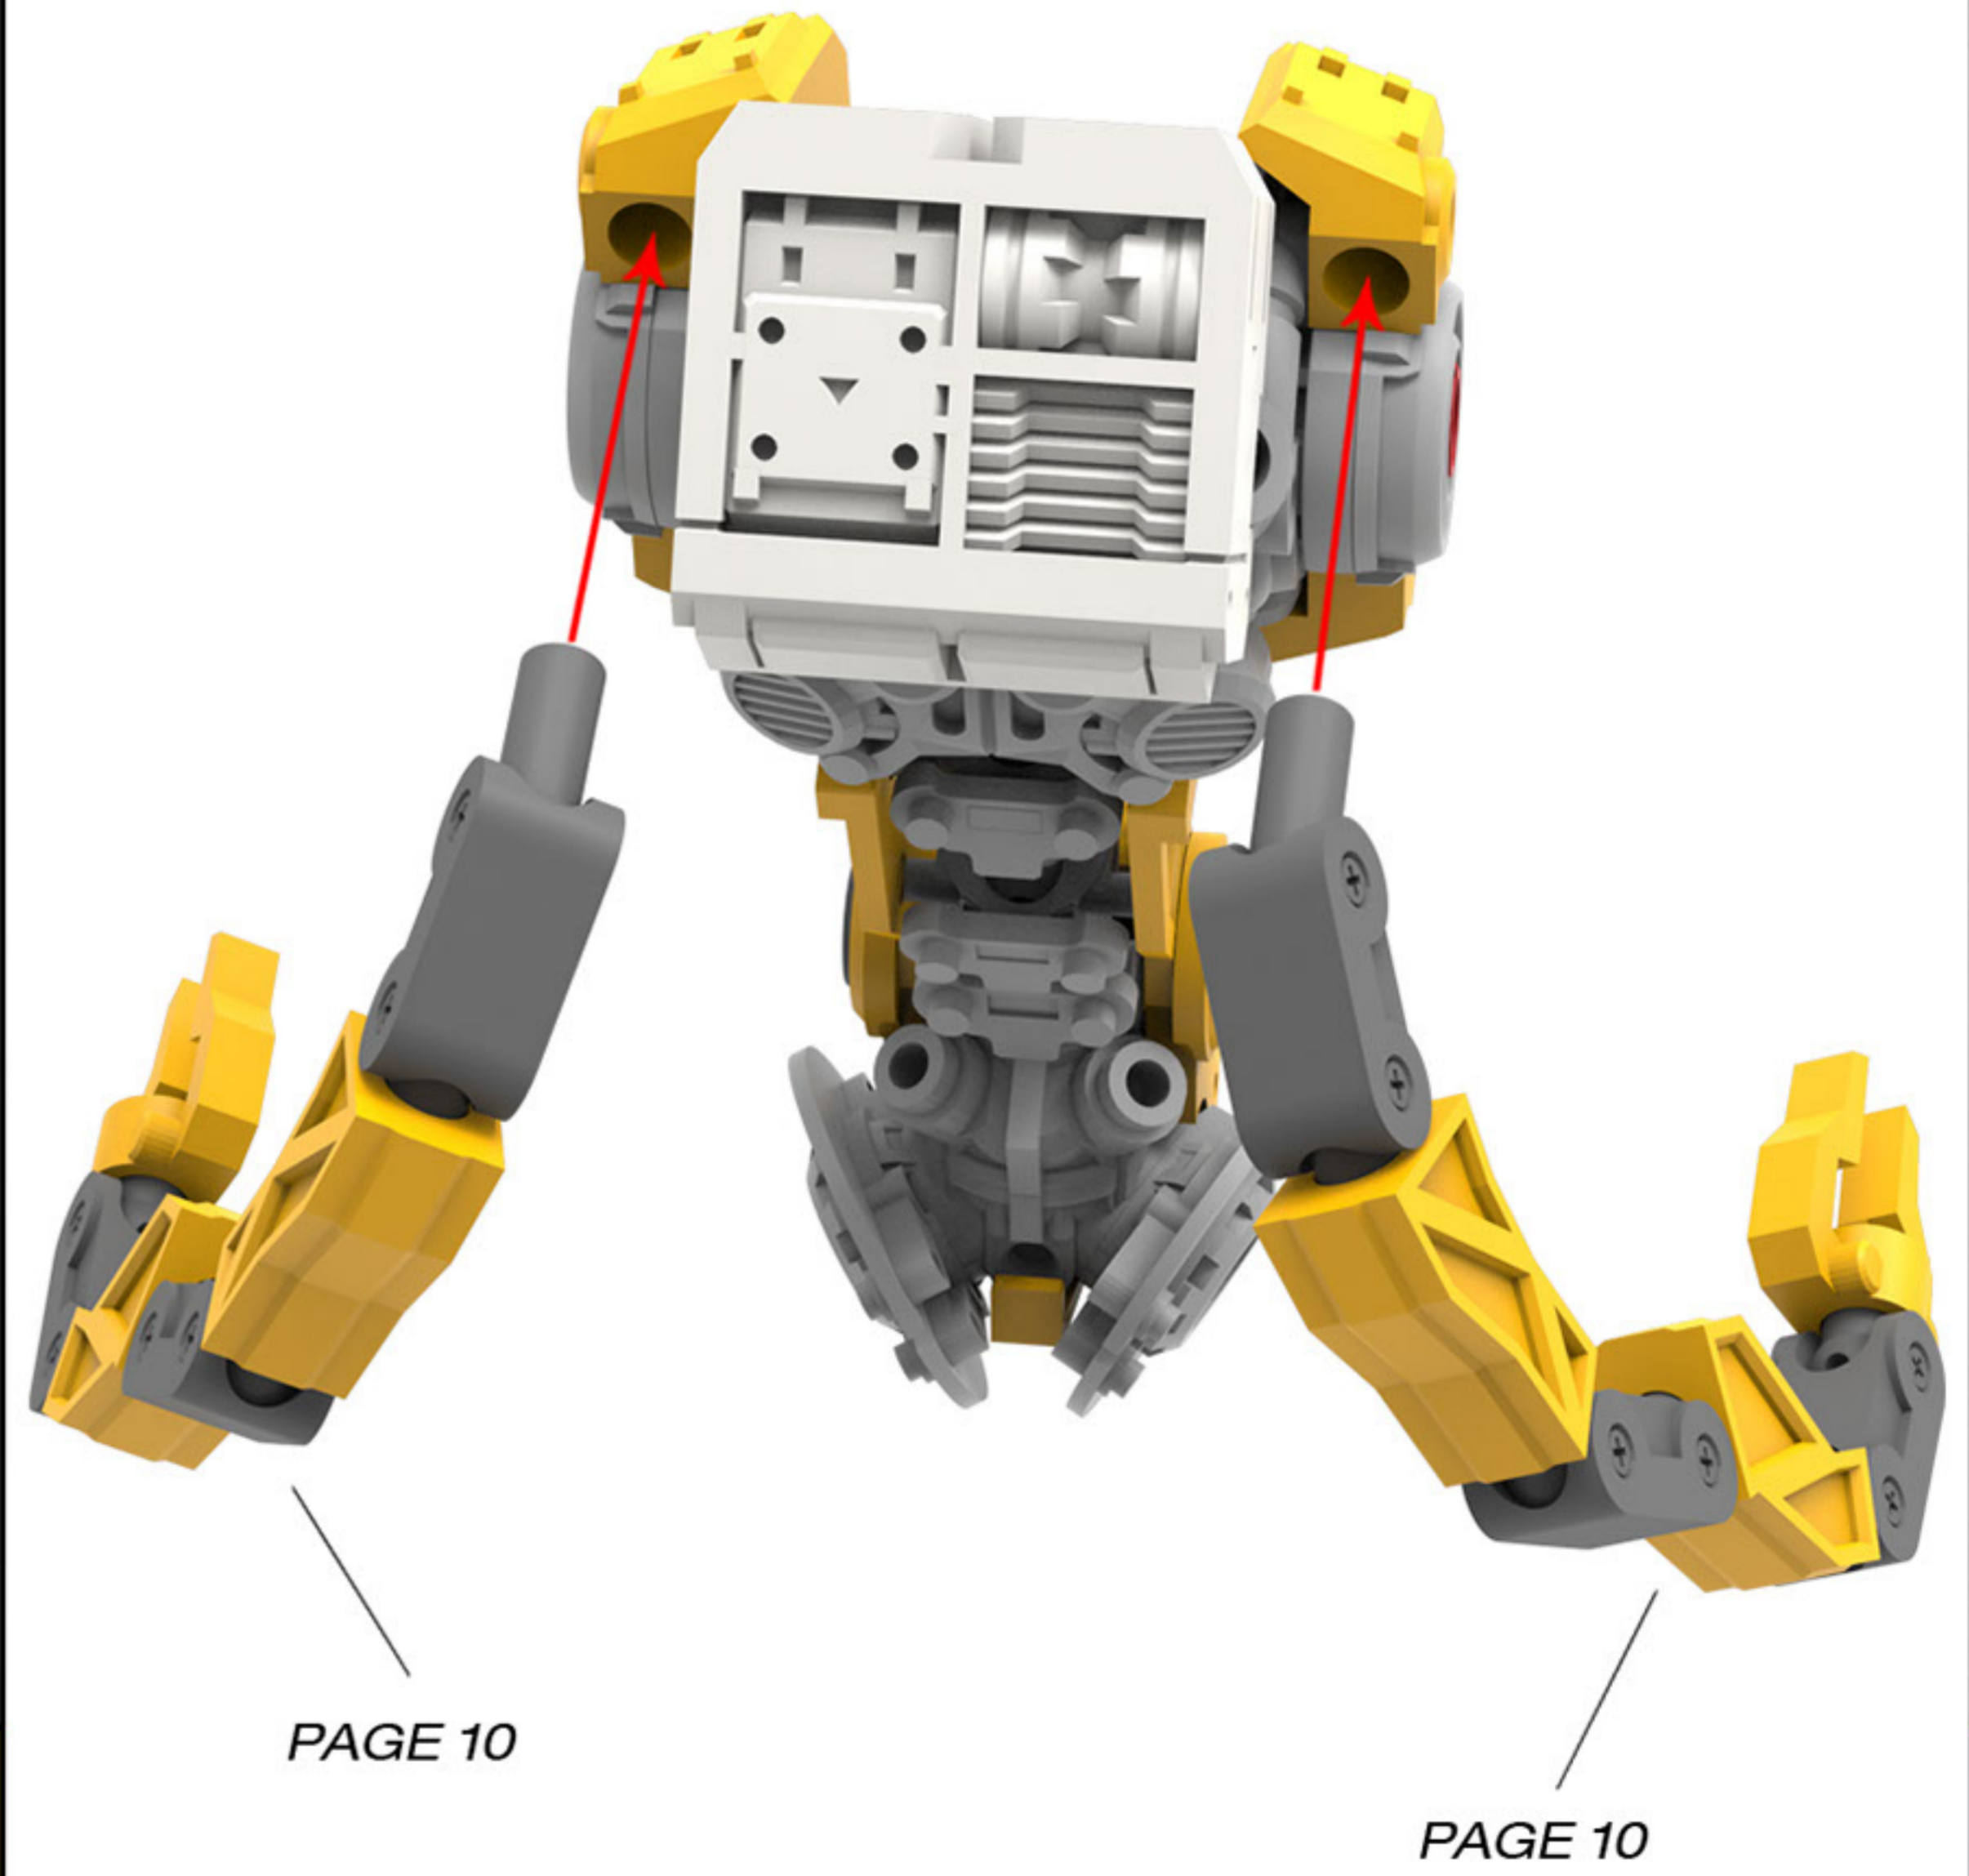

FINAL ASSEMBLY

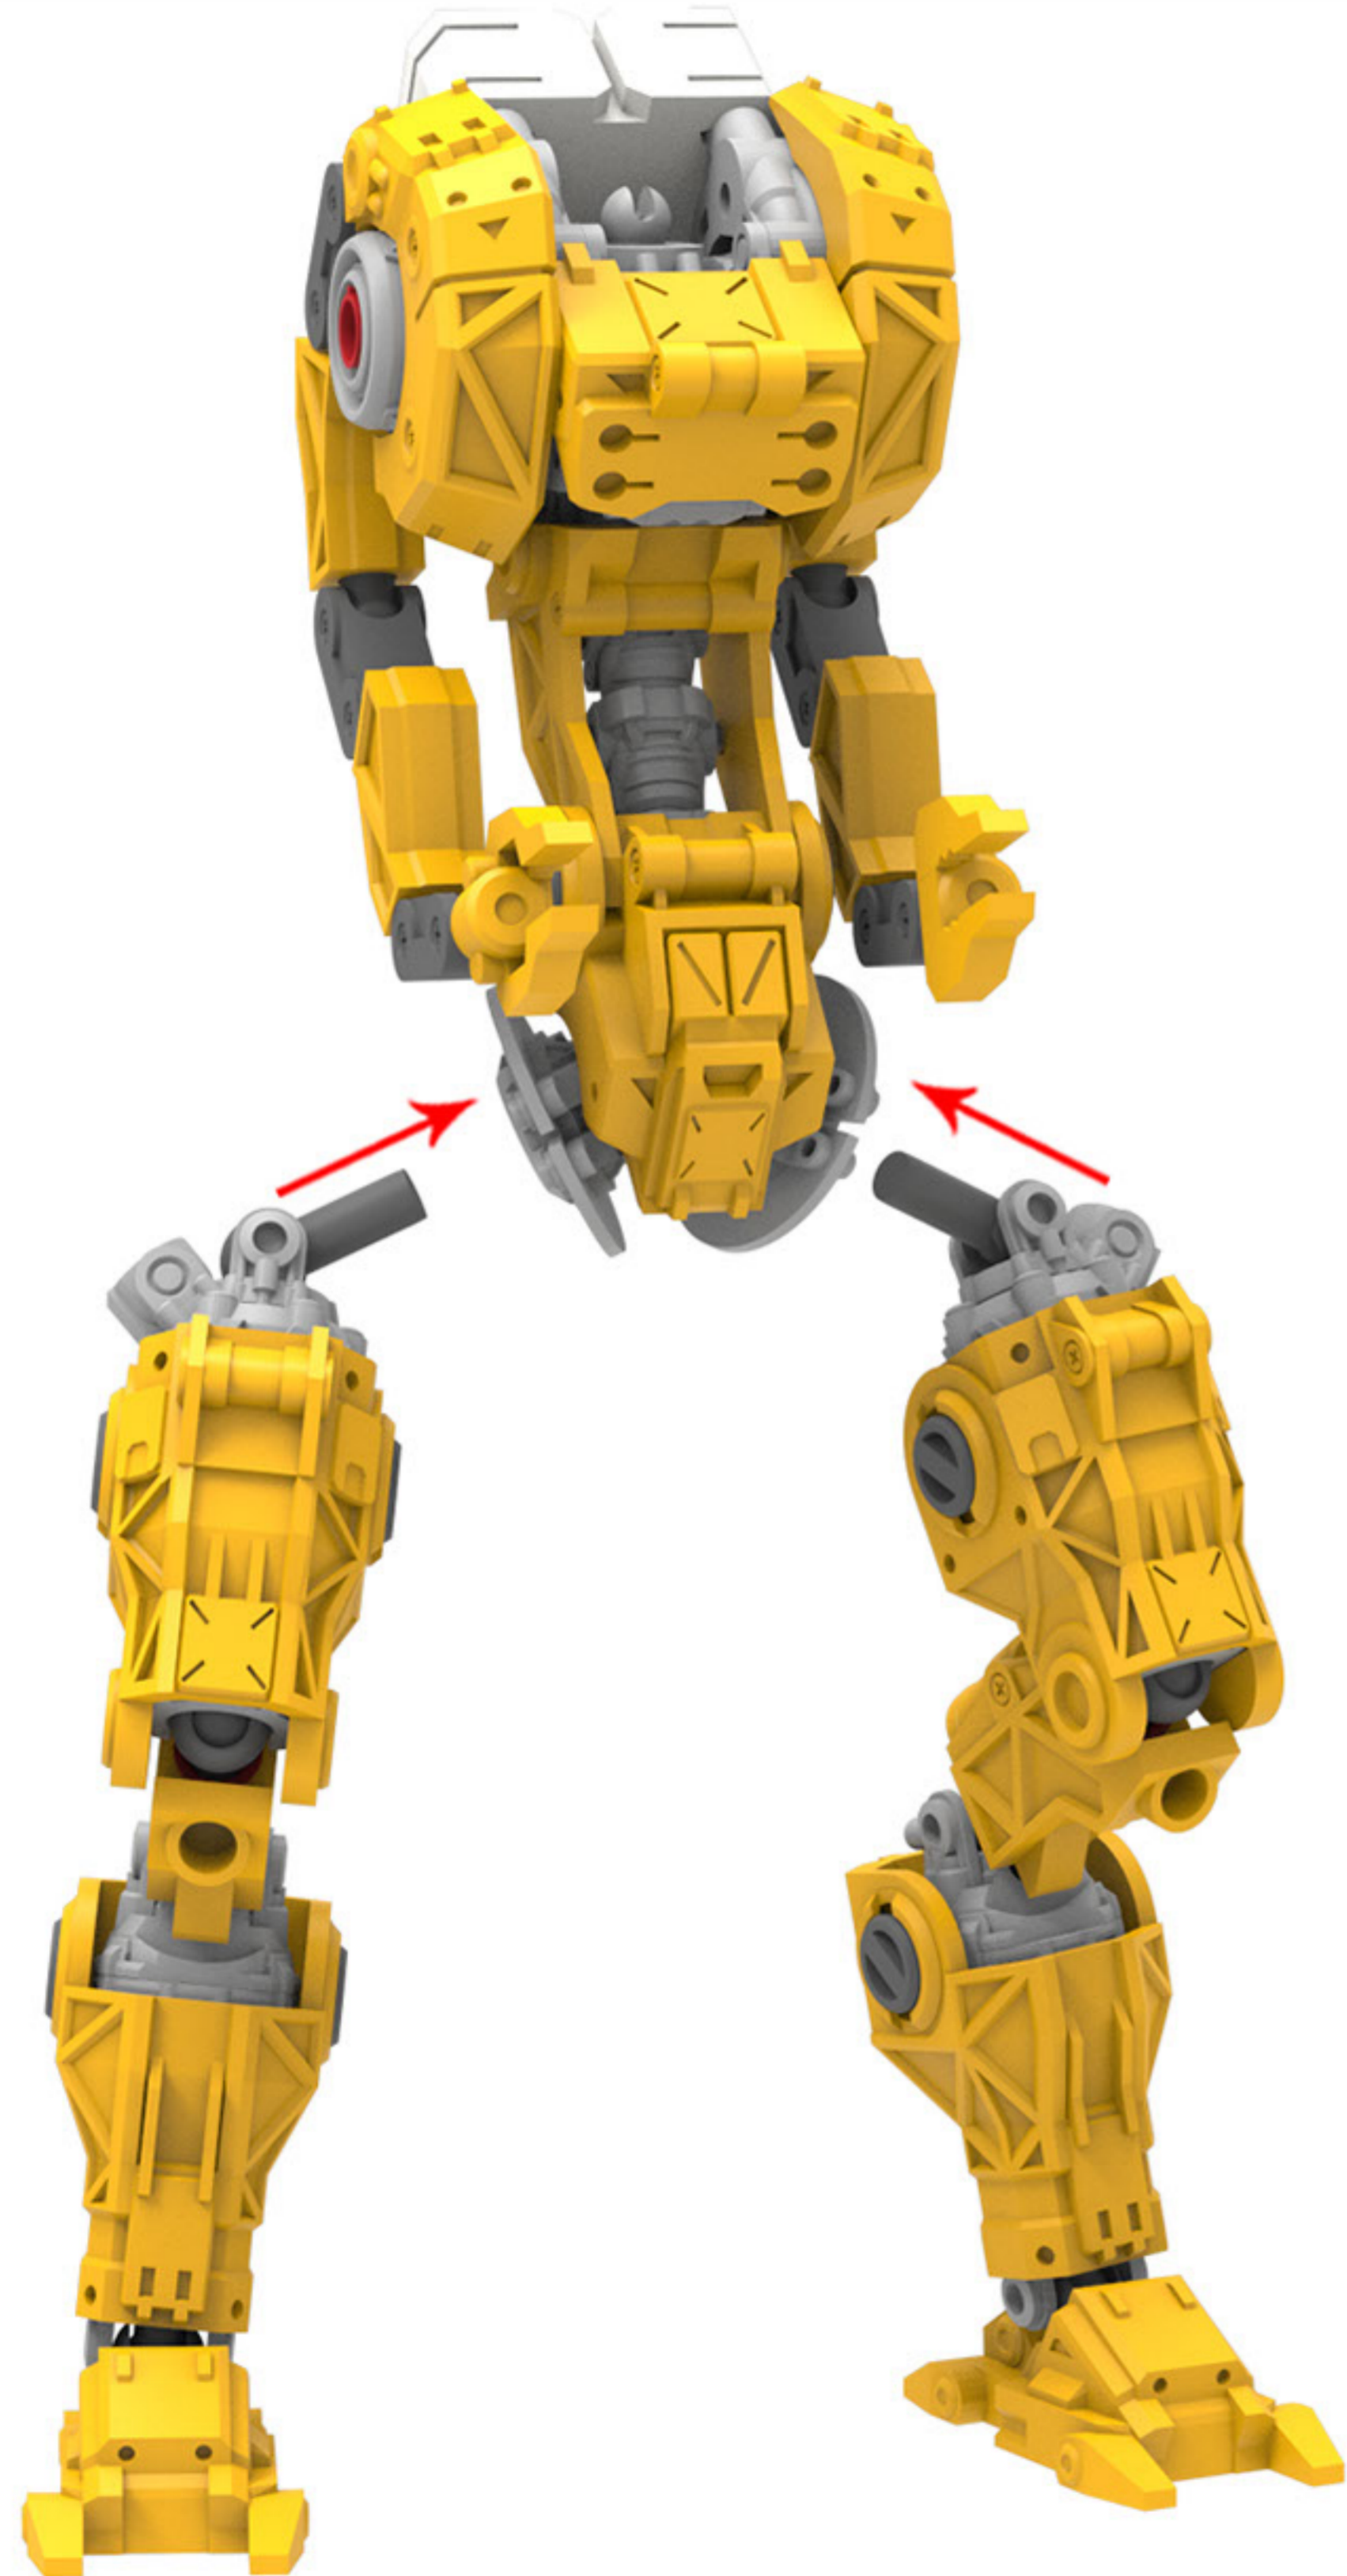


EXTRAS

TO ENABLE THE LIGHT UP FEATURE LED LIGHT
CAN BE INSTALLED IN THE HEAD


1 x 3mm LED lights, 2 x LR41 Batteries and Superglue



Bend the LED wire

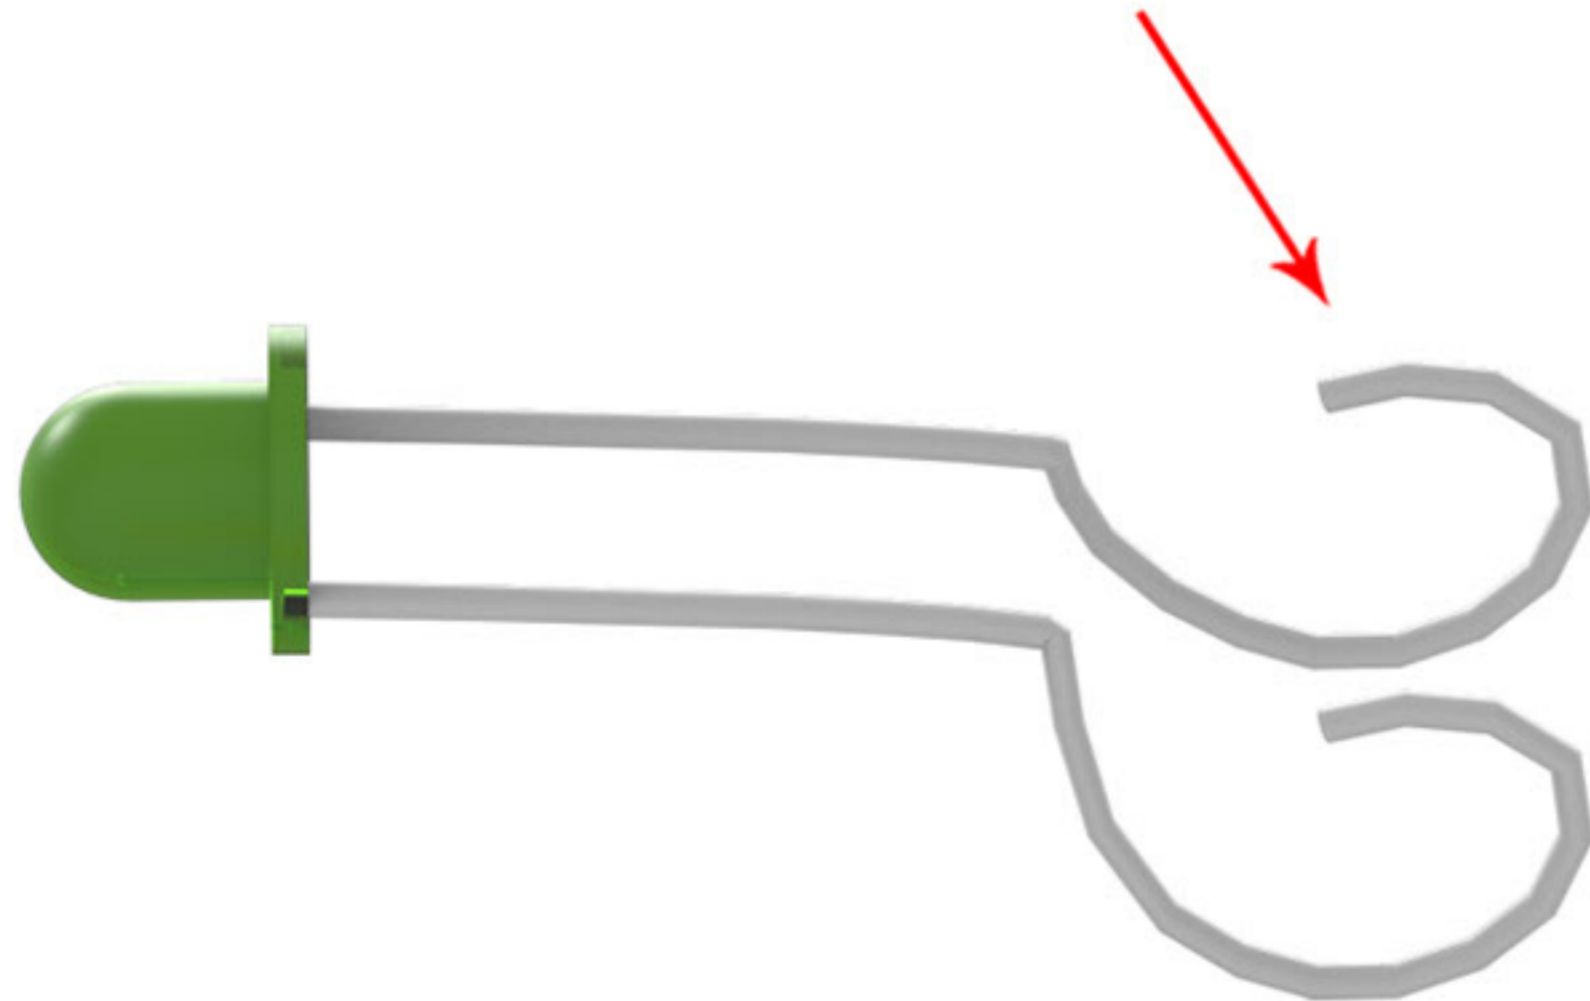


Place Superglue in head and
Insert LED into Head

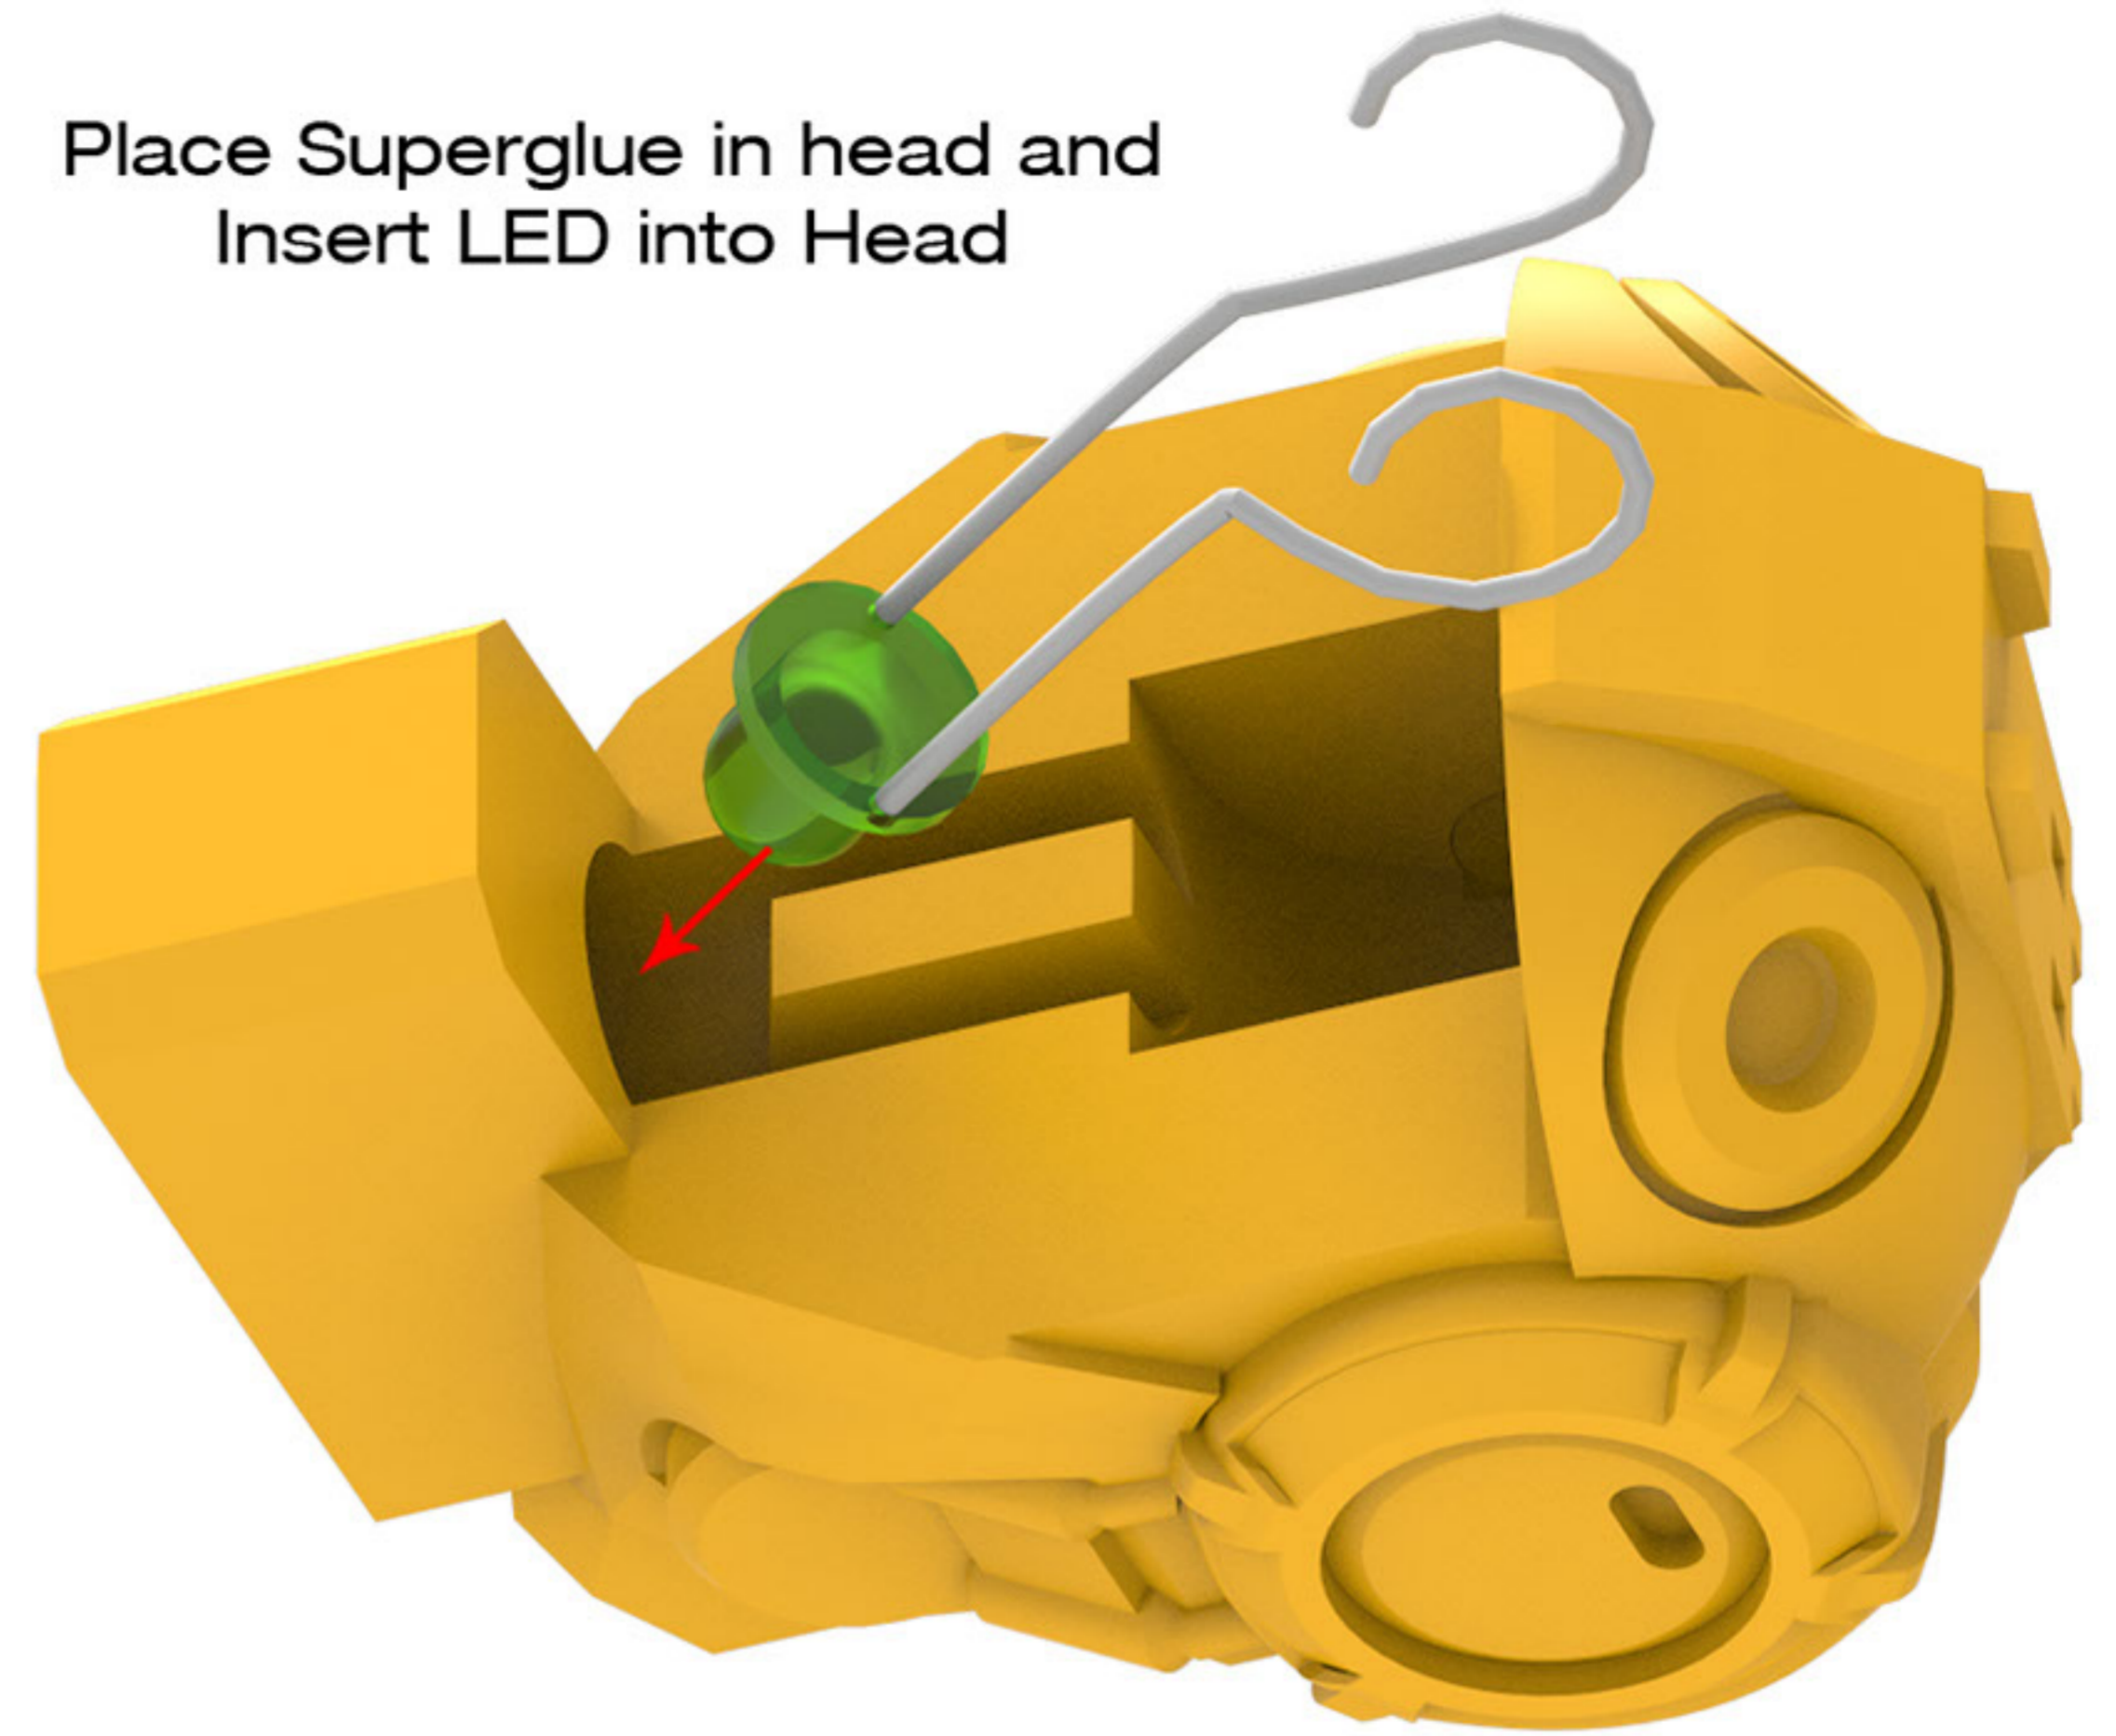

Insert 2 x LR41 Batteries and place cover



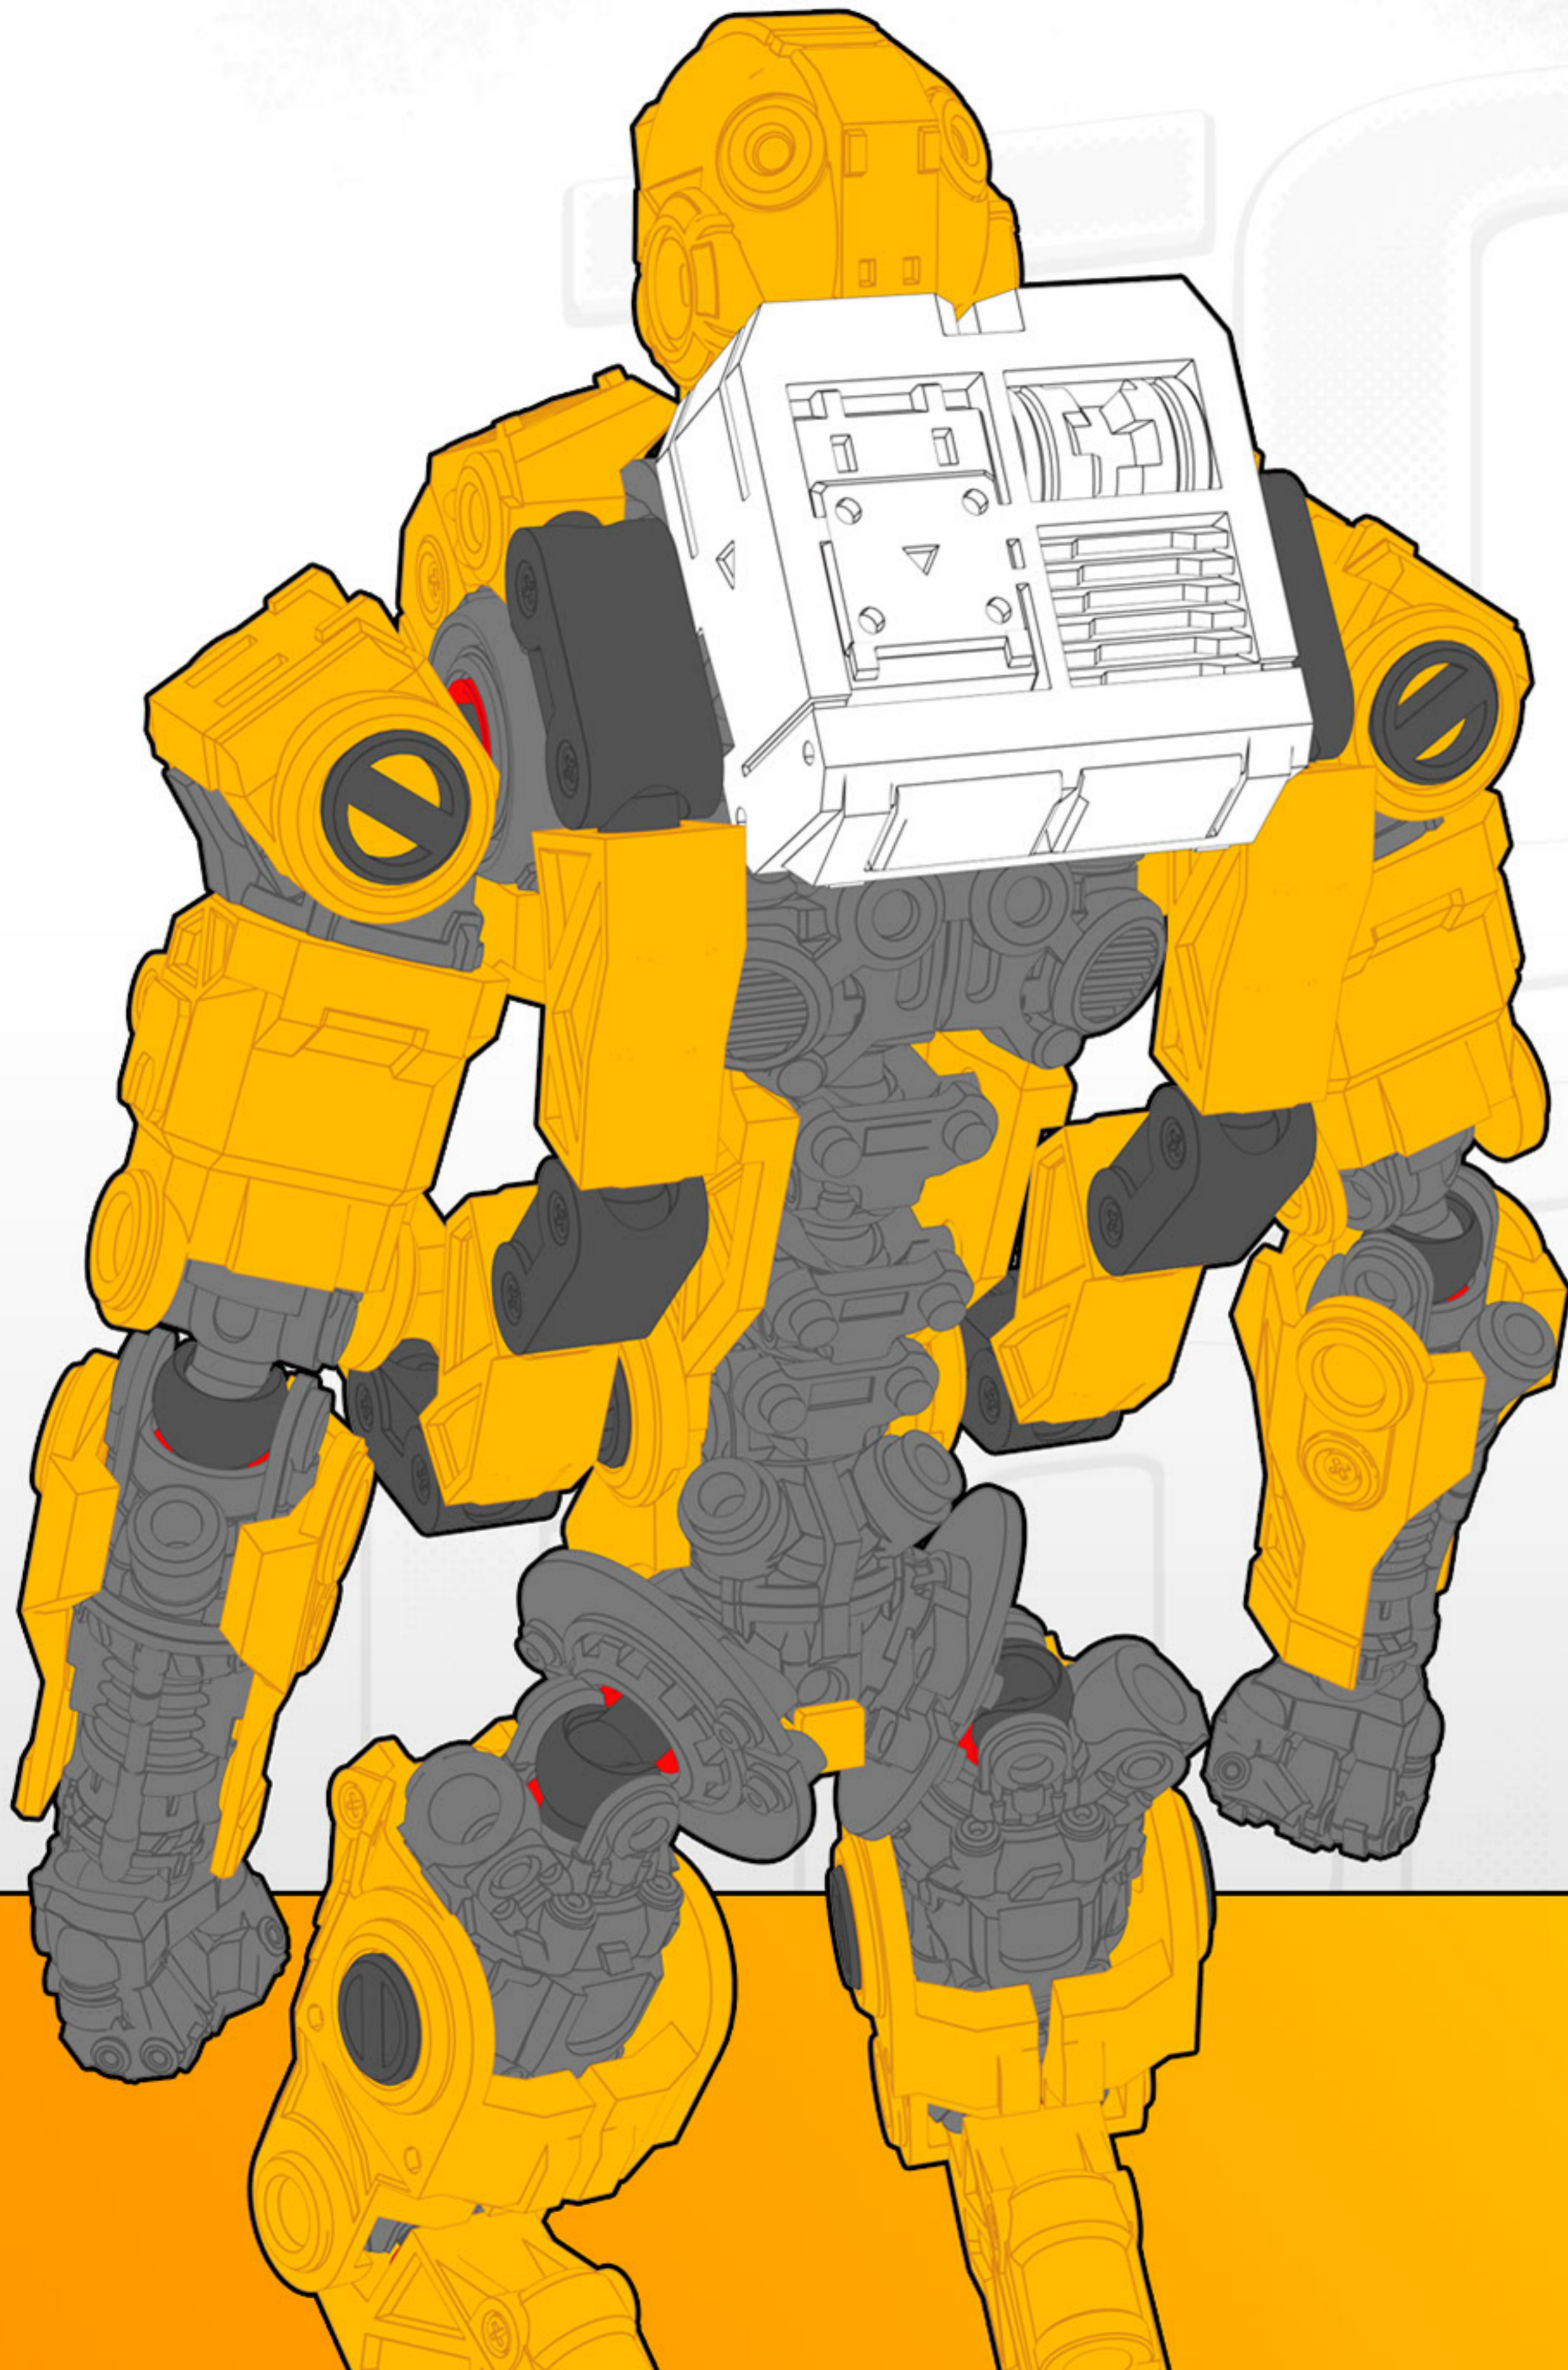

THANK YOU FOR YOUR PURCHASE OF
CONSTRUCTION DRONE ARMOR SET

FOR FURTHER INFORMATION PLEASE
CONTACT
TOYFORGE.IN@GMAIL.COM

DISCLAIMER

PLEASE ENSURE THAT YOU READ AND ADHERE TO THE TERMS
OF THE END USER LICENSE AGREEMENT THAT GOVERN ANY
MATERIAL DOWNLOADED OR PURCHASED FROM
WWW.TOYFORGE.IN

THIS DOCUMENT IS NOT TO BE SOLD OR DIGITALLY
DISTRIBUTED IN ANY MANNER.

ALL THE IMAGES AND MATERIAL USED IN THIS GUIDE ARE
COPYRIGHT © TOY FORGE WWW.TOYFORGE.IN